





Paramont Series

Saving a Favorite in The Paramont Application

1. Arrange your Cameras in the order you'd like. You can drag and drop to move cameras or select a camera from the list. Once in the order you prefer select the three dots in the lower right-hand corner. Then select "Add Favorites."

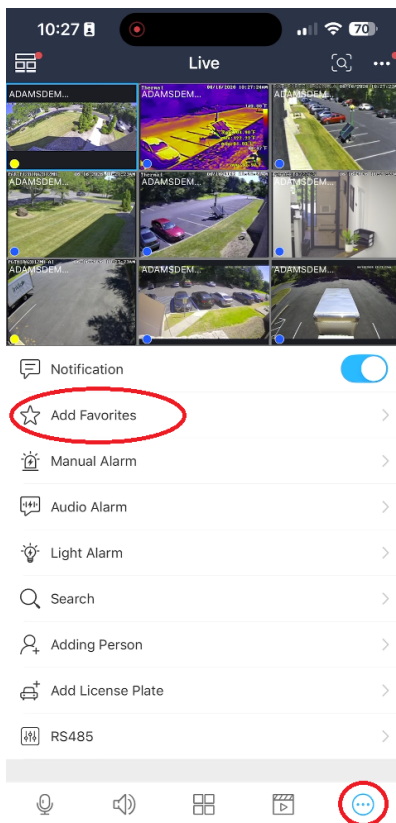

2. Once you select “add favorites” you can name your group by holding on the screen on the current name of your group. Then Simply click the plus sign to save your favorite. Now anytime you’d like to play that favorite return to the screen and select the play icon.

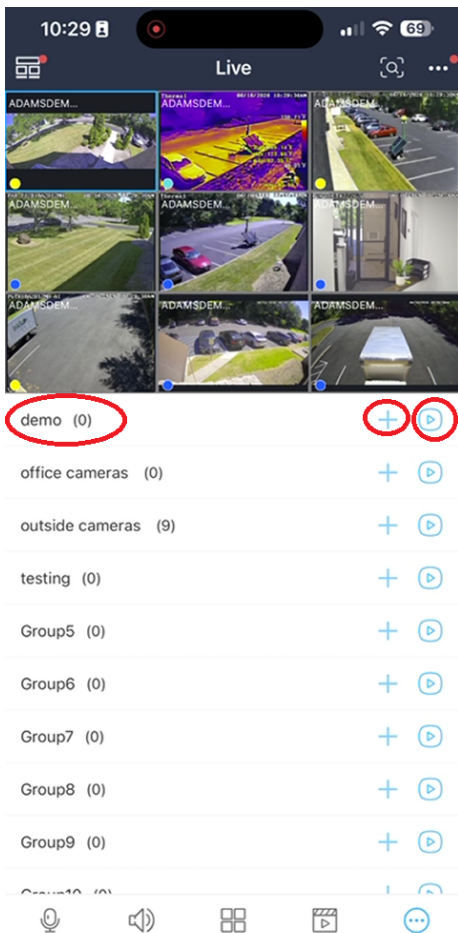

3. You can also select to have this favorite launch as soon as you open the application. The way you accomplish this is from the main menu of the application select “local” then select “Launch Setting” then select “Play Favorite Group” and select the favorite you would like to launch when you open the app.

