

Audio Setup for INVID-2WAYAUDIO



Audio Setup for INVID-2WAYAUDIO

- Paramont camera audio input/output setup:
 - 1. Log in to the camera via web browser.
 - 2. Click the Microphone icon (Start two-way audio) at the bottom of the screen to enable audio input.
 - 3. Click the Speaker icon (Enable Audio) at the bottom of the screen to enable audio output.

	_	→ 🖒 Search	_	× ם – אַליא לו −2
File Edit View Favorites Tools Help				
InVid				· · · · · · · · · · · · · · · · · · ·
Innovative Video Technology	Live	Config	Search	Logout
		2 3	and the second	
			ō 🝙 Q	Q 🗵 🌻

If your camera does not have a built-in mic or speaker, no further action is required, you may skip step 4.

4. Click 'Config' at the top of the screen. Under the 'Image' Tab on the menu on the left, click 'Video/Audio', then select the audio tab. Set 'Audio Type' to 'LIN'. Click save.



n/id>		
novative Video Technology	Live Config Search Lo	gout
🏶 System	Config Home + Image + Video/Audio	
Basic Information Date and Time Local Config	Vide: Audio	_
Storage	☑ Enable	
	Audio Encoding G711A 🗸	
Display Settings (Video/Audio)	Audio Type MIC	
OSD Video Mask ROI Config	MC In Volume 100	
Zoom/Focus	Audio Out Volume 100	
Alarm	Save	

- Elevate camera audio input/output setup:
 - 1. Log in to the camera via web browser.
 - 2. Click the Headphone icon (Listen) at the bottom of the screen to enable audio input.
 - 3. Click the Microphone icon (Talk) at the bottom of the screen to enable audio output.

_						– 🗆 ×
(/preview.html					🔎 🕆 🛧 🔍
🧔 192.168.1.10	< 📑					
File Edit View Favorites Tools H	felp					
InVid⋗	Preview	Playback	Alarm	Set	f	admin 🚭 Logout
					06 /07 /202	1 02:30:04PM
CAM 1						
10 L2 L3 E3						192.168.1.10 - 1 - 4420 kbps - M

If your camera does not have a built-in mic or speaker, no further action is required, you may skip step 4.

4. Click 'Set' at the top of the screen. Click 'Video audio' tab in the menu on the left, the click the 'Volume Set'. Change Audio Input to 'LINE'. Click save.



← → 100 http://192.168.1.10/Config.1	html		✓ C Search	- □ × ₽• ↑★✿♡
Cila Edit Mean Examine Tools Hele				
InVide F	Preview Playback Alarm	Set	A admin	🗢 Logout
 LocalSet System Network Image Video audio Video Setting Volume Set ROI Snapshot Setting OSD Setting 	Channel Audio coding Audio input Volume input I Noise reduction Save Refresh	I-Network ▼ G711A ▼ LINE ▼ 50		^
 ₽ Event P Storage X Maintain 				Ŷ

- Vision camera audio input/output setup:
 - 1. Log in to the camera via web browser.
 - 2. Click the Speaker icon (Turn Audio on) at the bottom of the screen to enable audio input.
 - 3. Click the Microphone icon (Turn Audio on) at the bottom of the screen to enable audio output.



If your camera does not have a built-in mic or speaker, no further action is required, you may skip step 4.

4. Click 'Setup' at the top of the screen. Click the 'Video & Audio' tab in the menu on the left side of the screen, the choose the 'Audio' tab. Change 'Audio Input' to On. Uncheck the 'Channel 1' enable box, then check the 'Channel 2' enable box. Change 'Audio Output' to 'Line'. Click save



	III Playback 🗟 Photo
Common	Audio
Network Video & Audio Video Sambol V Audio ROI Media Sreem	Andia Input Image: Constraint of the
Image	dannel 2 Line ♥ ☑ Enable
Intelligent	Andig Dataset
Events	Andio Output
Storage	
Security	- Sure
System	

- Ultra camera audio input/output setup:
 - 1. Log in to camera via web browser.
 - 2. Click the 'Configuation' tab at the top of the screen.
 - 3. Open the 'Video/Audio' tab on the left side of the screen.

4. Under the 'Video' tab, with 'Stream Type' set to 'Main Stream (Normal)', change 'Video Type' to 'Video&Audio' and click save. The with 'Stream Type' set to 'Sub-stream', change 'Video Type' to 'Video&Audio' and click save.

If your camera does not have a built-in mic or speaker, no further action is required, you may skip step 5.

5. Under the 'Audio' tab, change 'Audio Input' to 'LineIn'. Click save.

	Live View Pla	yback Picture	Configuration				
💭 Local	Video Audio RO	Display Info. on Stream					
System	4 Stream Type	Main Stream(Normal)	~				
Network	Video Type	Video&Audio	~				
Video/Audio 3	Resolution	2688 1520	~				
Image	Bitrate Type	Variable	\sim	InVid>	Live View Pla	yback Picture	Configuration
Event	Video Quality	Medium	~	ULINA		74	
Storage	Frame Rate	30	✓ fps		Video Audio Ro	DI Display Info. on Stream	
	Max. Bitrate	6144	Kbps	T LOOM			
	Video Encoding	H.264	~	E System	Audio Encoding	G 711ulaw	~
	H.264+	OFF	~	Network	5 Audio Input	Lineln	×
	Profile	Main Profile	~		, and a part		
	I Frame Interval	50		50 11000110010	Input Volume		50
	SVC	OFF	~	🖬 Image	Environmental Noise	Filter ON	~
	Smoothing		50 [Clear<->Smooth]	Event			
	E Save			Storage	🗎 Save		

6. Click the 'Live View' tab at the top of the screen. Click the Speaker icon (Mute) to enable audio input.



	Live View	Playback	Picture Configur	ation								*
	01_01_19	70 Thu O	0.30.20			19.2			No. Con			
_	01-01-13	10 1110 0	0.33.30									
							Camer	a 01				
											1	2
· 10 · 0 ·	•								ʻti, 🔳	IO N		6 1

• For push-to-talk the black 'boot' on the INVID-2WAYAUDIO needs to be on 'E1'. For constant audio, move the 'boot' to 'E2'

