
Analog High Definition 4 IN 1 IR Camera

● ITEM №: PAR-ALLBIRA2812

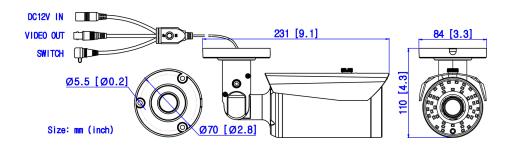

Caution for Installation

- 1. In order to prevent electronic shock, don't loosen any screws or covers.
- 2. Do not directly touch the front glass. If necessary, use a soft cloth moistened with alcohol to wipe off the dust.
- 3. Avoid places where there are frequent vibrations or shocks.
- 4. Don't operate the camera beyond its temperature, power source ratings.
- 5. When any abnormalities happen, make sure to unplug the camera and contact your local dealer.

Packing

	-	
1.	Camera	X1
2.	User Manual	X1
3.	Screw	Х3
4.	Plastic-Conical-Anchor	Х3
5.	Hexagonal Wrench	X1
6.	Mounting drawing paper	X1
7.	DC Connector	X1

Specification

ITEM	PAR-ALLBIRA2812		
IP Rating	IP66		
Type	Removable IR Cut Filter		
Signal System	NTSC/PAL		
Pick Up Device	1/2.9" 2.2 Mega Pixels CMOS		
Picture Elements	1920(H)X1080(V)		
Min Illumination	0Lux(42 Pieces IR LED ON)		
S/N Ratio	≥52dB		
Lens	2.8-12mm Motorized Vari-focal Fixed Iris Lens		
3D/2D	ON		
SENS-UP	ON		
IR SMART	ON		
White Balance	ATW		
Back Light Compensation	OFF		
DWDR	ON/OFF		
OSD	YES		
Video Out-put	HD-TVI/HD-AHD/HD-CVI/CVBS		
Power Supply	DC12V ±10%		
Current Consumption	630mA(MAX)		
IR Effect Distance	35-40M (114.8~131.2ft) (indoor)		
Dimension	231×84X110mm (9.1"×3.3" ×4.3")		
Weight	720g		
Storage Temperature	-30∼+60°C (-22∼+140°F)		
Operating Temperature	-30~+40°C (-22~+104°F)		

Remark: Non-regulative adaptor may cause camera damaged.

 
• Use the OSD joystick to switch the camera to:



OSD Cable

- 1. "L" for left direction
- 2. "R" for right direction
- 3. "UP" for upwards direction
- 4. "DOWN" for downwards direction
- 5. Press the button for OSD menu

video signal output switches



• TVI DVR Coaxial Signal Control and Auto Focus Lens

1) Menu

As shown in Picture:

- A. shows the up, down, left and right direction of the menu;
- B. shows the enter/confirm button of the menu
- 2) Lens Auto Focus

shows lens focus (Near/Far) of the Auto focus lens, and (4) shows Zoom(wide/tele) of the AUTO focus lens. When Keep pressing "Focus" or "Zoom" buttons, the lens will keep moving, only after "Focus" or "Zoom" button without pressing, the lens will focus automatically.



MAIN MENU						
MAIN MENU						
1. LENS	MANUAL	1	LENS	MANUAL/DC#		
2. EXPOSURE	- J	2	EXPOSURE	#		
3. BACKLIGHT	0FF	3	BACKLIGHT	OFF/BLC#/HSBLC#		
		4	WHITE BAL	ATW/AWB/AWC-SET/INDOOR/OUTDOOR/		
4.WHITE BAL	ATW			MANUAL#		
5. DAY&NIGHT	EXT₊■	5	DAY&NIGHT	AUTO#/COLOR/B/W#/EXT#		
6. NR	4	6	NR	#		
7. SPECIAL	a l	7	SPECIAL	#		
8. ADJUST	a l	8	ADJUST	#		
9. AF		9	AF	#		
10. EXIT	SAVE&END -	10	EXIT	SAVE&END#/RESET#/NOT SAVE#		

LENS				
DC LENS	MODE			
1. MODE	INDOOR	1	MODE	INDOOR/OUTDOOR#
2. IRIS SPEED	11111 11111111111 8	2 3	IRIS SPEED RETURN	0-15 RET#
3. RETURN	RET₊■	3	KETOKK	INC 1#
EXPOSURE				
EXPOSU		1	SHUTTER	AUTO/ 1/30 / 1/60 / FLK / 1/240 / 1/480 /
1. SHUTTER	AUT0			1/1000 / 1/2000 / 1/5000 / 1/10000 / 1/50000 /
2. AGC	1111/1111111111111117	2	400	X2/X4/X6/X8/X10/X15/X20/X25/X30
3. SENS-UP	AUTO	2	AGC SENS-UP	0-15 AUTO#
4. BRIGHTNESS		4	BRIGHTNESS	1-100
5. D-WDR	OFF OFF	5	D-WDR	OFF/AUTO/ON#
6. DEFOG 7. RETURNL	RET ₄	6 7	DEFOG RETURN	OFF/AUTO#
7. KETOKNE	KLI —	,	KETUKN	RET#
BACKLIGHT				
BLO	n			
			. = . = .	AURRI EU OWUWOU
1. LEVEL 2. AREA	MIDDLE	1 2	LEVEL AREA	MIDDLE/LOW/HIGH POSITION/SIZE/RET AGAIN
3. DEFAULT	<u>.</u>	3	DEFAULT	#
4. RETURN	 RET ₊ ■	4	RETURN	RET#
DAY&NIGHT				
B/V	N			
1. BURST	0FF	1	BURST	OFF/ON
2. IR SMART	0FF	2 3	IR SMART RETURN	OFF/ON# RET#
3. RETURN	RET - ■		NETOWN	IXL1#
NR				
NF) I			
1. 2DNR	MIDDLE	1	2DNR	HIGH/MIDDLE/LOW/OFF
2. 3DNR	MIDDLE	2	3DNR	HIGH/MIDDLE/LOW/OFF
3. RETURN	RET ₊■	3	RETURN	RET#
SPECIAL				
SPECI	AL	1	CAM TITLE	OFF/ON#
1. CAM TITLE	0N ₊ 4	2	D-EFFECT	FREEZE/MIRROR/NEG.IMAGE/RETURN
2. D-EFFECT	4	3	MOTION	OFF/ON#
3. MOTION	0FF	4	PRIVACY	OFF/ON#
4. PRIVACY	0FF	5	LANGUAGE	ENG#/CHN1#/CHN2#/GER#/FRA#/ITA#/SPA#/
5. LANGUAGE	ENG⊷			POL#/RUS#/POR#/NED#/TUR#/KOR#/JPN#/ HEB#/ARB#
6. DEFECT	4	6	DEFECT	#
7. RS485	ell DET •	7	RS485	#
8. RETURN	RET₄■	8	RETUTN	RET#
ADJUST				
ADJU	ST			
1. SHARPNESS	AUTO ₄ ■	1	SHARPNESS	OFF/AUTO#
2. MONITOR	LCD - ■	2	MONITOR	LCD#/CRT#
3. LSC	ON		LSC VIDEO OUT	OFF/ON NISC/PAL
4. VIDEO OUT	PAL		RETURN	RET#
5. RETURN	RET ₄			
٨٦				
AF				
AF MODE		1	AF MODE	SEMI/AUTO/MANUAL
1. AF MODE 2. ONE SHOT AF	SEMI •	2	ONE SHOT AF	#
3. TDN AF	ON	3	TDNAF	OFF/ON
		4	LENS INIT	#

RET#

RET ←

5. RETURN