


## Step 1: Setting up a GMAIL account.


1. Go to My Account setting page, click on the square and click my account.

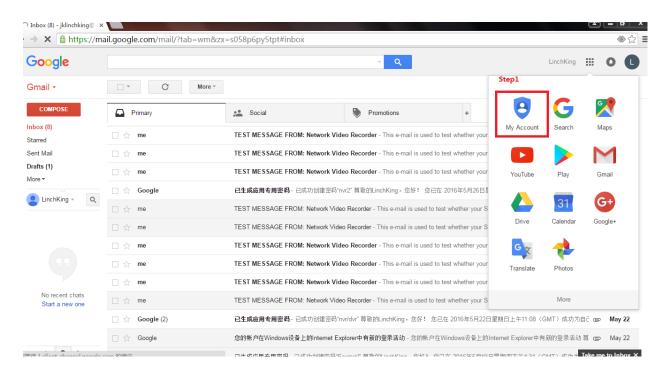


2. Click Signing in to Google.





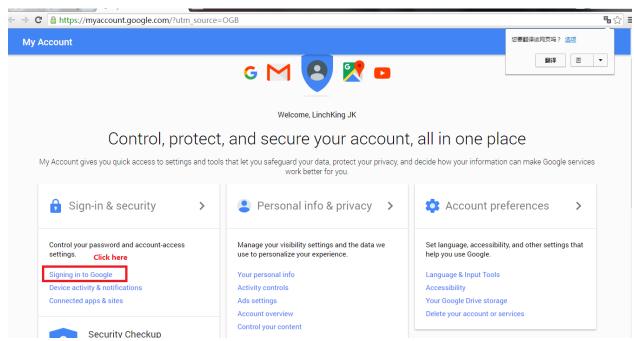

3. Click Allow less secure apps on.

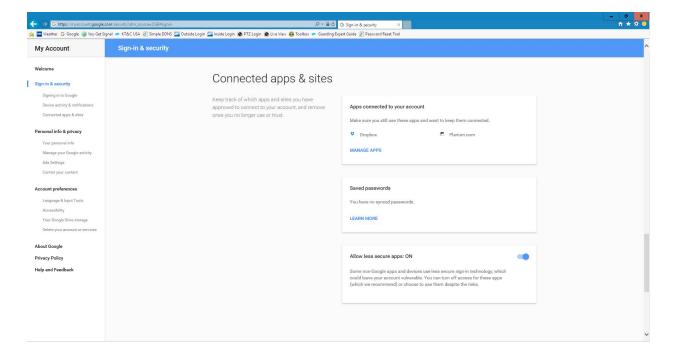





## If you are logging in through the web interface.


Step 2: Set Up Email Account in DVR/NVR.

Go to Configuration/Network/Advanced Settings/Email

Follow the picture below, just change the **User Name** to yours and the **Sender's Address** to yours and all other info in the fields as shown. User name and Senders address must be the same. The Receivers email addresses can be anything you want.





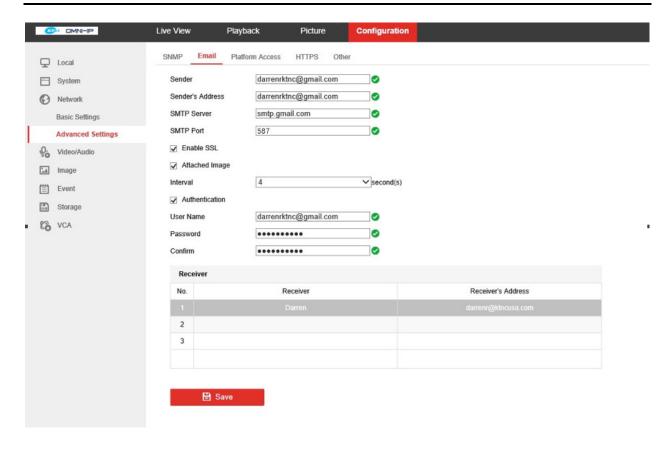


## Step 3: Linking Email to Motion

Go to Event/Basic Event/Motion.

Click enable motion for the camera that you want to use. Make sure that the grid is over the field of view were you want motion to be detected. Set the sensitivity at least to the middle setting. The setting all the way to the left is OFF. Next click the Settings button and choose Linkage Action and check off Email.





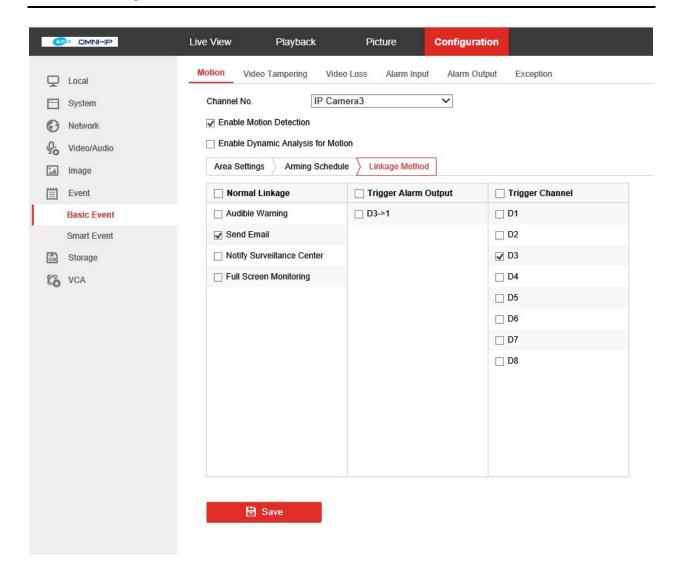

If you are logged into the DVR/NVR directly.


Step 2: Set Up Email Account in DVR/NVR.

Go to Menu/Configuration/Network/Email





Make sure the DVR/NVR is fully networked then follow the picture below, just change the **User Name** to yours and the **Senders Address** to yours and all other info in the fields as shown. The Receivers email addresses can be anything.

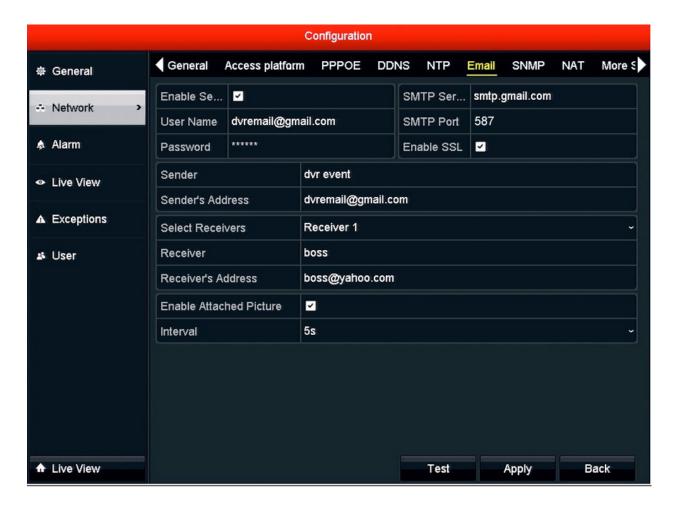


## Step 3: Enable Email Alerts.

Go to Menu/Camera/Motion then enable motion for the camera that you want to use. Make sure that the grid is over the field of view were you want motion to be






detected. Set the sensitivity at least to the middle setting. The setting all the way to the left is OFF.

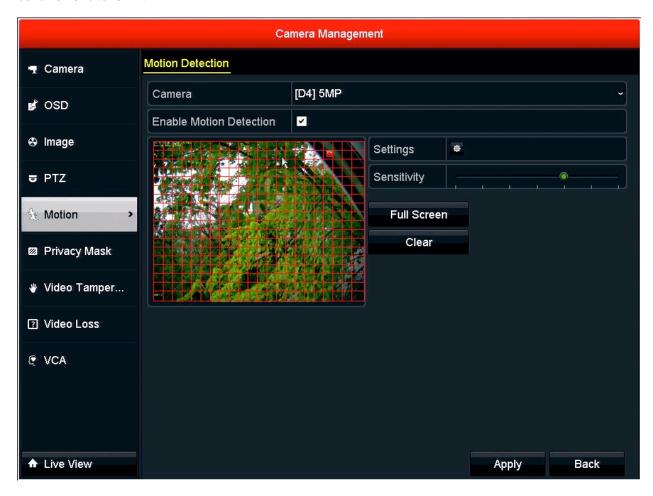

**Next** click the Settings button and choose **Linkage Action** and check off Send Email then press Apply and then Ok.





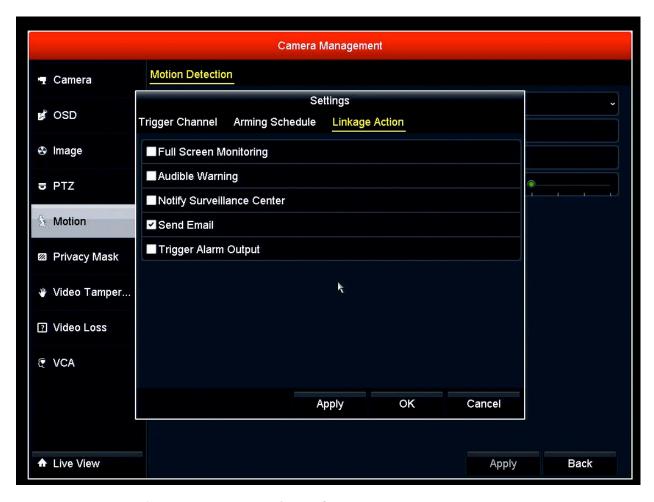

You are now ready to receive Email Notifications.

