



Network Cameras  
User Manual

Manual Version:2.19

Thank you for purchasing our product. If there are any questions, or requests, please do not hesitate to contact the dealer.

## Copyright

Copyright Innovative Video Technology . All rights reserved. No part of this manual may be copied, reproduced, translated, or distributed in any form or by any means without prior consent in writing from our company.

## Trademark Acknowledgement

InVid Tech trademarks and logos are the property of Innovative Video Technology. Other trademarks, company names and product names contained in this manual are the property of their respective owners.

## Disclaimer



---

### **CAUTION!**

The default password is intended for your first login. For security, please set a strong password after your first login. A strong password shall include at least nine characters comprising digits, letters, and special characters.

---

- To the maximum extent permitted by applicable law, the product described, with its hardware, software, firmware and documents, is provided on an “as is” basis.
- Best effort has been made to verify the integrity and correctness of the contents in this manual, but no statement, information, or recommendation in this manual shall constitute formal guarantee of any kind, expressed or implied. We shall not be held responsible for any technical or typographical errors in this manual. The contents of this manual are subject to change without prior notice. Update will be added to the new version of this manual.
- Use of this manual and the subsequent result shall be entirely on the user’s own responsibility. In no event shall we be reliable to you for any special, consequential, incidental, or indirect damages, including, among others, damages for loss of business profits, business interruption, or loss of data or documentation in connection with the use of this product.
- Video and audio surveillance can be regulated by laws that vary from country to country. Check the law in your local region before using this product for surveillance purposes. We shall not be held responsible for any consequences resulting from illegal operations of the device.
- The illustrations in this manual are for reference only and may vary depending on the version or model. Thescreenshots in this manual may have been customized to meet specific requirements and user preferences. As a result, some of the examples and functions featured may differ from those displayed on your monitor.
- This manual is a guide for multiple product models and so it is not intended for any specific product.




- Due to uncertainties such as physical environment, discrepancy may exist between the actual values and reference values provided in this manual. The ultimate right to interpretation resides in our company.

## Environmental Protection

This product has been designed to comply with the requirements on environmental protection. For the proper storage, use and disposal of this product, national laws and regulations must be observed.

## Symbols

The symbols in the following table may be found in this manual. Carefully follow the instructions indicated by the symbols to avoid hazardous situations and use the product properly.

Symbol	Description
 <b>WARNING!</b>	Contains important safety instructions and indicates situations that could cause bodily injury.
 <b>CAUTION!</b>	Means reader be careful and improper operations may cause damage or malfunction to product.
 <b>NOTE!</b>	Means useful or supplemental information about the use of product.

# Contents

Copyright .....	2
Trademark Acknowledgement .....	2
Disclaimer .....	2
Environmental Protection .....	3
Symbols .....	3
<b>1 Network Connection .....</b>	<b>1</b>
<b>2 Login .....</b>	<b>1</b>
Preparation .....	1
Logging In to the Web Interface .....	3
Introduction to the Web Interface .....	4
Initial Configuration .....	5
<b>3 Configuring Parameters .....</b>	<b>6</b>
Local Parameters .....	6
Network Configuration .....	7
Ethernet .....	7
Port .....	11
FTP .....	11
E-Mail .....	12
Port Mapping .....	13
DNS .....	14
DDNS .....	14
P2P .....	15
SNMP .....	15
802.1x .....	16
QoS .....	16
Adaptive Streams .....	17
Image Configuration .....	17
Image Adjustment .....	17
OSD Setting .....	27
Privacy Mask .....	29
Audio and Video Configuration .....	30
Video Configuration .....	30
Audio Configuration .....	32
Snapshot .....	33
ROI .....	34
Media Stream Configuration .....	34
Intelligent Alarm Configuration .....	36
Smart .....	36
Cross Line Detection .....	37
Enter Area .....	39
Leave Area .....	41
Intrusion Detection .....	44
Object Moving .....	46
Object Left .....	48


Mixed -Traffic Detection .....	50
Face .....	52
Face Picture Comparison .....	54
People Counting.....	56
Auto Tracking.....	59
Heat Map .....	59
Defocus Detection .....	62
Scene Change Detection .....	64
Advanced Settings .....	72
Master-Slave Linkage.....	<b>Error! Bookmark not defined.</b>
Attribute Collection .....	<b>Error! Bookmark not defined.</b>
Master-Slave Linkage.....	<b>Error! Bookmark not defined.</b>
Common Alarm Configuration .....	73
Configuring Motion Detection Alarm .....	76
Configuring Tampering Alarm .....	78
Configuring Audio Detection Alarm.....	79
Configuring Alarm Input .....	81
Configuring Alarm Output.....	82
Memory Card Storage .....	83
Setting Edge Storage.....	83
Setting Cache Post Recording .....	85
System Maintenance.....	<b>Error! Bookmark not defined.</b>
Security .....	86
Setting the System Time .....	89
SettingServers .....	90
Serial Port Mode Configuration .....	92
Wiper Control .....	94
Viewing Device Status.....	95
Photo Storage Status .....	95
Upgrading the Device .....	96
Restarting the System.....	97
Importing and Exporting System Configuration File .....	97
Collecting Diagnosis Information .....	98
Focus Configuration .....	98
Device Mounting Height .....	98
Fisheye Camera Parameter.....	99
<b>4 Live View .....</b>	<b>101</b>
Live View Toolbar .....	102
Viewing Certain Area of Images .....	103
Using Digital Zoom .....	103
Using Area Focus.....	104
Using 3D Positioning .....	104
Face Snapshot.....	105
Deep Perimeter Snapshot.....	108
Mixed-Traffic Detection Snapshot .....	111
Live View of Fisheye Cameras .....	113
5ePTZ of Panoramic Cameras.....	115

<b>5 Video Playback and Download with Edge Storage</b>	<b>117</b>
Video Playback	117
Download	117
<b>6 PTZ Control</b>	<b>118</b>
PTZ Control Toolbar	118
Setting Patrol by Presets	119
Setting Presets	119
Setting Patrol	120
Setting Home Position	124
Remote Control PTZ	125
PTZ Limit	125
Resume Patrol	126
<b>7 LPR</b>	<b>127</b>
LPR Live View	127
LPR Configuration	127
<b>Appendix A Glossary</b>	<b>130</b>
<b>Appendix B FAQ</b>	<b>131</b>


# 1 Network Connection

---

Before accessing a network camera (also known as IP Camera or IPC) from a PC, you need to connect the network camera to the PC directly with a network cable or via a switch or router.

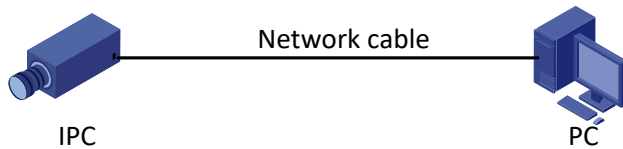

Use a Shielded Twisted Pair (STP) cable to connect the network interfaces of the network camera and the PC.

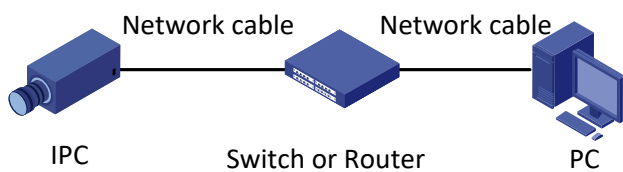

Use Shielded Twisted Pair (STP) cables to connect the network interfaces of the camera and the switch or router.

# 2 Login

---

## Preparation




After you have completed the installation in accordance with the quick guide, connect the camera to power to start it. After the camera is started, you can access the camera from a PC client installed with a web browser or the client software Vision CMS. Internet Explorer(IE) is a recommended web browser. For more information about Vision CMS, refer to the *Vision CMS User Manual*.

The following takes IE on a Microsoft Windows7 operating system as an example.

### Check before login

- The camera is operating correctly.
- The network connection between the PC and the camera is normal.
- The PC is installed with Internet Explorer 10.0 or higher.
- (Optional) The resolution is set to 1440 x 900.

## Add the IP address as a trusted site

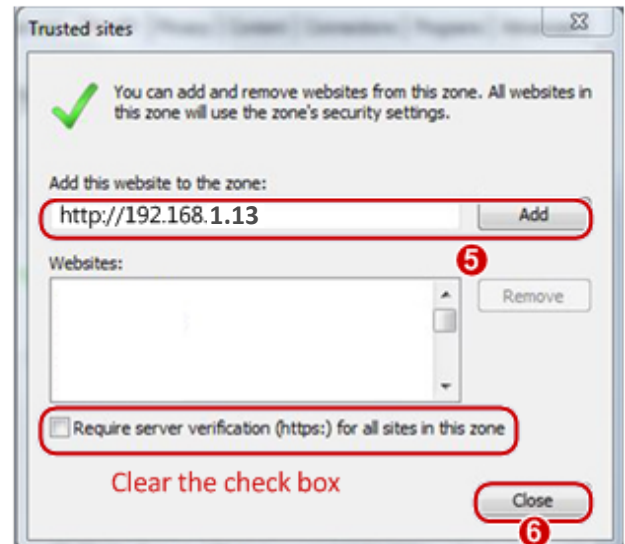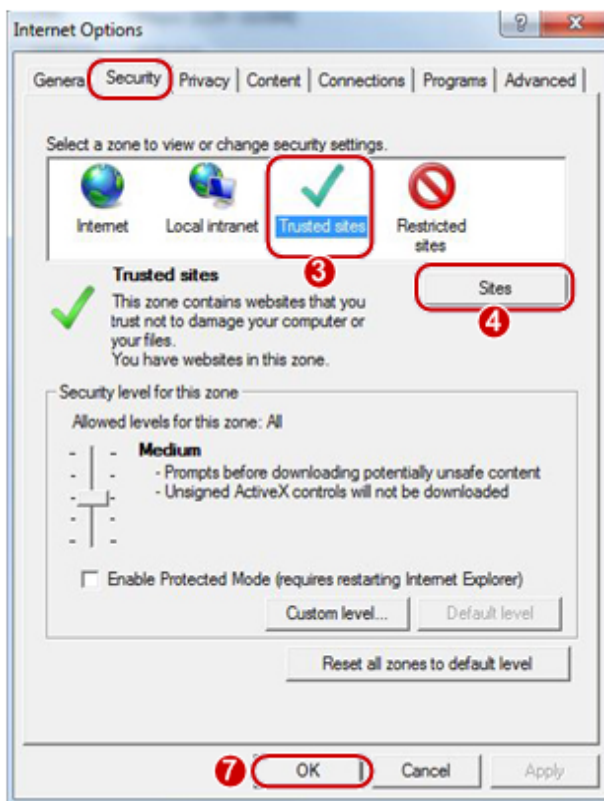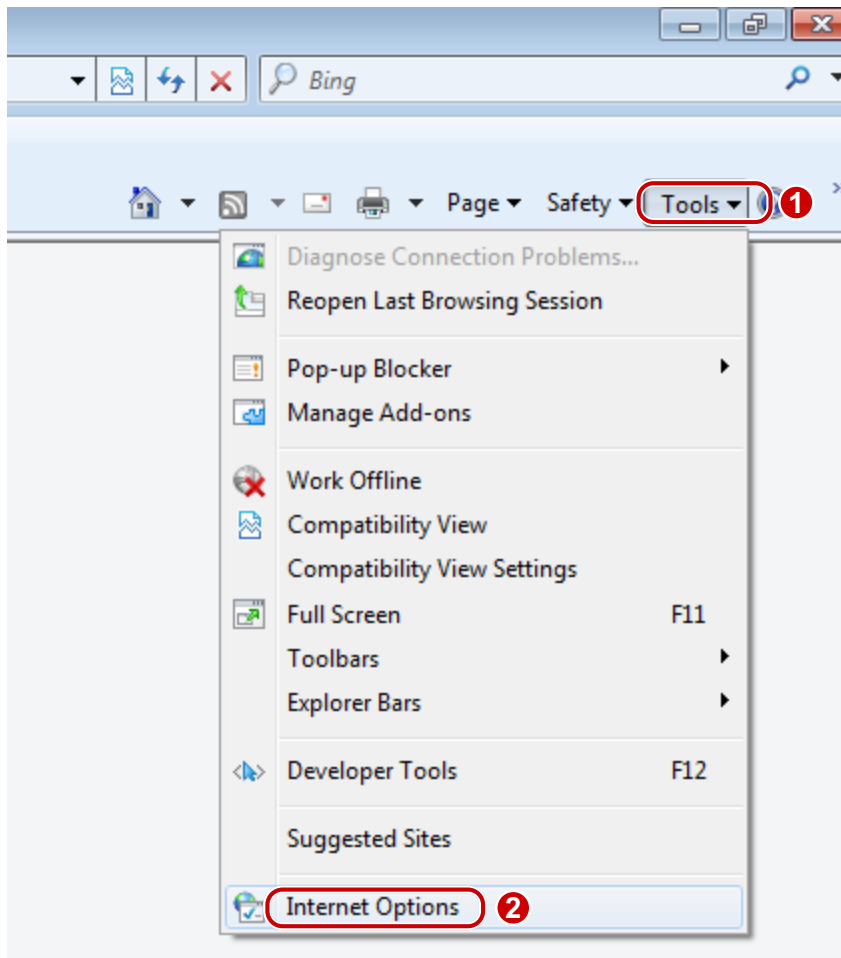






## NOTE!

The IP address 192.168.1.13 in this example is the default IP address. Please replace it with the actual address of your camera if it has been changed.

### (Optional) Modify user access control settings

Before you access the camera, follow the steps to set **User Account Control Settings** to **Never notify**.

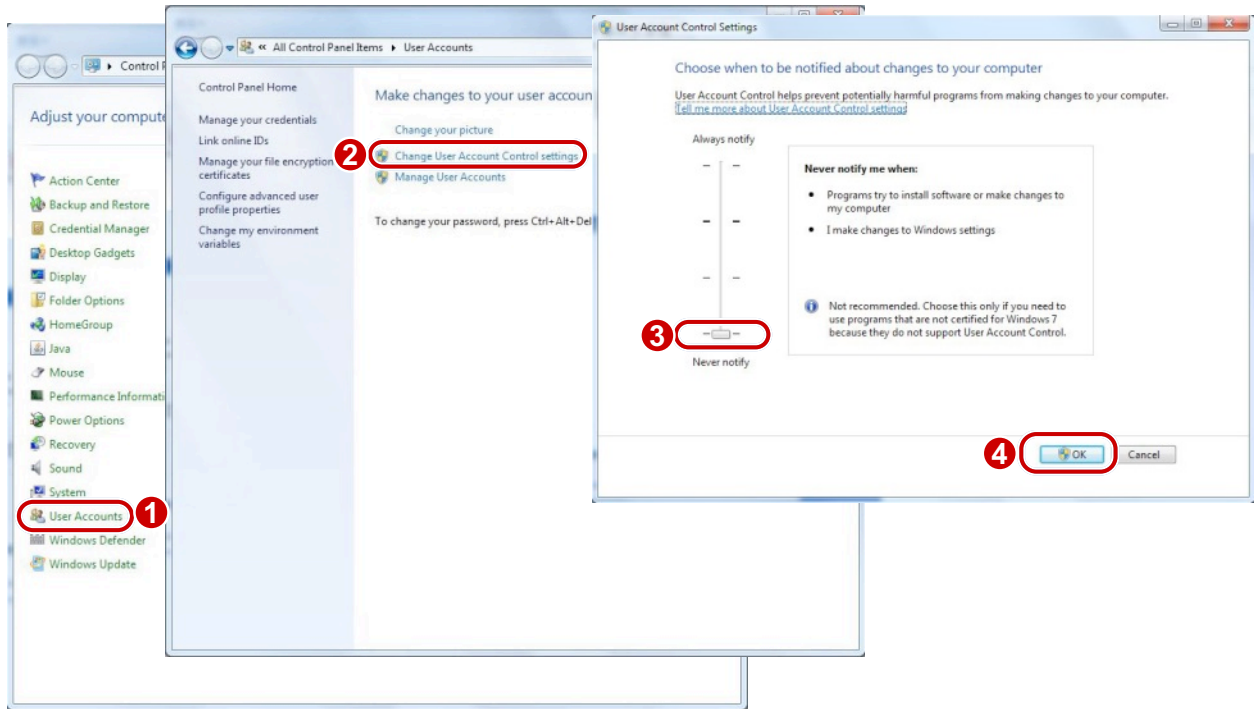

## Logging In to the Web Interface

The default static IP address of the camera is 192.168.1.13, and the default subnet mask is 255.255.255.0. DHCP is turned on by default. If a DHCP server is used in the network, the IP address of your camera may be assigned dynamically, and you need to use the correct IP address to log in. Use the Vision Tools to view the dynamic IP address of your camera.

The following takes IE as an example to describe the login procedure.

1. Browse to the login page by entering the correct IP address of your camera in the address bar.




2. If you log in for the first time, follow system prompts and install the ActiveX. You need to close your browser to complete the installation.



## NOTE!

- To manually load the ActiveX, type `http://IP address/ActiveX/Setup.exe` in the address bar and press Enter.
- The default password is intended for your first login. For security, please set a strong password after your first login. A strong password shall include at least nine characters comprising digits, letters, and special characters.
- The camera protects itself from illegal access by limiting the number of failed login attempts. If login fails six times consecutively, the camera locks automatically for ten minutes.

3. Privacy policy is displayed on the screen when the user logs in for the first time. After reading the privacy policy, you need to check in the 'I have read and agree to the above policy' box, then click the 'OK' button to proceed to the next step.

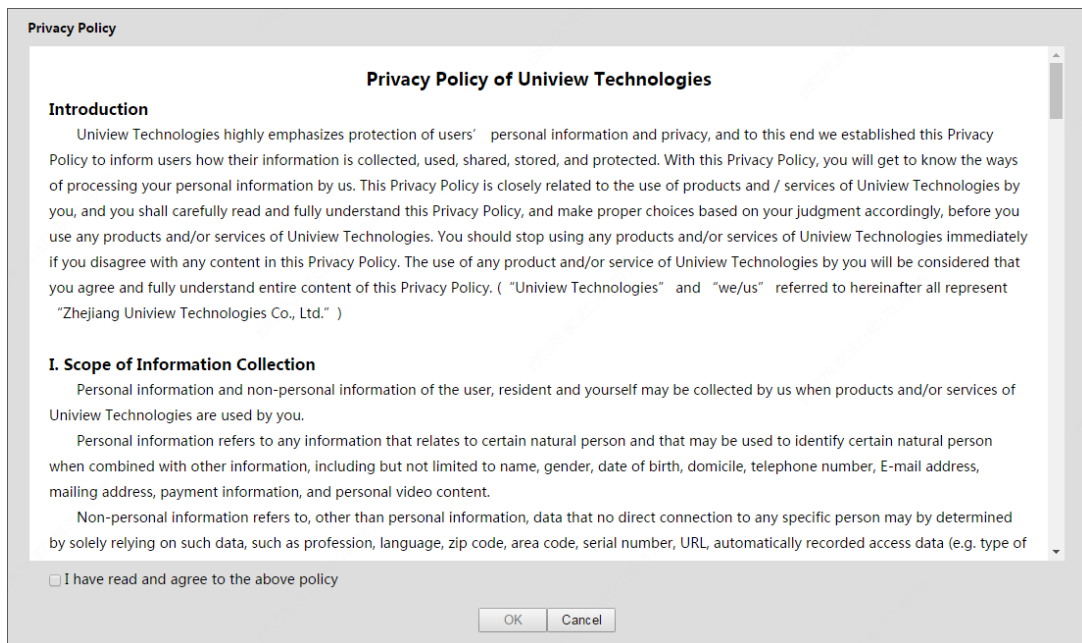

4. Enter the username and password, and then click **Login**. For the first login, use the default username “admin” and password “1234567u”.
  - If you log in with **Save Password** selected, you do not need to enter the password each time when you log in. To ensure security, you are not advised to select **Save Password**.
  - To clear the **Username** and **Password** text boxes and the **Save Password** checkbox, click **Reset**.

## Introduction to the Web Interface

By default the live view window is displayed when you are logged in to the Web interface. The following shows an example.



No.	Description
1	Menu

No.	Description
2	PTZ control area <b>Note:</b> This area is available for PTZ dome cameras and PTZ cameras.
3	Live view window
4	Live view toolbar

## Initial Configuration

After you log in to the device, please perform the following initial configuration.

Item	Description
1. <a href="#">Ethernet</a> .	Reconfigure the device IP and network parameters based on the actual networking.
2. Log out and log in again to the Web using the new IP address.	-
3. <a href="#">Set the system time</a> .	Set the system time based on the actual situation.
4. <a href="#">(Optional) Set the management server</a> .	Set the management server based on the actual networking.
5. (Optional) Set the server for storing photos.	Set the server for storing photos based on the actual networking.
6. <a href="#">Set OSD</a> .	Set the information displayed on the screen as needed, for example, time.
7. <a href="#">(Optional) Manage users</a> .	Change the default password and add common users as needed.

You can watch the live video after finishing the initial configuration. Please configure other parameters as needed.



### NOTE!

- The displayed live view interface, parameters displayed and value ranges may vary with models. Please see the actual Web interface for details.
- The parameters that are grayed out cannot be modified. For the actual settings, see the Web interface.
- It is recommended that you change the password when you are logged in the first time. For details about how to change a password, see [Security](#).

# 3 Configuring Parameters

## Local Parameters

Set local parameters for your PC.



### NOTE!

The local parameters may vary with models. Please see the actual Web interface for details.

1. Select **Setup>Common>Local Parameters**

<b>Smart</b>	
Intelligent Mark	Enable <input type="button" value="v"/>
Untriggered Target	Enable <input type="button" value="v"/>
Display Attributes	Enable <input type="button" value="v"/>
<b>Video</b>	
Processing Mode	Fluency Priority <input type="button" value="v"/>
Protocol	TCP <input type="button" value="v"/>
<b>Audio</b>	
Encoding Format	G.711U <input type="button" value="v"/>
<b>Recording and Snapshot</b>	
Recording	Subsection By Time <input type="button" value="v"/>
Subsection Time (min)	30
When Storage Full	<input checked="" type="radio"/> Overwrite Recording <input type="radio"/> Stop Recording
Total Capacity(GB)	10
Local Recording	TS <input type="button" value="v"/>
Files Folder	C:\Users\jW8008\Surveillance_IPC\IPC1 <input type="button" value="Browse..."/> <input type="button" value="Open"/>
<input type="button" value="Save"/>	

2. Modify the settings as required. The following table describes some major parameters.

Parameter		Description
Smart	Untriggered Target	When enabled, the camera will display an on-screen mark on the target (e.g., face when face detection is enabled) and track it.
	Intelligent Mark	This function should be used with “Cross Line Detection、Enter Area、Leave Area、Intrusion Detection、Mixed -Traffic Detection”
	Display Attributes	When enabled, the attributes collected will be displayed in live view page. This function should be used with Intelligent > Smart > Attribute Collection.
Video	Processing Mode	<ul style="list-style-type: none"> <li>• Real-Time Priority: Recommended if the network is in good condition.</li> <li>• Fluency Priority: Recommended if you want short time lag for live video.</li> <li>• Ultra-Low Delay: Recommended if you want the minimum time lag for live video.</li> </ul>
	Protocol	Set the protocol used to transmit media streams to be decoded by the PC.
Record and Snapshot	Recording	<ul style="list-style-type: none"> <li>• Subsection By Time: Duration of recorded video for each recording file on the computer. For example, 2 minutes.</li> <li>• Subsection By Size: Size of each recording file stored on the computer. For example, 5M.</li> </ul>
	Record Overwrite	<ul style="list-style-type: none"> <li>• Overwrite: When the assigned storage space on the computer is used up, the camera deletes the existing recording files to make room for the new recording file.</li> <li>• Full Stop: When the assigned storage space on the computer is full, recording stops automatically.</li> </ul>
	Files Folder	<ul style="list-style-type: none"> <li>• The save path of snapshots and recordings. The max. path length is 260 bytes. If the limit is exceeded, recording or snapshot during live view will fail, and messages will appear on the screen.</li> </ul>

3. Click **Save**.

## Network Configuration

### Ethernet

Modify communication settings such as the IP address for the camera so that the camera can communicate with other devices.



#### NOTE!

- After you have changed the IP address, you need to use the new IP address to log in.
- The configurations of DNS (Domain Name System) server are applicable when the device is accessed by domain name.

#### Static Address

1. Click **Setup>Network>Network**.

Obtain IP Address	Static
IP Address	203.3.1.99
Subnet Mask	255.255.255.0
Default Gateway	203.3.1.1
<b>IPv6</b>	
IPv6 Mode	Manual
IPv6 Address	
Prefix Length	64
Default Gateway	
MTU	1500
Port Type	FE Port
Operating Mode	Auto-negotiation

2. Select **Static** from the **Obtain IP Address** drop-down list.
3. Enter the IP address, subnet mask, and default gateway address. Make sure that the IP address of the camera is unique in the network.
4. Click **Save**.

#### PPPoE



#### NOTE!

This function is not supported by some models. Please see the actual model for details.

If the camera is connected to the network through Point to Point over Ethernet (PPPoE), you need to select PPPoE as the IP obtainment mode.

1. Click **Setup>Network>Network**.

Obtain IP Address	PPPoE
Username	user
Password	●●●●●●●●●●●●●●●●
<b>IPv6</b>	
IPv6 Mode	Manual
IPv6 Address	
Prefix Length	64
Default Gateway	
MTU	1500
Port Type	FE Port
Operating Mode	Auto-negotiation


2. Select **PPPoE** from the **Obtain IP Address** drop-down list.
3. Enter the username and password provided by your internet Service Provider (ISP).
4. Click **Save**.

## DHCP

The Dynamic Host Configuration Protocol (DHCP) is enabled by default when the camera is delivered. If a DHCP server is deployed in the network, the camera can automatically obtain an IP address from the DHCP server.

To manually configure DHCP, follow the steps below:


1. Click **Setup>Network>Network**.

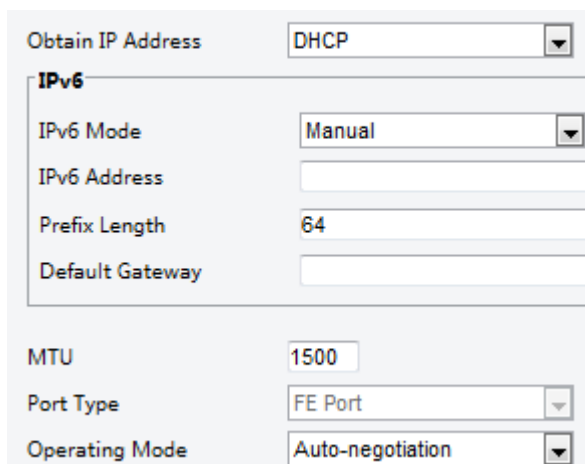

2. Select **DHCP** from the **Obtain IP Address** drop-down list.
3. Click **Save**.

## IPv6

1. Click **Setup>Network>Network**.

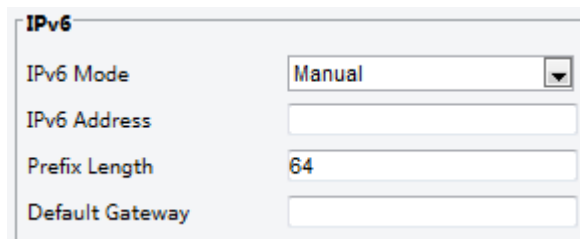

2. By default the **IPv6** mode is set to **Manual**.
3. Enter the IPv6 address, set the prefix length and default gateway. The IP address must be unique on the network.
4. Click **Save**.


## Wi-Fi



### NOTE!

This function is not supported by some models, please see the actual model for details.

1. Click **Setup>Network>Network**. Click the **Wi-Fi** tab.



2. Select **Sniffer**.
3. Click **Save**.

Some devices can search for Wi-Fi networks and connect.

1. Select **Setup> Network>Network**. Select **Wi-Fi** for **Wi-Fi Mode**.

Wi-Fi Mode

Adaptive Streams  On  Off

**Network Status**

Current Status: Disconnected

SSID: None

IP Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Default Gateway: 0.0.0.0

Strength(%): 0

---

**Wi-Fi Network**

SSID	Channel	MAC	Authentication	Encryption	Strength(%)	Strength(dBm)

---

**Wi-Fi**

SSID:

Password:

Encryption:

Authentication:

Obtain IP Address:

- Signal strength is displayed. Turn on **Adaptive Streams**. The page shows that there are other Wi-Fi networks. To search for Wi-Fi networks again, click **Search**.
- Click an SSID in the Wi-Fi Network list. Information about the corresponding network is displayed.
- Click **Save**.
- When **Wi-Fi Mode** is set to **Wi-Fi Hotspot**, the camera can function as a Wi-Fi hotspot for other devices.

Wi-Fi Mode

**Hotspot Settings**

SSID:

Password:

Channel:

Gateway Address:

- Click **Save**.



## Port



### NOTE!

This function is not supported by some models. Please see the actual model for details.

1. Click **Setup>Network>Port**.

HTTP Port	<input type="text" value="80"/>
HTTPS Port	<input type="text" value="443"/>
RTSP Port	<input type="text" value="554"/>

**Note:** Modifying the RTSP or server port number will cause the device to restart.

2. Configure relevant port numbers.
3. Click **Save**.

## FTP

All snapshots (except face detection) are saved through the general FTP service. After the configuration of FTP, you will be able to upload snapshots from network cameras to the specified FTP server.

### General

1. Click **Setup>Storage>FTP**. Go to **General** tab.

**Server Parameters**

Server IP	<input type="text" value="192.168.0.150"/>	Upload Images	<input type="checkbox"/>
Port No.	<input type="text" value="21"/>	Overwrite Storage	<input type="checkbox"/>
Username	<input type="text"/>	Overwrite At(image)	<input type="text" value="1000"/>
Password	<input type="text"/>	<input type="button" value="Test"/>	

**Snapshot Image**

Save To \\ [Preset No.] \ [IP Address] \ [Date] \ [Hour(s)]

Root Directory

\\  \\  \\

File Name [Preset No.]-[PTZ Zoom]-[PTZ Latitude]-[PTZ Longitude].jpg

Separator

No.	Naming Element
1	<input type="text" value="Preset No."/>
2	<input type="text" value="PTZ Zoom"/>
3	<input type="text" value="PTZ Latitude"/>
4	<input type="text" value="PTZ Longitude"/>
5	<input type="text" value="None"/>

2. Set the IP address and port for the FTP server, username and password used to upload images to the FTP server, select **Upload Images**, **Overwrite Storage** and set **Overwrite At** (threshold for overwriting images). Some camera models support FTP test. You may test FTP after completing FTP settings correctly.
3. Set the path for saving snapshots on the FTP server and the file name format. For example, set path as Preset No.\\IP Address\\Date\\Hour(s), and set file name as Preset No.-PTZ Zoom-PTZ Latitude-PTZ Longitude.jpg.
4. Click **Save**.

## Smart

This function is used to store snapshots taken for smart functions such as face recognition. To use smart FTP, click Setup > System > Server > Intelligent Server and set Platform Communication Type to FTP.

1. Click **Setup>Storage>FTP**. Go to **Smart** tab.

### Server Parameters

Server IP	<input type="text" value="192.168.0.150"/>	Custom Naming Rules	<input type="checkbox"/>
Port No.	<input type="text" value="21"/>	Convert Path into UTF8 Format	<input type="checkbox"/>
Username	<input type="text"/>		
Password	<input type="text"/>		
Device Name	<input type="text"/>		
Device ID	<input type="text" value="1"/>		
Intersection ID	<input type="text"/>		

### Snapshot Image

Save To \\ [Preset No.] \ [IP Address] \ [Date]  
Root Directory  
 \\  \\

File Name [Preset No.]-[PTZ Latitude]-[PTZ Longitude]-[PTZ Zoom].jpg  
Separator -

No.	Naming Element	Naming Rule
1	<input type="text" value="Preset No."/>	
2	<input type="text" value="PTZ Latitude"/>	
3	<input type="text" value="PTZ Longitude"/>	
4	<input type="text" value="PTZ Zoom"/>	
5	<input type="text" value="None"/>	

2. Set the IP address and port of the FTP server, username and password used to upload images to the FTP server.
3. Set the path for saving snapshots on the FTP server and the file name format. For example, set path as Preset No.\\IP Address\\Date, and set file name as Preset No.-PTZ Latitude-PTZ Longitude-PTZ Zoom.jpg.
4. Click **Save**.

## E-Mail

After the configuration of E-mail, when alarms are triggered, you will be able to send messages to the specified E-mail address.

1. Click **Setup>Network>E-mail**.

Sender	
Name	<input type="text"/>
Address	<input type="text"/>
SMTP Server	<input type="text"/>
SMTP Port	<input type="text" value="25"/>
TLS/SSL	<input type="radio"/> On <input checked="" type="radio"/> Off
Snapshot Interval(s)	<input type="text" value="2"/> <input type="button" value="v"/> <input checked="" type="checkbox"/> Attach Image
Server Authentication	<input checked="" type="radio"/> On <input type="radio"/> Off
Username	<input type="text"/>
Password	<input type="text"/>
Recipient	
Name1	<input type="text"/>
Address1	<input type="text"/> <input type="button" value="Test"/>
Name2	<input type="text"/>
Address2	<input type="text"/> <input type="button" value="Test"/>
Name3	<input type="text"/>
Address3	<input type="text"/> <input type="button" value="Test"/>

- Configure relevant parameters of the sender and the recipient. Some camera models support Email test. You may test email after setting the recipient address. The following table describes some major parameters.

Parameter	Description
TLS/SSL	When enabled, the e-mail will be encrypted using TLS (Transport Layer Security) or Secure Socket Layer (SSL) to protect privacy. First it tries to send through an SSL connection. If the SMTP server supports SSL, the e-mail will be sent through the SSL connection; otherwise, it tries to send using STARTTLS.
Attach Image	When enabled, the e-mail will contain 3 instant snapshots as attachment according to the Capture Interval.
Username/Password	Username and password of the registration email address. The password allows the following special characters \ / : * ? ' " < >   % &

- Click **Save**.

## Port Mapping

- Click **Setup>Network>Port**. Go to **Port Mapping** tab.

Port Mapping  On  Off

Mapping Type

Port Type	External Port	External IP Address	Status
HTTP Port	<input type="text" value="80"/>	0.0.0.0	Inactive
RTSP Port	<input type="text" value="554"/>	0.0.0.0	Inactive
Server Port	<input type="text" value="81"/>	0.0.0.0	Inactive

2. Enable **Port Mapping** and select mapping type. If **Manual** is selected, then external ports must be configured (external IP is obtained automatically by the camera). If the configured port is occupied, then the **Status** will show Inactive.
3. Click **Save**.

## DNS

1. Click **Setup>Network>DNS**.

Preferred DNS Server

Alternate DNS Server

2. Set DNS server addresses.
3. Click **Save**.

## DDNS



### NOTE!

This function is not supported by some models. Please see the actual model for details.

1. Click **Setup>Network>DDNS**.

DDNS Service  On  Off

DDNS Type

Server Address

Domain Name

Username

Password

Confirm

2. Enable **DDNS Service**.
3. Select a DDNS type: DynDNS, NO-IP, or MyDDNS.
4. Complete other settings including server address, domain name, username and password.
5. Click **Save**.

## P2P



### NOTE!

- This function is not available to all models.
- Scan the QR code with your mobile phone (iOS or Android) to download the APP.
- When installed, run the APP to add the camera. Please refer to the online help in the APP for detailed steps.

1. Click **Setup>Network>P2P**.

EZCloud	<input type="radio"/> On <input checked="" type="radio"/> Off
Address	<a href="http://en.ezcloud.uniview.com">en.ezcloud.uniview.com</a>
Register Code	1234567890123456789012345
Device Status	Offline
Scan	

2. Select **On** to enable cloud service.
3. Click **Save**.

## SNMP

SNMPv3 is recommended when a camera needs to transfer configuration with the central server. Both the camera and the central server should support SNMPv3.



### NOTE!

- Two options are available: SNMPv3 (default) and SNMPv2.
- If you choose SNMPv2, an onscreen message will remind you of potential risks and ask if you want to continue.

1. Click **Setup> Network > SNMP**

<b>SNMP</b>	
SNMP Type	SNMPv3
Username	admin
Authentication Mode	MD5
Password	.....
Confirm	.....
Encryption Mode	DES
Password	.....
Confirm	.....
<input type="button" value="Save"/>	

2. Select **SNMPv3** and complete settings.
3. Click **Save**.

On the SNMPv2 setting page, **Read-Only Community Name** is used for two-way authentication between a camera and the central server. The default name is **public**, and you may change it as needed. If you change the **Read-Only Community Name**, you should change it into the same one on the central server, or the two-way authentication will not be completed.

## 802.1x

802.1x provides authentication to devices (e.g., cameras) trying to connect to a network. Only the authenticated devices can connect the network. This enhances security.

1. Click **Setup>Network>802.1x**.

2. Select **On** and then complete other settings.
3. Click **Save**.

## QoS

QoS(Quality of Service) is the ability to provide better service for specified network communication. As a network security mechanism, QoS is used to address problems like network delay and blocking. When the network is overloaded or congested, QoS ensures that critical services are not delayed or discarded and that the network runs efficiently.

1. Click **Setup > Network > QoS**.

2. Set a priority level (0~63) for each service. At present, QoS allows you to assign different priority to audio and video, alarm report, configuration management and FTP transmission. The greater the value, the higher the priority. For example, if the value of audio and video is set to 60, alarm report and

configuration management is set to 0, and FTP is set to 4, when network congestion occurs, the priority is to ensure the smooth running of audio and video.

3. Click **Save**.



#### NOTE!

To use QoS, make sure that the switch support QoS mode.


## Adaptive Streams



#### NOTE!

- **Adaptive Streams** is not available on all models, and is enabled by default on some models. Please see the actual Web interface for details.
- Itss recommended to enable **Adaptive Streams** in a poor network environment.

1. Click **Setup > Network > Wi-Fi**, and set **Wi-Fi Mode** to **Wi-Fi**.

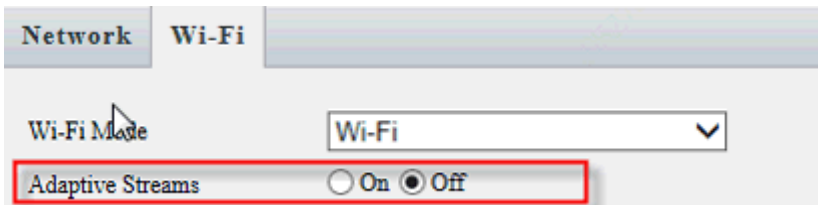

2. Enable **Adaptive Streams**.
3. Click **Save**.

## Image

### Image



#### NOTE!


- The image parameters displayed and value ranges allowed may vary with camera model. For the actual parameters and value ranges of your camera, see the Web interface. You may move the sliders to adjust settings or enter values in the text boxes directly.
- Clicking **Default** will restore all the default image settings.

### Setting the Scene


Set image parameters to achieve the desired image effects based on live video in different scenes.

Click **Setup>Image>Image**.

The scene management page for some models is displayed as follows, you can select the desired scene in the drop-down list.



The scene management page of some models is displayed as follows, you can take the following steps to configure the scene.

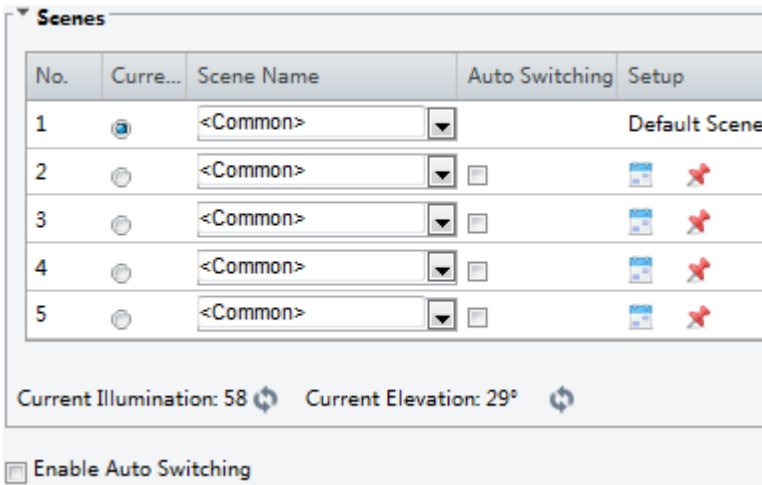

1. Click **Scenes**.
2. Select a scene, and then set scene switching parameters. The following table describes some major parameters.

Column	Description
Current	<p>Indicates the scene that is being used.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Select an option button to switch to the scene and display the corresponding image parameters for the scene.</li> <li>• The camera switches the current scene automatically when <b>Enable Auto Switching</b> is selected.</li> </ul>
Scene Name	<p>Name of the current scene. The device provides several preset scene modes. When you select a scene, the corresponding image parameters are displayed. You can adjust image settings according to actual needs.</p> <ul style="list-style-type: none"> <li>• Common: recommended for outdoor scenes.</li> <li>• Indoor: recommended for indoor scenes.</li> <li>• High Sensitivity: recommended for low light environment.</li> <li>• Highlight Compensation: can suppress strong light such as headlights on roads and spotlight in parks. Recommended for capturing vehicle license plates.</li> <li>• WDR: recommended for scenes with high-contrast lighting, such as window, corridor, front door or other scenes that are bright outside but dim inside.</li> <li>• Custom: set a scene name as needed.</li> <li>• Face: Capture faces in motion in complicated scenes.</li> </ul>
Auto Switching	<p>Indicates whether to add a scene to the auto-switching list.</p> <p><b>Note:</b></p> <p>If <b>Auto Switching</b> is selected, the system switches to a scene automatically when the condition for switching to the scene is met. By default the auto-switching list includes the default scene.</p>
Setup	<p>Click  to set conditions for auto-switching, including schedule, illumination, and current elevation (angle between the PTZ and the horizontal direction). It means that auto-switching is triggered only when illumination and the current elevation during the set time period meet the set conditions. A condition is invalid if both the start and end values are set to 0.</p>

3. Select a scene and then click to set it as the default scene.



- If auto-switching is enabled, the camera can switch to the scene automatically when the condition for switching to a non-default scene is met. Otherwise, the camera remains in the default scene. When auto-switching is not enabled, the camera remains in the current scene.



**NOTE!**

- If Auto Switching is enabled (scene settings will be unavailable), the device will switch between the set scenes. If not, the device will stay at the current scene. The device will stay at default scenes unless the non-default scenes are triggered.
- If multiple non-default scenes are triggered, then the device will switch to the scene with the minimum number (starts from 1 to 5).


**Image Enhancement**







**NOTE!**

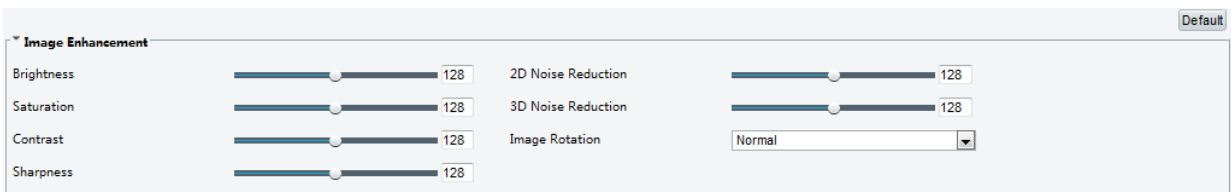







This function may vary with models. Please see actual Web interface for details.



- Click **Setup>Image>Image** and then click **Image Enhancement**.



- Use the sliders to change the settings. You may also enter values directly. The following table describes some major parameters.

Item	Description
<p>Brightness</p>	<p>Set the degree of brightness of images.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <span>Low brightness</span> <span>High brightness</span> </div>
<p>Saturation</p>	<p>The amount of a hue contained in a color.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <span>Low saturation</span> <span>High saturation</span> </div>

Item	Description
<p>Contrast</p>	<p>Set the degree of difference between the blackest pixel and the whitest pixel.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <span>Low contrast</span> <span>High contrast</span> </div>
<p>Sharpness</p>	<p>Contrast of boundaries of objects in an image.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <span>Low sharpness</span> <span>High sharpness</span> </div>
<p>2D Noise Reduction</p>	<p>Reduce the noise of images. The function may cause image blurring.</p>
<p>3D Noise Reduction</p>	<p>Reduce the noise of images. The function may cause motion blur (or ghosting in some applications).</p>
<p>Image Rotation</p>	<p>Rotation of the image.</p> <div style="display: grid; grid-template-columns: 1fr 1fr; gap: 10px;"> <div style="text-align: center;">  <p>Normal</p> </div> <div style="text-align: center;">  <p>Flip Vertical</p> </div> <div style="text-align: center;">  <p>Flip Horizontal</p> </div> <div style="text-align: center;">  <p>180°</p> </div> </div>

Item	Description	
	 <p data-bbox="577 645 734 676">90° Clockwise</p>	 <p data-bbox="1018 645 1228 676">90° Anti-clockwise</p>

3. To restore default settings in this area, click **Default**.

### Exposure



#### NOTE!

- This function may vary with models. Please see actual Web interface for details.
- The default settings are scene-adaptive. Use default settings unless modification is necessary.

1. Click **Setup>Image>Image** and then click **Exposure**.

**Exposure**

Exposure Mode	Custom	Slow Shutter	<input type="radio"/> On <input checked="" type="radio"/> Off
Shutter(s)	1/100000 ~ 1/30	Slowest Shutter	1/12
Gain	0 ~ 100	Metering Control	Face Metering
Compensation	<input type="range" value="0"/>	Face Brightness	<input type="range" value="50"/>
Min. Duration(min)	<input type="range" value="5"/>	Day/Night Mode	<input checked="" type="radio"/> Automatic <input type="radio"/> Day <input type="radio"/> Night
WDR	Off	Day/Night Sensitivity	Medium
WDR Level	<input type="range" value="5"/>	Day/Night Switching(s)	3
Suppress WDR Stripes	<input type="radio"/> On <input checked="" type="radio"/> Off		

For some camera models, the page is displayed as follows.

**Exposure**

Exposure Mode	Custom
Shutter(s)	1/100000 ~ 1/200
Gain	0 ~ 100
Slow Shutter	<input type="radio"/> On <input checked="" type="radio"/> Off
Slowest Shutter	1/12
Compensation	<input type="range" value="0"/>
Day/Night Mode	<input checked="" type="radio"/> Automatic <input type="radio"/> Day <input type="radio"/> Night
Day/Night Sensitivity	Ultra-low
Day/Night Switching(s)	60
HLC Intensity	<input type="range" value="5"/>

2. Set the parameters as required. The following table describes some major parameters.

Parameter	Description
Exposure Mode	<p>Select the correct exposure mode to achieve the desired exposure effect.</p> <ul style="list-style-type: none"> <li>• Automatic: The camera automatically adjusts exposure according to the environment.</li> <li>• Custom: The user sets exposure as needed.</li> <li>• Indoor 50Hz: Reduce stripes by limiting shutter frequency.</li> <li>• Indoor 60Hz: Reduce stripes by limiting shutter frequency.</li> <li>• Manual: Finetune image quality by setting shutter, gain and iris manually.</li> <li>• Low Motion Blur: Control the minimum shutter to reduce motion blur in faces captured in motion.</li> </ul>
Shutter (s)	<p>Shutter is used to control the light that comes into the lens. A fast shutter speed is ideal for scenes in quick motion. A slow shutter speed is ideal for scenes that change slowly.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• You can set a shutter speed when <b>Exposure Mode</b> is set to <b>Manual</b> or <b>Shutter Priority</b>.</li> <li>• If <b>Slow Shutter</b> is set to <b>Off</b>, the reciprocal of the shutter speed must be greater than the frame rate.</li> </ul>
Gain (dB)	<p>Control image signals so that the camera outputs standard video signals according to the light condition.</p> <p><b>Note:</b></p> <p>You can set this parameter only when <b>Exposure Mode</b> is set to <b>Manual</b> or <b>Gain Priority</b>.</p>
Slow Shutter	<p>Improves image brightness in low light conditions.</p> <p><b>Note:</b></p> <p>You can set this parameter only when <b>Exposure Mode</b> is not set to <b>Shutter Priority</b> and when <b>Image Stabilizer</b> is disabled.</p>
Slowest Shutter	<p>Set the slowest shutter speed that the camera can use during exposure.</p> <p><b>Note:</b></p> <p>You can set this parameter only when <b>Slow Shutter</b> is set to <b>On</b>.</p>
Compensation	<p>Adjust the compensation value as required to achieve the desired effects.</p> <p><b>Note:</b></p> <p>You can set this parameter only when <b>Exposure Mode</b> is not set to <b>Manual</b>.</p>
Metering Control	<p>Set the way the camera measures the intensity of light.</p> <ul style="list-style-type: none"> <li>• Center-Weighted Average Metering: Measure light mainly in the central part of images.</li> <li>• Evaluative Metering: Measure light in the customized area of images.</li> <li>• Highlight compensation: Ignore the brightness of the overexposed area of images. But selecting this setting will decrease the overall brightness of the image.</li> <li>• Face Metering: Adjust image quality in poor lighting conditions by controlling the brightness of captured face in Face scene.</li> </ul> <p><b>Note:</b></p> <p>You can set this parameter only when <b>Exposure Mode</b> is not set to <b>Manual</b>.</p>
Day/Night Mode	<ul style="list-style-type: none"> <li>• Automatic: The camera outputs the optimum images according to the light condition. In this mode, the camera can switch between night mode and day mode automatically.</li> <li>• Night: The camera provides high-quality black and white images using the existing light</li> <li>• Day: The camera provides high-quality color images using the existing light.</li> </ul>
Day/Night Sensitivity	<p>Light threshold for switching between day mode and night mode. A higher sensitivity means that the camera is more sensitive to the change of light and becomes more easily to switch between day mode and night mode.</p>

Parameter	Description
	<b>Note:</b> You can set this parameter only when <b>Day/Night Mode</b> is set to <b>Automatic</b> .
Day/Night Switching(s)	Set the length of time before the camera switches between day mode and night mode after the conditions for switching are met. <b>Note:</b> You can set this parameter only when <b>Day/Night Mode</b> is set to <b>Automatic</b> .
WDR	Enable WDR to distinguish the bright and dark areas in the same image. <b>Note:</b> You can set this parameter only when <b>Exposure Mode</b> is neither <b>Customize</b> nor <b>Manual</b> and when <b>Image Stabilizer</b> is disabled.
WDR Level	After enabling the WDR function, you can improve the image by adjusting the WDR level. <b>Note:</b> Use level 7 or higher when there is a high contrast between the bright and dark areas of the scene. In the case of low contrast, it is recommended to disable WDR or use level 1-6.
Suppress WDR Stripes	When enabled, the camera can automatically adjust slow shutter frequency according to the frequency of light to minimize stripes that may appear in images.

3. To restore the default settings, click **Default**.

### Smart Illumination



#### NOTE!

This function may vary with models. Please see actual Web interface for details.

1. Click **Setup>Image>Image** and then click **Smart Illumination**.

2. Select the correct IR control mode and set the parameters. The following table describes some major parameters.

Parameter	Description
Lighting Type	<ul style="list-style-type: none"> <li><b>Infrared:</b> The camera uses infrared light illumination.</li> <li><b>White Light:</b> The camera uses white light illumination.</li> </ul> <b>Note:</b> When <b>Control Mode</b> is set to <b>Manual</b> , camera can set illumination level from 0~1000.

Control Mode	<ul style="list-style-type: none"> <li>• <b>Global Mode:</b> The camera adjusts IR illumination and exposure to achieve balanced image effects. Some areas might be overexposed if you select this option. This option is recommended if monitored range and image brightness are your first priority.</li> <li>• <b>Overexposure Restrain:</b> The camera adjusts IR illumination and exposure to avoid regional overexposure. Some areas might be dark if you select this option. This option is recommended if clarity of the central part of the image and overexposure control are your first priority.</li> <li>• <b>Road:</b> This mode offers strong illumination in whole and is recommended for monitoring wide-ranging scenes, for example, road.</li> <li>• <b>Park:</b> This mode offers uniform light and is recommended for monitoring small range scenes with many obstacles, for example, industrial parks.</li> <li>• <b>Manual:</b> This mode allows you to manually control the intensity of IR illumination.</li> <li>• <b>Indoor:</b> This mode is recommended for application in indoor scenes.</li> </ul>
Illumination Level	<p>Set the intensity level of the IR light. The greater the value, the higher the intensity. 0 means that the IR light is turned off.</p> <ul style="list-style-type: none"> <li>• <b>Near-illumination Level:</b> You are recommended to set this parameter first for a wide-angle scene.</li> <li>• <b>Mid-illumination Level:</b> You are recommended to set this parameter first if the scene requires an intermediate focal length.</li> <li>• <b>Far-illumination Level:</b> You are recommended to set this parameter first if the scene requires a telephoto view.</li> </ul> <p><b>Note:</b> You can set this parameter only when <b>Control Mode</b> is set to <b>Manual</b>.</p>

3. To restore the default settings, click **Default**.

### Focus



#### NOTE!

This function may vary with models. Please see actual models for details.

1. Click **Setup>Image>Image** and then click **Focus**.

▼ **Focus**

Focus Mode One-Click Focus ▼

Scene Normal ▼

2. Select the focus mode as required.

Parameter	Description
Focus Mode	<ul style="list-style-type: none"> <li>• Auto Focus: The camera focuses automatically according to the current light condition.</li> <li>• Manual Focus: Manually adjust camera focus as required.</li> <li>• One-Click Focus: The camera is triggered to focus once when rotating, zooming or going to a preset.</li> <li>• One-Click Focus (IR): In a low light condition such as during night hours or in a dark house, this focus mode achieves better effects with the IR light turned on.</li> </ul>
Scene	<ul style="list-style-type: none"> <li>• Normal: Used for common scenes, such as road and industrial park.</li> <li>• Long Distance: Used for long-distance monitoring on a road. For example, when the camera is installed over 30 meters high to monitor a distant road intersection.</li> </ul>

3. To restore the default settings, click **Default**.

### White Balance


White balance is the process of offsetting unnatural color cast in images under different color temperatures so as to output images that best suit human eyes.



#### NOTE!

This function may vary with models. Please see the actual Web interface for details.

1. Click **Setup>Image>Image** and then click **White Balance**.

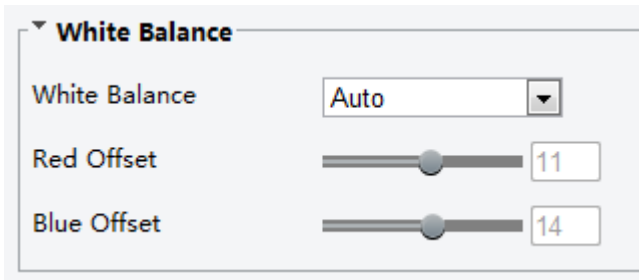

2. Select a white balance mode as required. The following table describes some major parameters.


Parameter	Description
White Balance	Adjust the red or blue offset of the image: <ul style="list-style-type: none"> <li>• Auto/Auto2: The camera adjusts the red and blue offset automatically according to the light condition (the color tends to be blue).If the images are still unnaturally red or blue in Auto mode, please try Auto2.</li> <li>• Fine Tune: Allow you to adjust the red and blue offset manually.</li> <li>• Outdoor: Suitable for outdoor environment with a relatively greater color temperature range.</li> <li>• Locked: Lock the current color temperature without change.</li> <li>• Sodium Lamp: The camera adjusts red and blue offset automatically according to the light condition (the color tends to be red).</li> </ul>
Red Offset	Adjust the red offset manually. <b>Note:</b> You can set this parameter only when <b>White Balance</b> is set to <b>Fine Tune</b> .
Blue Offset	Adjust the blue offset manually. <b>Note:</b> You can set this parameter only when <b>White Balance</b> is set to <b>Fine Tune</b> .

3. To restore the default settings, click **Default**.

### Advanced

Use the defog function to adjust the clarity of images captured in fog or haze conditions.

1. Click **Setup>Image>Image** and then click **Advanced**.

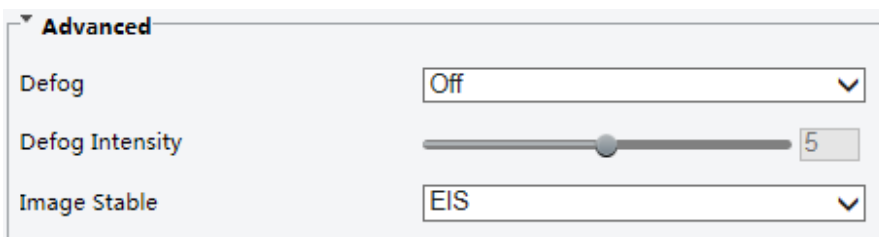



## NOTE!

- You can set this parameter only when WDR is turned off.
- Only some camera models support optical defog. When **Defog** is set to **On**, defog intensity level 6-9 represent optical defog, and images change from color to black/white when defog intensity is set from level 5 to 6; if **Defog** is set to **Auto** and defog intensity level is somewhere between 6-9, images do not automatically change to black/white in light fog conditions; the camera automatically switches to optical defog only in heavy fog conditions.

2. Enable the defog function and then select a level for the scene. Level 9 achieves the maximum defog effects, and level 1 achieves the minimum.



Defog Off



Defog On

3. To restore the default settings, click **Default**.

## Lighting Type



## NOTE!

This function may vary with models. Please see the actual model for details.

1. Click **Setup>Image>Image** and then click **Smart Illumination**



2. Select an option from the **Lighting Type** drop-down list.
3. To restore the default settings, click **Default**.

## Configuring Iris and Lens Mode




## NOTE!

- This function is only supported by certain network box camera types. Please see the actual model for details.
- Please use the lens with P-Iris control mode, and connect the iris control cable to the Z/F port of the camera.
- Iris can be set only when **Lens Mode** is set to **P-IRIS**.

1. Click **Setup>Image>Image** and then click **Advanced**.



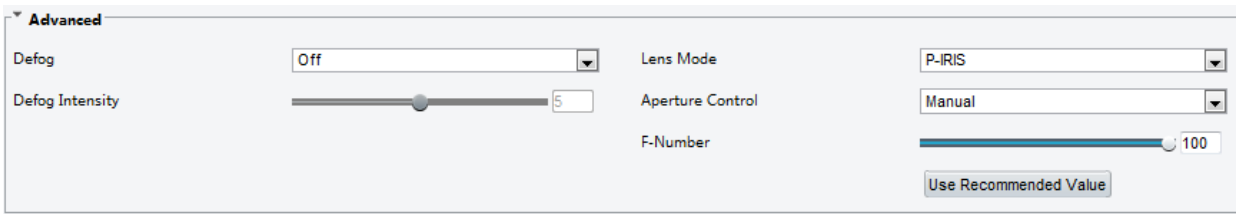

2. Modify the settings as required. The following table describes some major parameters.

Parameter	Description
Lens Mode	<ul style="list-style-type: none"> <li>Z/F: to modify focus and zoom.</li> <li>P-Iris: to modify iris value.</li> </ul>
Aperture Control	Automatically or manually adjust iris. <b>Note:</b> You can set this parameter only when <b>Lens Mode</b> is set to <b>P-Iris</b> .
F-Number	Change aperture manually.

3. To restore the default settings, click **Default**.

## OSD Setting


On Screen Display (OSD) is the text displayed on the screen with video images and may include time and other customized contents.




### NOTE!

This function may vary with models. Please see the actual Web interface for details.

1. Click **Setup>Image>OSD**.

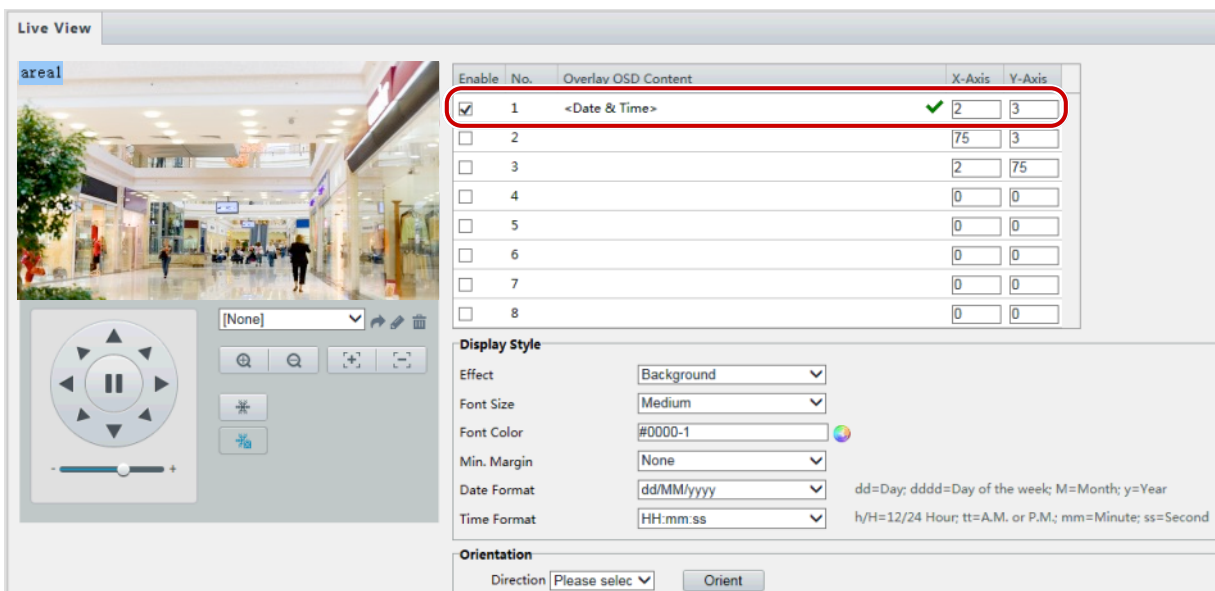

The OSD interface of some models is displayed as follows.

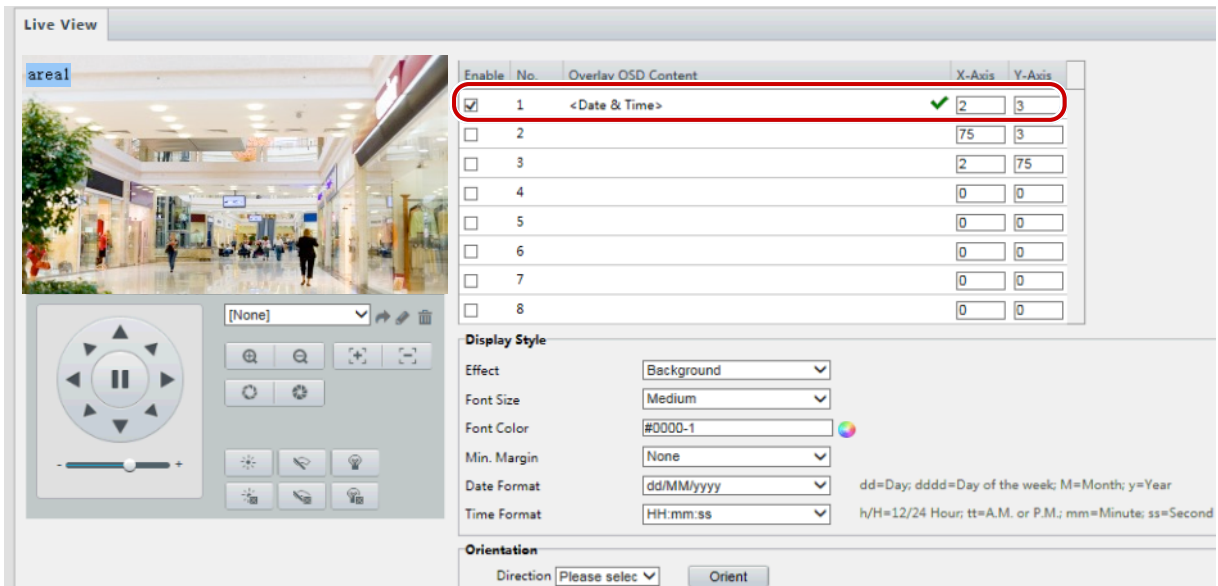

## 2. Select the position and content of the OSD.

- Position: Click the desired box in the **Live View** area. After the cursor shape is changed, click and hold the button to move the box to the desired position. To set the position precisely, use the X and Y coordinates under **Overlay Area**.
- Overlay OSD Content: The drop-down list provides **Time**, **Preset** and **Serial Info**. You may also select **Custom** and enter the content you want.
- After you have set the position and OSD content, the ✓ symbol appears in the **Status** column, which means that the OSD is set successfully. You may set multiple lines of contents for each area and use ^ and v to adjust the sequence of display.

## 3. After you have completed the settings, a message appears to indicate the successful settings.

You may right-click in the preview window and then choose to view in full screen mode or at an aspect ratio. You may also double-click the preview window to enter or exit full screen mode.

To cancel OSD for an area, clear the OSD content in the **Overlay OSD Content** column or select **None** in the **Position** column.

The following shows an example time OSD.



## Privacy Mask


On certain occasions, you may need to set a mask area on the camera image to protect privacy, for example, the keyboard of an ATM machine. When PTZ changes its position or zooms, the Privacy Mask will be adjusted accordingly to protect the area all along.




### NOTE!

- This function may vary with models. Please see the actual Web interface for details.
- Some models support up to 24 privacy masks. The same picture shows up to only 8 privacy masks.

#### 1. Click **Setup>Image>Privacy Mask**.

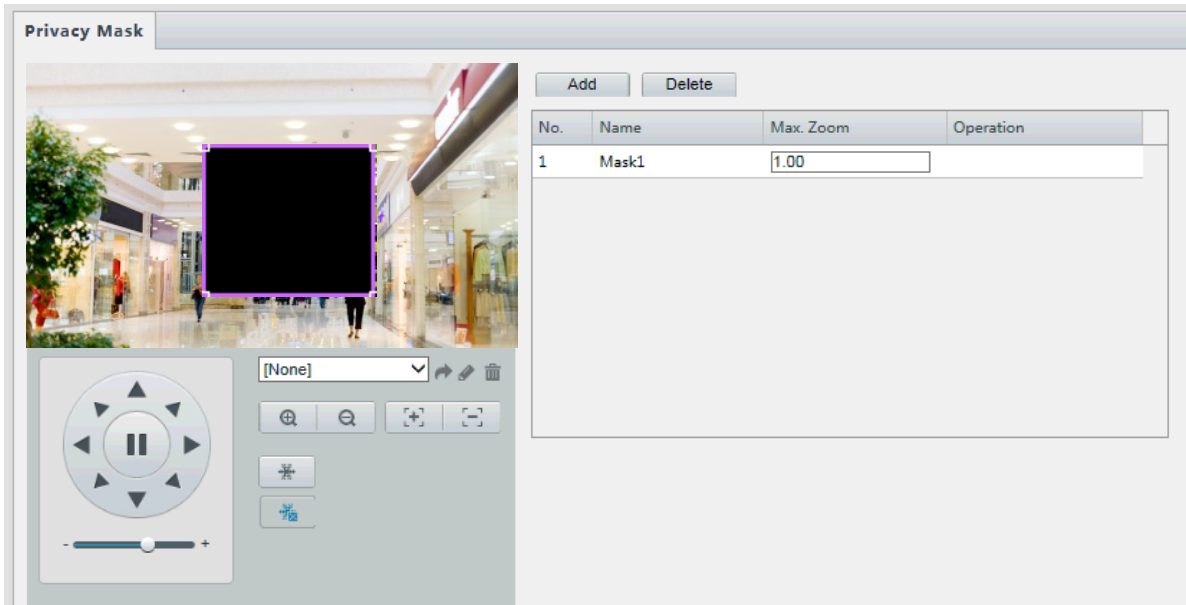

For some camera models, the page is displayed as follows:

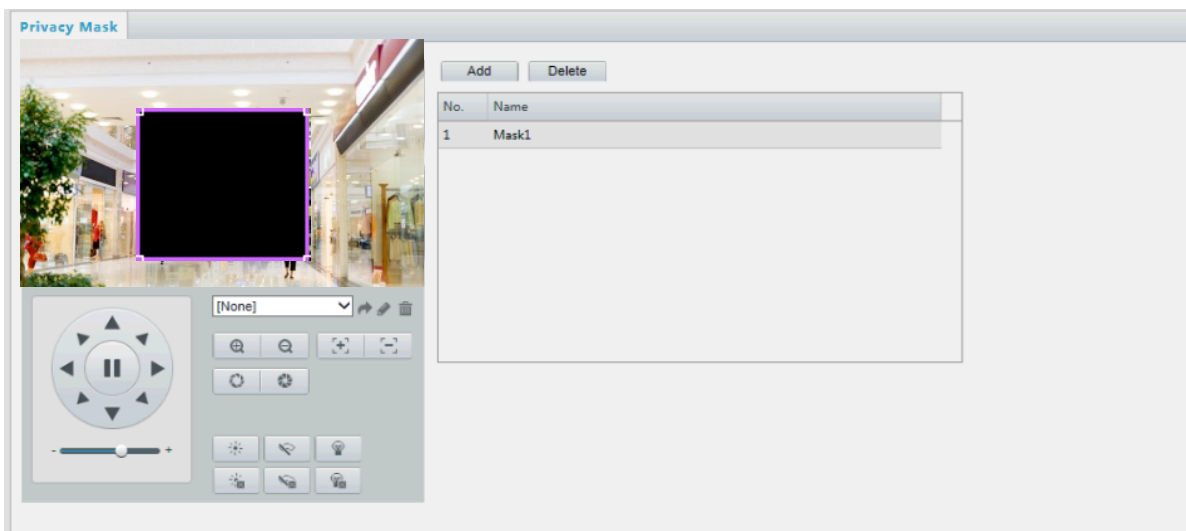

2. Click **+** to add a privacy mask, and click to delete a mask.
  - To mask a position: Click the box (with **Mask** displayed on it) to activate the mask. After the cursor shape has changed, drag the box to the intended position.
  - To mask an area: Use the mouse to draw a box on the area you want to mask.

When privacy mask is configured, the intended area is blocked. The following shows an example.

3. Set mask mode. You may select regular or irregular mode as needed. In irregular mode, when the PTZ camera rotates, the privacy mask varies with the shape of the masked object in the image.



---

**NOTE!**

- Mask mode is only available to certain models.
- 

## Audio and Video

### Video

You can set video parameters that your camera supports and view the current status of BNC output. If available, you may also enable sub-stream and third stream as required.



---

**NOTE!**

- This function may vary with models. Only some camera models support the third stream. To determine if your camera supports this function, see the Web interface.
  - After enabling the sub or third stream, modify the parameters as required. The parameters for the sub and third stream have the same meanings as that for the main stream.
- 

1. Click **Setup>Video & Audio>Video**.

Capture Mode: 1080P@25

**Main Stream**

Video Compression: H.264

Resolution: 1080P

Frame Rate(fps): 25

Bit Rate(Kbps): 4096 [128~16384]

Bitrate Type: CBR

Image Quality: Quality / Bit Rate (slider)

I Frame Interval: 50 [5 ~ 250]

GOP: IP

Smoothing: Clear / Smooth (slider)

SVC:  On  Off

U-Code: Off

**BNC Output**

Mode: PAL

2. Modify the settings as required. The following table describes some major parameters.

Parameter	Description
Video Compression	<p>Three options: H.265, H.264 and MJPEG.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Image Quality cannot be set when Video Compression is set to H.265 or H.264. When set to MJPEG, only three frame rates are available: 1, 3 and 5; and Bit Rate, I Frame Interval, Smoothing and U-Code cannot be set.</li> <li>The bit rate changes to the default when you change the setting between H.264 and H.265. The default bit rate for H.265 is half of that for H.264.</li> </ul>
Frame Rate	<p>Frame rate for encoding images. Unit: FPS (frame per second).</p> <p><b>Note:</b></p> <p>To ensure image quality, note that the frame rate should not be greater than the reciprocal of shutter speed.</p>
Bitrate Type	<ul style="list-style-type: none"> <li>CBR: Constant Bit Rate, which means that the camera transmits data at a constant data rate.</li> <li>VBR: Variable Bit Rate, which means that the camera adjusts the bit rate dynamically according to image quality.</li> </ul>
Image Quality	<p>When <b>Encoding Mode</b> is <b>VBR</b>, you can move the slider to adjust quality level for images. Moving the slider toward <b>Bit Rate</b> decreases the bit rate and may affect image quality. Moving the slider toward <b>Quality</b> increases the bit rate and improves image quality.</p>
I Frame Interval	<p>Interval at which an I frame is encoded. Normally, a shorter I frame interval offers better image quality but consumes more bandwidth.</p>
GOP	<p>Group Of Pictures in MPEG video encoding. This parameter specifies the order in which intra-frames (I frame) and inter-frames are arranged.</p>
SVC	<p>SVC (Scalable Video Coding) can reduce storage without compromising playback quality.</p>
U-Code	<ul style="list-style-type: none"> <li>Basic Mode: The actual bit rate is around 3/4 of the set bit rate.</li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>Advanced Mode: The actual bit rate is around 1/2 of the set bit rate.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When U-Code is enabled, video compression only supports H.264 and H.265. MJPEG is not supported.</li> <li>When U-Code is enabled, the capture mode does not support frame rates higher than 30.</li> </ul>
Smoothing	Set the extent of smoothing. Choosing <b>Clear</b> means disabling <b>Smoothing</b> . Moving the slider toward <b>Smooth</b> increases the level of smoothing but will affect image quality. <p><b>Note:</b></p> In a poor network environment, you can enable smoothing to get more fluent video.
BNC Output	BNC output supports NTSC and PAL.

3. Click **Save**.

## Audio

Audio configuration means setting audio encoding parameters for your camera.



### NOTE!

This function is not supported by some models. Please see the actual model for details.

1. Click **Setup>Video & Audio>Audio**.

**Audio Input**

Audio Input  On  Off

Access Mode

Input Gain

Audio Compression

Sampling Rate(KHz)

Noise Suppression  On  Off

Channel 1   Enable

---

**Audio File**

Alarm Audio File

Note: PCM file only. File size must be less than 100K.

No.	Audio	delete
1	You_are_in_the_alert_area!_Please_leave!	Built-in

2. Modify the settings as required. The following table describes some major parameters.

Parameter	Description
Audio Input	No audio data will be encoded when <b>Off</b> is selected. <p><b>Note:</b></p> It is recommended to select <b>Off</b> if you do not need audio. This can improve device performance to some extent.
Access Mode	Currently only Line/Mic. <p><b>Note:</b></p>

Parameter	Description
	This function is not available to devices with two audio output channels.
Audio Compression	Two options: G.711U, G.711A. G.711U and G.711A support 8K sampling rate only.
Input Gain	Audio signal amplification for sampling. The greater the gain, the greater amplification.
Noise Suppression	Used to reduce noise in images. To enable noise suppression, select <b>On</b> .
Channel	Audio output channel. To enable audio output, select <b>Enable</b> . <b>Note:</b> Only some camera models support two channels.
Audio File	Import custom audio files. <b>Note:</b> Only PCM audio files are allowed, and the max size of a PCM file is 100K.

3. Click **Save**.

## Snapshot

1. Click **Setup>Video & Audio>Snapshot**.

Snapshot  On  Off

Resolution

Most Large(KB)

**Scheduled Snapshot**

Snapshot Interval

Number to Snapshot

Snapshot Mode  Schedule  Repeat

No.	Snapshot Time	
1	19:12:00	

2. Select **On**, and then set resolution, mostlarge and schedule as needed. Some parameters are described in the table below.

Parameter	Description
Snapshot Interval	Interval between two snapshots. For example, with Snapshot Interval set to 1 and Number of Snapshot set to 2, the camera will take 2 snapshots (take one first and then take another after 1 second).
Number to Snapshot	Currently 1, 2, and 3 snapshots are allowed.

Parameter	Description
Snapshot Mode	<p><b>Schedule:</b> You need to set a snapshot time, e.g., 19:12:00, which means the camera takes a snapshot at 19:12:00.</p> <p><b>Repeat:</b> Allows you to set an interval(unit: sec). For example, according to the settings shown in the figure above, 60 seconds must elapse before the camera takes another two snapshots.</p>

3. Click **Save**.

## ROI

When Region of Interest (ROI) is enabled, the system ensures image quality for ROI first if the bit rate is insufficient.



### NOTE!

This function is not supported by some models. Please see the actual model for details.

1. Click **Setup>Video & Audio>ROI**.



2. Click **+**, and then drag the mouse to cover the intended part of the images. To delete, select the area and then click **🗑**.

## Media Stream

### Media Stream

You can display the established media streams from a camera. You may also set the camera so it transmits code streams by the UDP or TCP protocol to a specified IP address and port number. The settings can be saved and take effect after the camera is restarted.






### NOTE!

- This function is not supported by some models. Please see the actual model for details.
- Choosing a transport protocol based on your actual needs and network performance. Generally speaking, TCP enables better image quality than UDP but also causes higher latency.

1. Click **Setup>Video & Audio>Media Stream**.

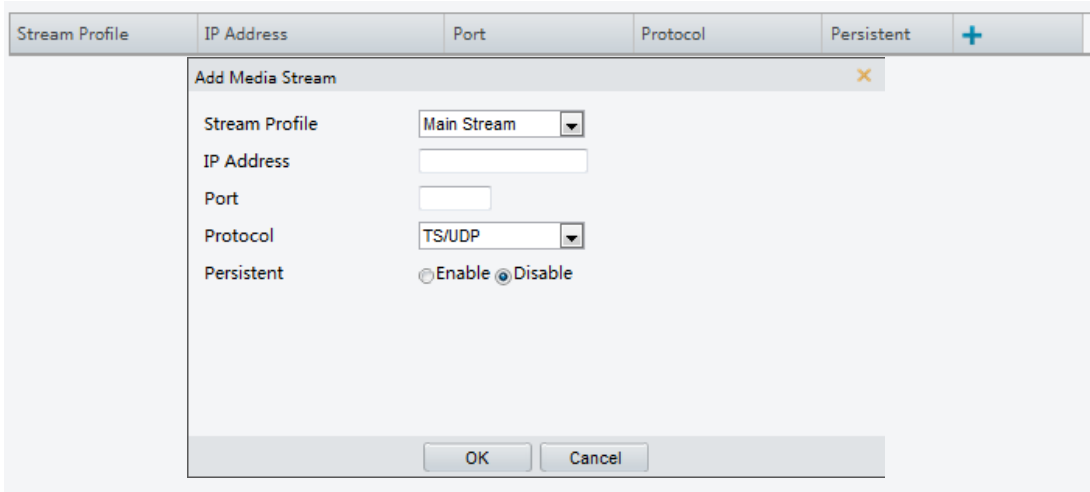



2. Click , select a stream type, and then set the IP address and port number of the unicast or multicast group for the decoding device that receives audio and video streams from the camera.  
If you want the device to establish the media stream that has been configured before automatically after the restart, select **Yes** for **Persistent**.
3. To delete a stream, click .
4. Click **Submit** to complete the operations.

### RTSP Multicast Address

After an RTSP multicast address is configured, the third-party player can request the RTSP multicast media stream from the camera through the RTP protocol.

1. Click **Setup>Video & Audio>Media Stream> RTSP Multicast Address**.

For some camera models, the page is displayed as follows.

<b>Main Stream</b>	
Multicast Address	<input type="text" value="0.0.0.0"/>
Port	<input type="text" value="0"/>
<b>Sub Stream</b>	
Multicast Address	<input type="text" value="0.0.0.0"/>
Port	<input type="text" value="0"/>
<b>Third Stream</b>	
Multicast Address	<input type="text" value="0.0.0.0"/>
Port	<input type="text" value="0"/>
Multicast Address	<input type="text" value="0.0.0.0"/>
Port	<input type="text" value="0"/>
Multicast Address	<input type="text" value="0.0.0.0"/>
Port	<input type="text" value="0"/>
Multicast Address	<input type="text" value="0.0.0.0"/>
Port	<input type="text" value="0"/>

2. Set the multicast address (224.0.0.0to239.255.255.255) and port number (0 to65535).
3. Click **Save**.

## Intelligent

You can configure intelligent monitoring to count people and monitor moving objects. Intelligent monitoring includes people counting, intrusion detection, and auto tracking.


The supported functions may vary with camera model.

## Smart

Click **Setup>Intelligent>Smart** .

<input type="checkbox"/> Cross Line	<input type="checkbox"/> Enter Area	<input type="checkbox"/> Leave Area	<input type="checkbox"/> Intrusion
<b>Exception Detection &amp; Statistics</b>			
<input type="checkbox"/> Object Removed	<input type="checkbox"/> Object Left Behind		
<b>Object Detection</b>			
<input checked="" type="checkbox"/> Face	<input type="checkbox"/> Mixed-Traffic Detection		
<b>People Counting</b>			
<input type="checkbox"/> People Counting			
<b>Auto Tracking</b>			
<input type="checkbox"/> Auto Tracking			

For some camera models, the page is displayed as follows.

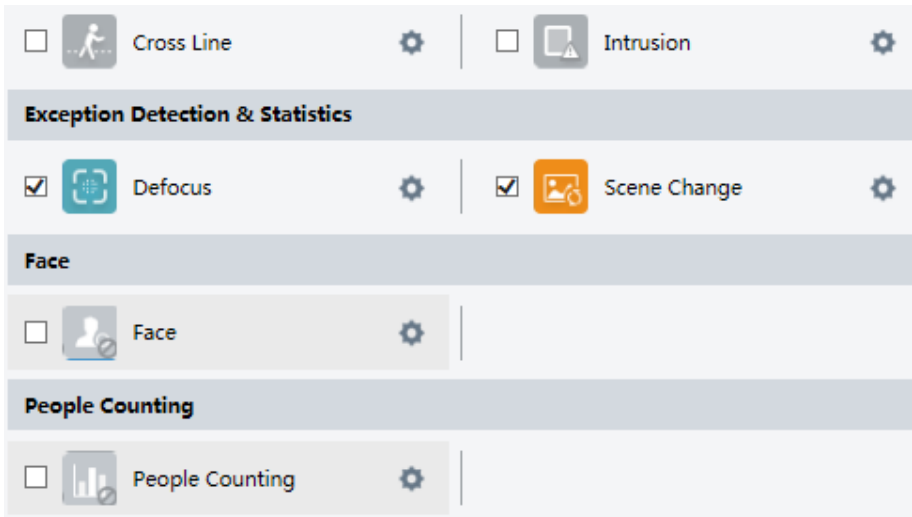


### Cross Line Detection


Cross line detection detects objects that cross a virtual line in live video and triggers alarm when such an event is detected.





#### NOTE!

- Only some camera models support this function.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.
- The camera takes the snapshot and sends the snapshot to the back end.

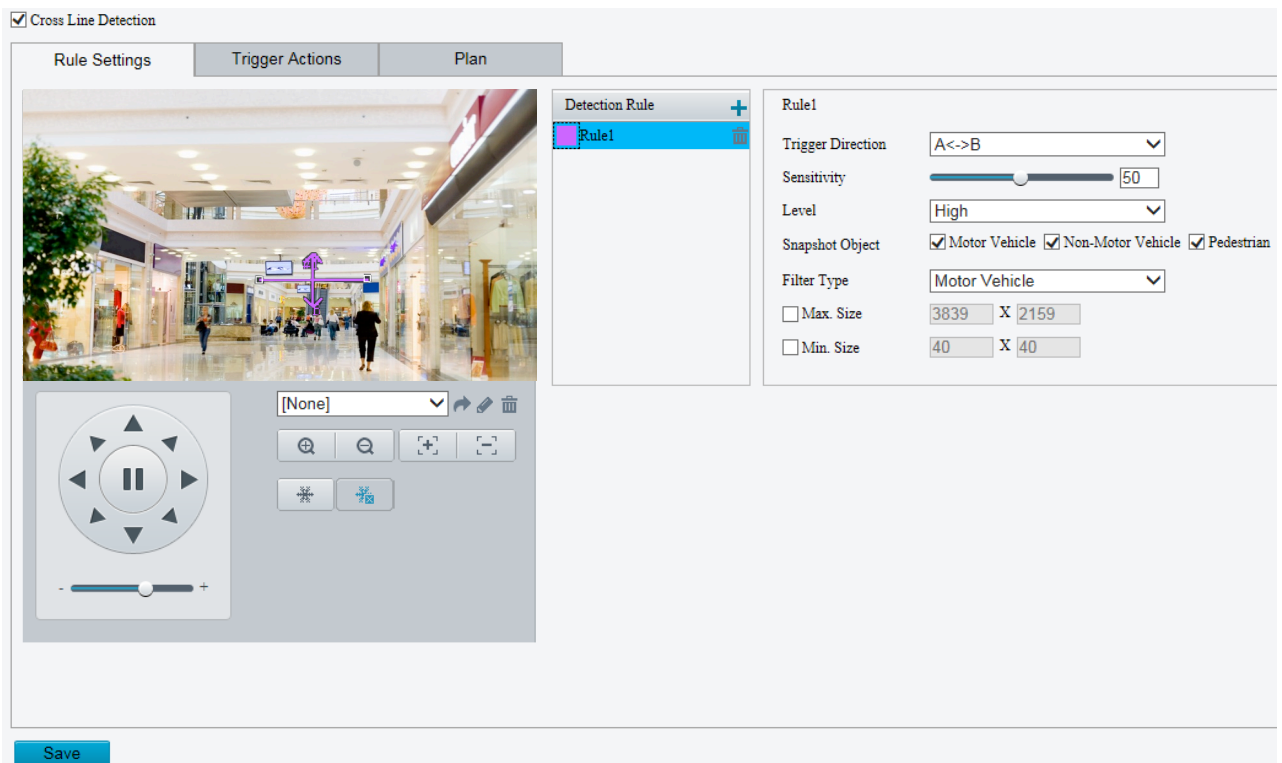1. Click **Setup > Intelligent > Smart**. Choose **Cross Line** and then click .



2. Select **Cross Line Detection**.

3. In the **Detection Rule** area, click  to add a new detection area. To delete a detection area, click .
4. On the small preview window, drag the line to the intended position and set the detection range.
5. Set the direction and sensitivity for the camera to decide whether to report a cross line detection alarm.
6. Set the priority of detection to judge the trigger sequence when detection rules are triggered at the same time.
7. Set snapshot object type to judge whether to snap small pictures
8. Set object filter type and size, alarm-triggered actions and arming schedule as required.

Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in Events

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




#### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

Temperature Measurement

Enable Temperature Measurement

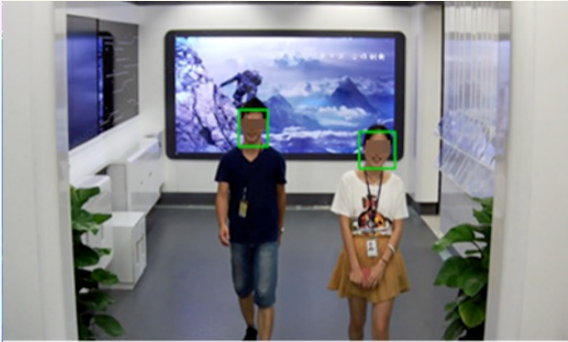

Temperature Unit Celsius (°C) ▼

Rule Type Measure Face ▼

Measurement Mode Measure Body Surface T ▼

**Alarm Rule**

Alarm Threshold


**Temperature Correction**

Black Body Temperature  Set Black Body Position

Correction Temperature

Environment Temperature

Save

1. Preparation
  - a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.
  - b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.
2. Configuration
  - Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.

- a. Measure body surface temperature: This mode is suitable for precise measurement.
- b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - a. The black body temperature is 36°C by default and cannot be changed.
  - b. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - c. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



### NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

3. Common Alarm.

4. Click **Save**.


### Enter Area



Enter Area detection detects objects that enter a specified area, and triggers alarm when such an event is detected.



### NOTE!

- Only some camera models support this function.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.
- The camera takes the snapshot and sends the snapshot to the back end.

1. Click Setup > Intelligent > Smart. Choose Enter Area, and then click .

2. Select Enter Area Detection.
3. In Rule Settings area, click  to add a new detection area. To delete a detection area, click .
4. Drag the borders of the box to set the intended position and range.
5. Set detection sensitivity for the camera to decide whether to report an alarm.
6. Set the priority of detection to judge the trigger sequence when detection rules are triggered at the same time.
7. Set snapshot object type to judge whether to snap small pictures.
8. Set object filter type and size, alarm-triggered actions and arming schedule as required.

Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in [Events](#)

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




#### NOTE!


- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

Temperature Measurement

Enable Temperature Measurement

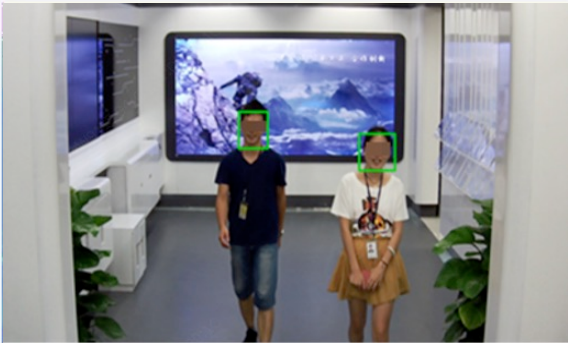

Temperature Unit	<input type="text" value="Celsius (°C)"/>
Rule Type	<input type="text" value="Measure Face"/>
Measurement Mode	<input type="text" value="Measure Body Surface T"/>
<b>Alarm Rule</b>	
Alarm Threshold	<input type="text" value="37.3"/>
<b>Temperature Correction</b>	
Black Body Temperature	<input type="text" value="36.0"/> <a href="#">Set Black Body Position</a>
Correction Temperature	<input type="text" value="0.0"/>
Environment Temperature	<input type="text" value="25.0"/>

1. Preparation
  - a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.
  - b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.
2. Configuration

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
    - a. Measure body surface temperature: This mode is suitable for precise measurement.
    - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
  - Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
  - Set temperature correction parameters.
    - c. The black body temperature is 36°C by default and cannot be changed.
    - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
    - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.
- 



### NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
  - The black body should be kept facing the camera.
  - The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.
- 

3. Common Alarm.

4. Click Save.

### Leave Area


Leave Area detection detects objects that leave a specified area, and triggers alarm when such an event is detected.


---





### NOTE!

- Only some camera models support this function.
  - The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.
  - The camera takes the snapshot and sends the snapshot to the back end.
- 

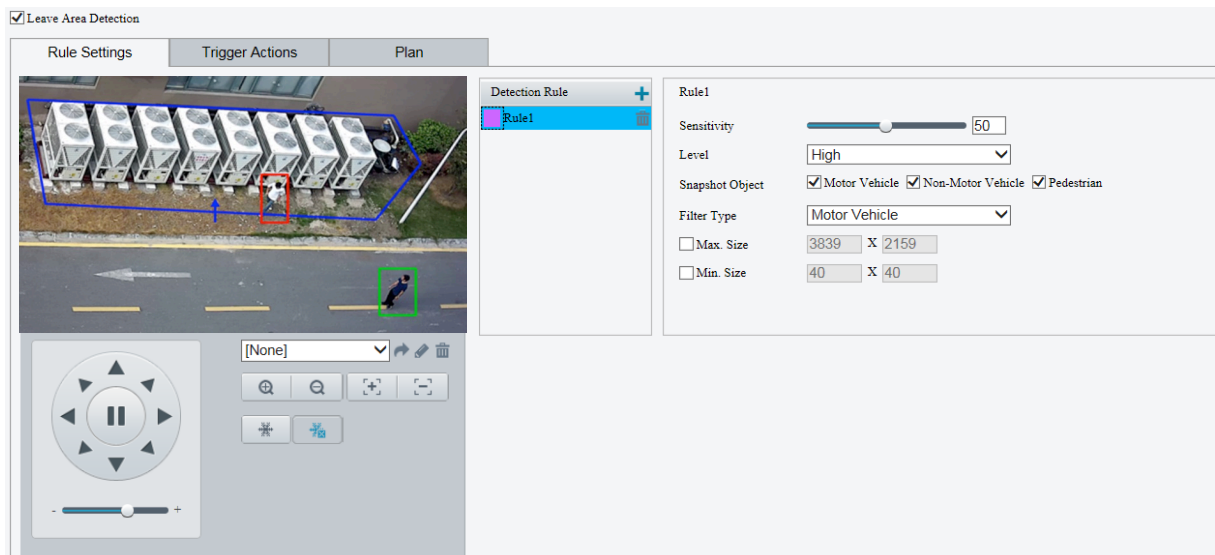1. Click Setup > Intelligent > Smart. Choose Leave Area, and then click  .



2. Select Leave Area Detection.
3. In Rule Settings area, click  to add a new detection area. To delete a detection area, click .
4. Drag the borders of the box to set the intended position and range.
5. Set detection sensitivity for the camera to decide whether to report an alarm.
6. Set the priority of detection to judge the trigger sequence when detection rules are triggered at the same time.
7. Set snapshot object type to judge whether to snap small pictures.
8. Set object filter type and size, alarm-triggered actions and arming schedule as required.

**Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in Events**

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures.

Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




#### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.



**Temperature Measurement**

Enable Temperature Measurement

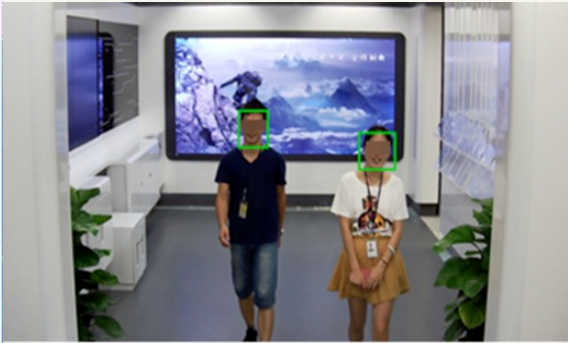

Temperature Unit:

Rule Type:

Measurement Mode:

**Alarm Rule**

Alarm Threshold:

**Temperature Correction**


Black Body Temperature:

Correction Temperature:

Environment Temperature:

### 1. Preparation

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

### 2. Configuration

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



### NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

3. Common Alarm.

4. Click Save.

## Intrusion Detection


Intrusion detection detects objects that enter a specified area in live video and triggers alarm when such an event is detected.



### NOTE!

- Only some camera models support this function.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.
- The camera takes the snapshot and sends the snapshot to the back end.

1. Click **Setup > Intelligent > Smart**. Choose **Intrusion** and then click

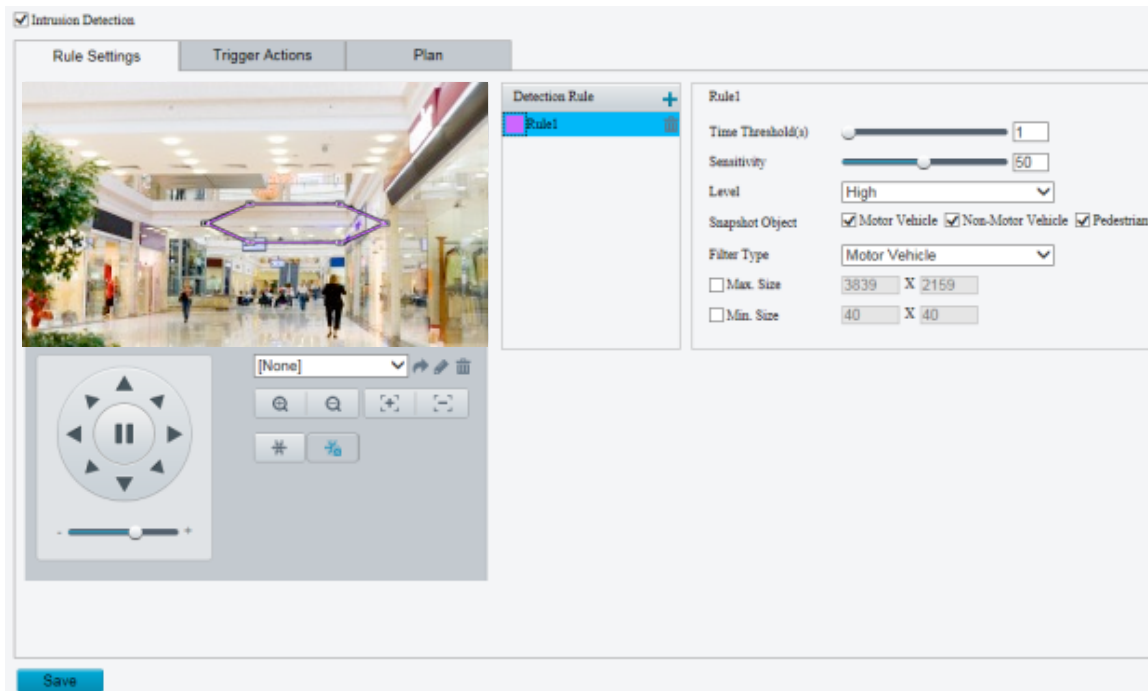

2. Select **Intrusion Detection**.
3. In the **Detection Rule** area, click to add a new detection area. To delete a detection area, click .
4. Drag the borders of the box to set the intended position and range.
5. Set time threshold, sensitivity for the camera to decide whether to report an intrusion detection alarm.
  - Time Threshold: The minimum length of time that the intruder stays in the detection area before an alarm will be reported.
  - Sensitivity: Sensitivity of detection. A greater value means higher detection sensitivity.
6. Set the priority of detection to judge the trigger sequence when detection rules are triggered at the same time.
7. Set snapshot object type to judge whether to take small pictures

**Set object filter type and size, alarm-triggered actions and arming schedule as required. Set the alarm-triggered actions and arming**

schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in **Events**

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.



#### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

Temperature Measurement

Enable Temperature Measurement

Temperature Unit: Celsius (°C)

Rule Type: Measure Face

Measurement Mode: Measure Body Surface T

Alarm Rule

Alarm Threshold: 37.3

Temperature Correction

Black Body Temperature: 36.0 [Set Black Body Position](#)


Correction Temperature: 0.0

Environment Temperature: 25.0

Save

#### 1. Preparation

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

#### 2. Configuration

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



## NOTE!


- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.


3. Common Alarm.

4. Click **Save**.



### Object Moving

Detect objects left behind in the specified area and trigger alarms.

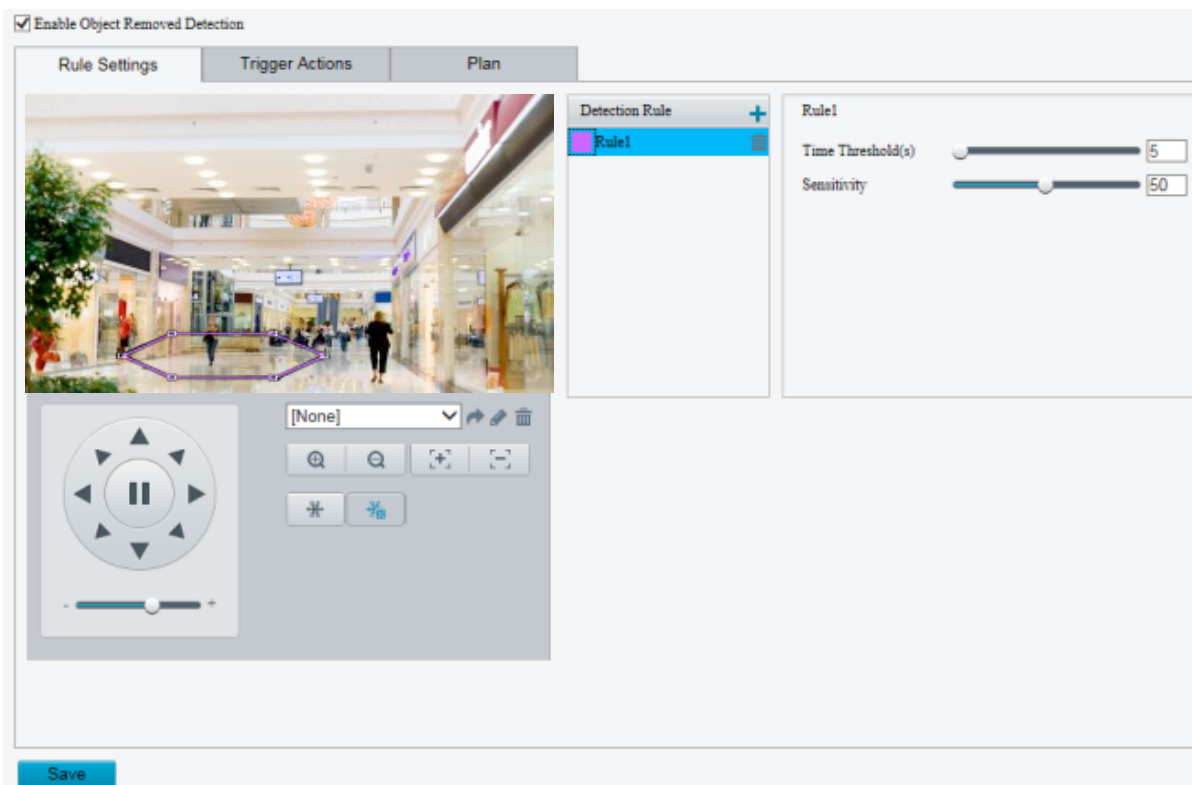1. Click **Setup > Intelligent > Smart**. Choose **Object Moving** and then click .



2. Select **Enable Object Moving Detection**.

3. In the **Detection Rule** area, click  to add a detection area. To delete, click .

4. Drag the box to set the position and effective range.

5. Set time threshold and sensitivity to decide whether to report an intrusion detection alarm.

- **Time threshold:** Minimum duration an object is detected in the specified area to trigger an alarm.
- **Sensitivity:** The greater the number, the higher the sensitivity. An alarm is reported if an object is detected in the specified area for the specified length of time.

# Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in Events

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.



#### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

Temperature Measurement

Enable Temperature Measurement

Temperature Unit: Celsius (°C)

Rule Type: Measure Face

Measurement Mode: Measure Body Surface T

Alarm Rule

Alarm Threshold: 37.3


Temperature Correction

Black Body Temperature: 36.0 [Set Black Body Position](#)

Correction Temperature: 0.0

Environment Temperature: 25.0

Save

1. Preparation
  - a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.
  - b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.
2. Configuration
  - Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
    - a. Measure body surface temperature: This mode is suitable for precise measurement.
    - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
  - Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
  - Set temperature correction parameters.
    - a. The black body temperature is 36°C by default and cannot be changed.
    - b. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.

e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



## NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

3. Common Alarm.

4. Click **Save**.

## Object Left

Detect objects left behind in the specified area and trigger alarms.

1. Click **Setup>Intelligent>Smart**. Choose **Object Left** and then click

Enable Object Left Behind Detection

Rule Settings | Trigger Actions | Plan

Detection Rule

- Rule1

Rule1

Time Threshold(s) 10

Sensitivity 50

Save

2. Select **Enable Object Left Detection**.

3. In the **Detection Rule** area, click to add a detection area. To delete, click .

4. Drag the box to set the position and effective range.

5. Set time threshold and sensitivity to decide whether to report an intrusion detection alarm.

- **Time threshold:** Minimum duration an object is detected in the specified area to trigger an alarm.
- **Sensitivity:** The greater the number, the higher the sensitivity. An alarm is reported if an object is detected in the specified area for the specified length of time.

# Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in Events

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.



#### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

Temperature Measurement

Enable Temperature Measurement

Temperature Unit: Celsius (°C)

Rule Type: Measure Face

Measurement Mode: Measure Body Surface T

Alarm Rule

Alarm Threshold: 37.3


Temperature Correction

Black Body Temperature: 36.0 [Set Black Body Position](#)

Correction Temperature: 0.0

Environment Temperature: 25.0

Save

1. Preparation
  - a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.
  - b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.
2. Configuration
  - Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
    - a. Measure body surface temperature: This mode is suitable for precise measurement.
    - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
  - Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
  - Set temperature correction parameters.
    - a. The black body temperature is 36°C by default and cannot be changed.
    - b. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.

e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



### NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

3. Common Alarm.

4. Click **Save**.


### Mixed -Traffic Detection


Mixed-traffic detection detects motor vehicles, non-motor vehicles, and pedestrians in configured area.



### NOTE!

- Only some camera models support this function, and the actual interface may vary.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.
- The camera takes the snapshot and sends the snapshot to the back end.

1. Click Setup > Intelligent > Smart. Choose Mixed-Traffic Detection, and then click .

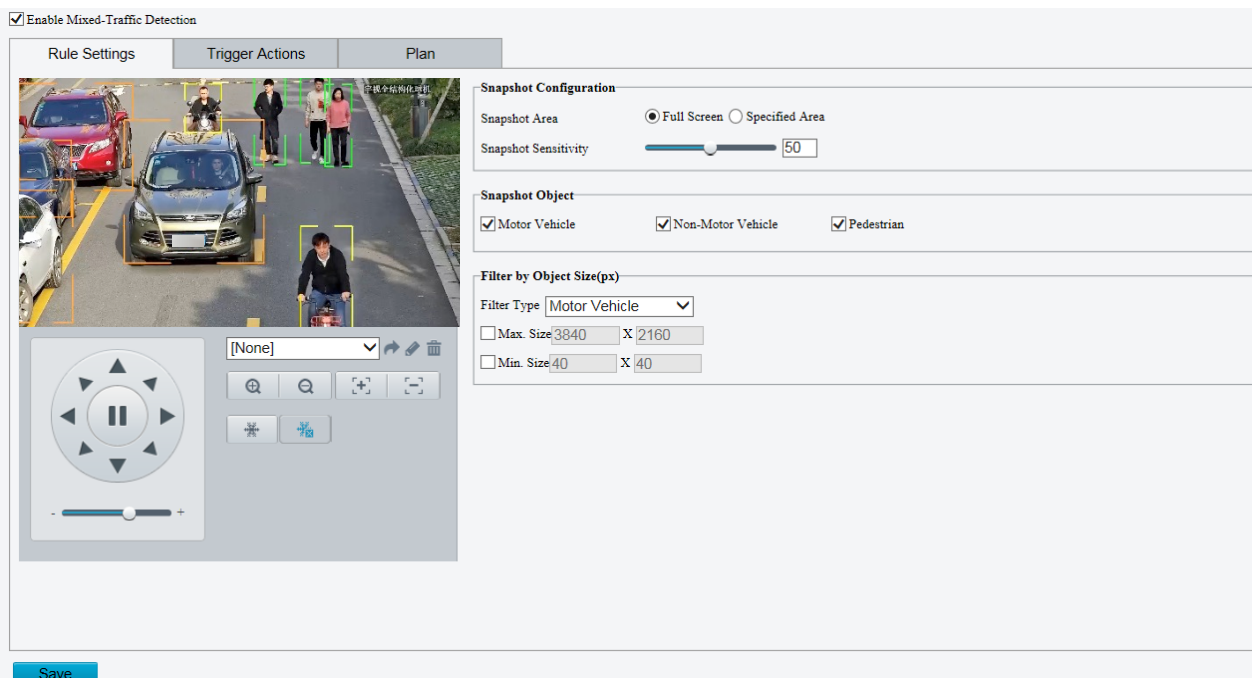

2. Choose Full Screen or Specified Area as detection area.

3. Set snapshot sensitivity. The greater the value, the higher the sensitivity.

4. Set snapshot object type to judge whether to snap small pictures.

5. Set object filter type and size, alarm-triggered actions and arming schedule as required.



# Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in Events

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.



#### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

Temperature Measurement

Enable Temperature Measurement

Temperature Unit: Celsius (°C)

Rule Type: Measure Face

Measurement Mode: Measure Body Surface T

Alarm Rule

Alarm Threshold: 37.3


Temperature Correction

Black Body Temperature: 36.0 [Set Black Body Position](#)

Correction Temperature: 0.0

Environment Temperature: 25.0

Save

1. Preparation
  - a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.
  - b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.
2. Configuration
  - Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
    - a. Measure body surface temperature: This mode is suitable for precise measurement.
    - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
  - Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
  - Set temperature correction parameters.
    - a. The black body temperature is 36°C by default and cannot be changed.
    - b. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.

- e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



## NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

3. Common Alarm.

4. Click Save.

## Face Detection


Face detection detects faces in the configured area.



## NOTE!

- Only some camera models support this function, and the actual interface may vary.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.
- The camera takes the snapshot and sends the snapshot to the back end, which will compare the data with that in the database.

1. Click Setup > Intelligent > Smart. Choose Face, and then click .

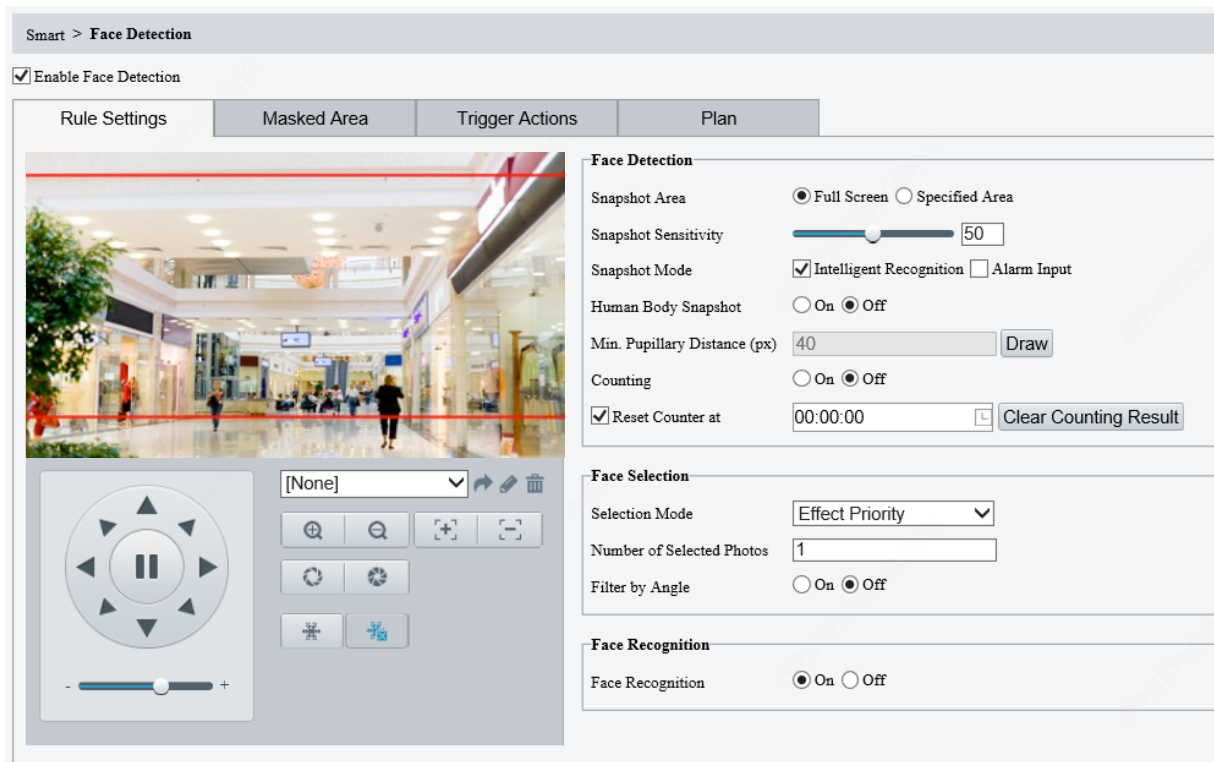

2. Choose Full Screen or Specified Area as detection area.
3. Set snapshot sensitivity. The greater the value, the higher the sensitivity.

4. Set snapshot mode. In Intelligent Recognition, the camera detects and snapshots the object automatically.
5. To enable snapshot of human body in the detection area, enable Human Body Snapshot.
6. Set face counting direction. The counting results including people left and people entered statistics appear on live view. You need to select People Counting in OSD settings. Refer to “OSD Setting” Set OSD.for details.



**NOTE!**

- If Counting is disabled, counting direction setting will not show.
- After enabling Counting, select Enter or Leave according to the direction of your camera.
- The camera can send the counting statistics to managing platform.

7. Set minimum pupillary distance. Click Draw and then draw in the left live view window.
8. Enable face overlay, then a box will be added to the detected faces in the snapshot.
9. Click Clear Counting Result to clear statistics.
10. Configure face selection as required. The following table describes some major parameters:

Item	Description
Selection Mode	<ul style="list-style-type: none"> <li>• Effect Priority: The camera selects snapshots with best image quality from the captured. You can set the number of photos to select.</li> <li>• Speed Priority: The camera selects the optimal snapshots from the moment that the face is detected till <b>Selection Timeout</b> is up. You can set the number of photos to select.</li> <li>• Periodic Selection: The camera selects a snapshot in every selection period. For example, if <b>Selection Period</b> is set to 500ms, the camera selects a face snapshot every 500ms, and if <b>Upload Original Image</b> is selected, both the original snapshot containing the face and the face cutout will be uploaded.</li> </ul>

Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in Events

**Thermal Alarm**

**Temperature Measurement**

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




**NOTE!**

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

**Temperature Measurement**

Enable Temperature Measurement

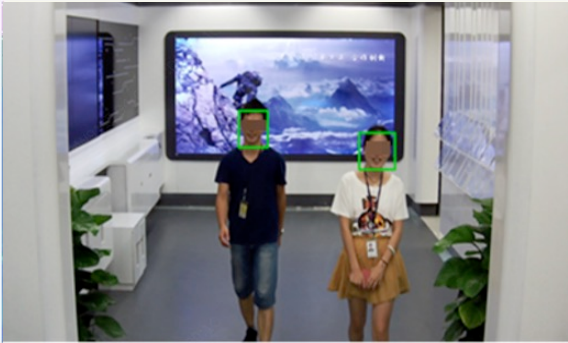

Temperature Unit:

Rule Type:

Measurement Mode:

**Alarm Rule**

Alarm Threshold:

**Temperature Correction**


Black Body Temperature:  [Set Black Body Position](#)

Correction Temperature:

Environment Temperature:

### 1. Preparation

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

### 2. Configuration

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



### NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

### 3. Common Alarm.

4. Click Save.

### Face Picture Comparison


The camera compares the captured faces with the face pictures in face library and reports comparison results.





## NOTE!

- Only some models support this function, and the actual Web interface may vary.
- The supported actions to trigger and arming schedule may vary with camera model. Please see the actual Web interface for details.
- Face picture comparison and human body snapshot cannot be enabled at the same time.


1. Click **Smart > Intelligent > Smart**, choose Face, and click . Enable **Face Detection**, then enable **Face Recognition**.
2. Add face library.

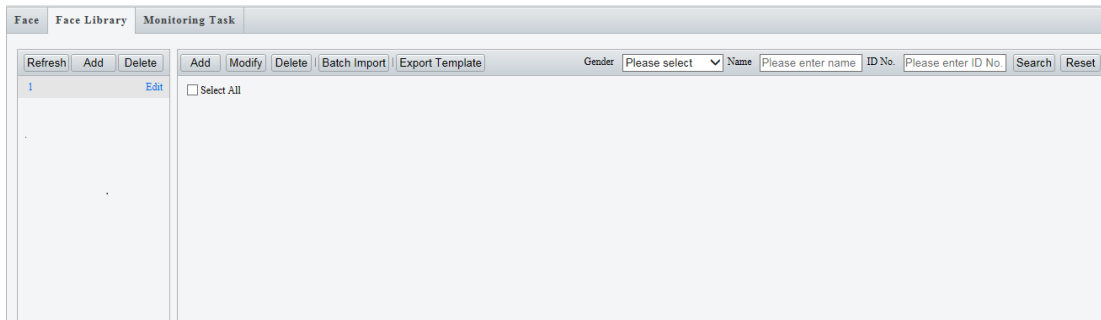

- a. Create face library: Click **Add**, and set library name.
- b. Add face data:

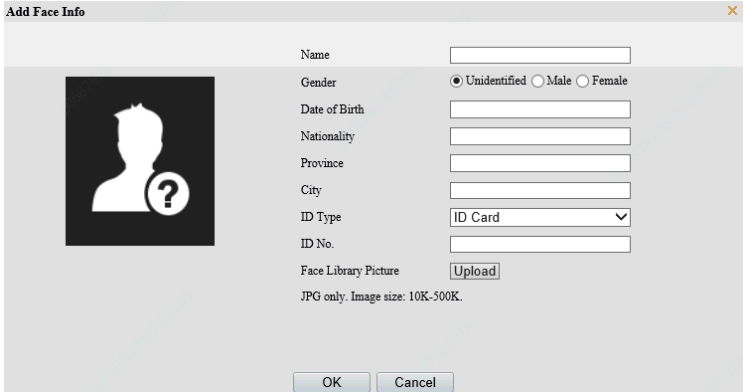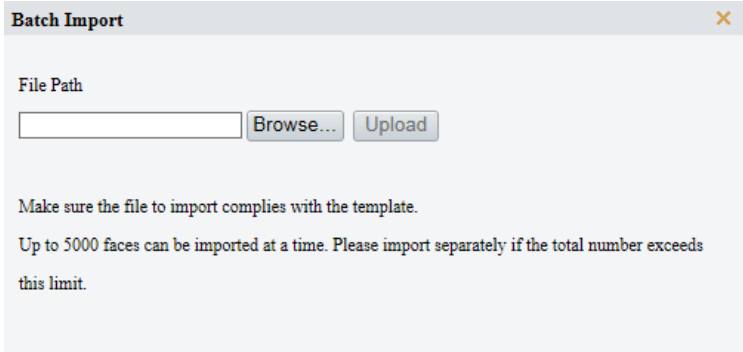Add Mode	Description
<p>Add a single piece of face data</p>	<p>Click <b>Add</b>, and enter personal information including name, gender, and date of birth.</p> 
<p>Batch import</p>	<p>Import a CSV file containing face data to add multiple pieces of data. Click <b>Batch Import</b>, select the file to import, and click <b>Upload</b>.</p> 

3. Add monitoring task.

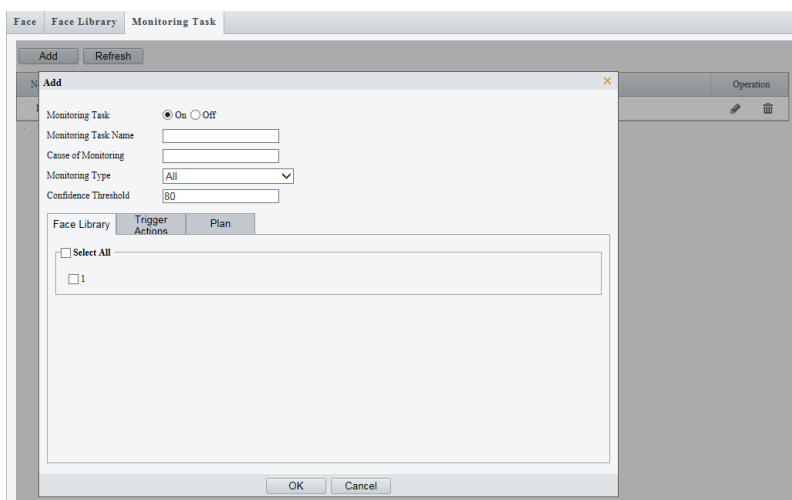

- Click **Add**, then set monitoring task name and cause of monitoring based on your needs.

Monitoring Type	Description
Match Alarm	<i>If the similarity between a captured face and a face in the monitored library reaches the confidence threshold, the device reports a match alarm and perform the set triggered actions.</i>
Not Match Alarm	<i>If the similarity between a captured face and a face in the monitored library fails to reach the confidence threshold, the device reports a not match alarm and perform the set triggered actions.</i>
Alarm	<i>The device reports an alarm and perform the set triggered actions at a face detected whether the confidence threshold is reached.</i>

- To edit a monitoring task, click .



### NOTE!

The higher the confidence threshold, the higher the sensitivity.


- Select the face library to monitor, and set the actions to trigger and arming plan.

### People Counting




### NOTE!

- Only some camera models support this function.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.

1. Click **Setup > Intelligent > Smart**. Choose **People Counting** and then click .

Enable Passenger Flow Detection

Rule Settings      Plan

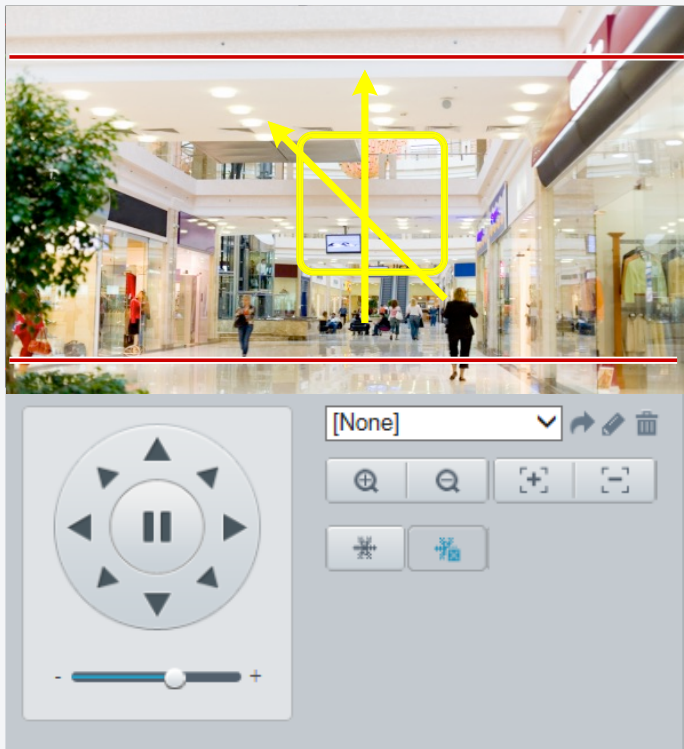

Counting Type: Total

Detection Mode: Indoor

Reset Counter at: 00:00:00

Sensitivity: 50

Draw Detection Area

Draw Entrance Direction

Filter by Object Size (Width X Height)(px)

Max. Size: 439 X 439

Min. Size: 240 X 240

Tip: Please set the detection area between the two red lines to achieve the best detection effect.

Clear Counting Result

Save

2. Select **Enable Passenger Flow Detection**. Select a detection mode, set report interval and sensitivity.
3. Click **Draw Detection Area**, and then draw a detection area on the preview window on the left, e.g., a square.
4. Click **Draw Entrance Direction**, and then draw the direction on the preview window on the left. The direction is usually vertical or sloping.
5. Set **Max. Size** and **Min. Size** under **Filter by Object Size**. Only objects within the size range will be counted; others will be filtered and not counted. The maximum width or height must be greater than the minimum width or height.

Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in **Events**

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




## NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

### Temperature Measurement


Enable Temperature Measurement



Temperature Unit	<input type="text" value="Celsius (°C)"/>
Rule Type	<input type="text" value="Measure Face"/>
Measurement Mode	<input type="text" value="Measure Body Surface T"/>
<b>Alarm Rule</b>	
Alarm Threshold	<input type="text" value="37.3"/>
<b>Temperature Correction</b>	
Black Body Temperature	<input type="text" value="36.0"/> <input type="button" value="Set Black Body Position"/>
Correction Temperature	<input type="text" value="0.0"/>
Environment Temperature	<input type="text" value="25.0"/>

### 1. Preparation

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

### 2. Configuration

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



## NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.



3. Common Alarm.
4. To reset counting results, click **Clear Counting Result**.
5. Click **Save**.


### Auto Tracking

The camera automatically tracks an object that triggers the rule.




#### NOTE!

- Only some camera models support this function.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.

1. Click **Setup > Intelligent > Smart**. Choose **Auto Tracking** and then click .

Enable Auto Tracking

Rule Settings



[None] ↶ ↷ 🗑

⊕ ⊖ + -

🔍 🔍

- | +

Parameters

Continuously Track

Max Tracking Time(s)


Zoom


Save

2. Set tracking timeout (unit: sec) and zoom ratio.
3. With Continuously Track selected, the camera continuously tracks an object that triggers the rule until target cannot be detected.
4. Click **Save**.

### Heat Map

The heat map uses different colors to display visitor traffic patterns. A dark color, red, for example, indicates higher traffic density.

1. Click **Setup > Intelligent > Smart**. Choose **Heat Map** and then click .

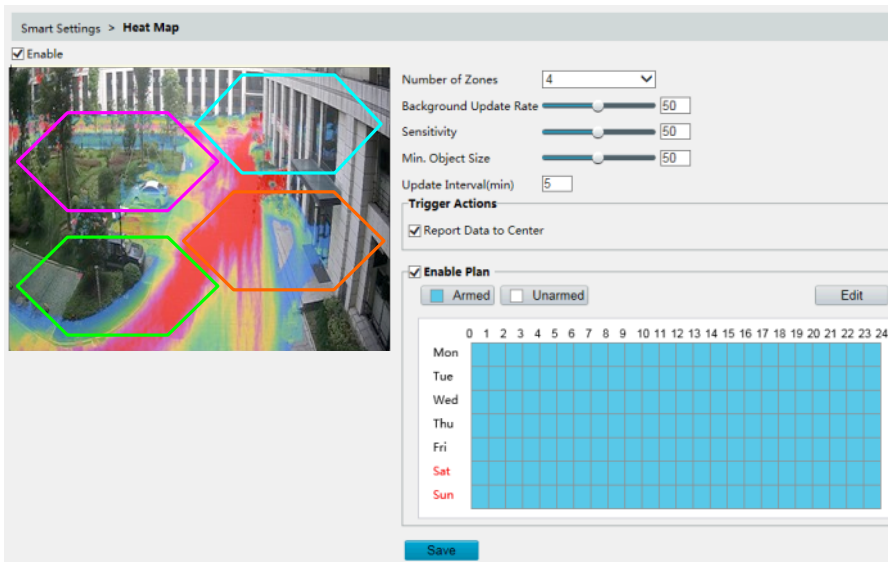

2. Select **Enable**.
3. Set **Background Update Rate**. The greater the value, the quicker the image refreshes.
4. Set **Sensitivity**. The greater the value, the more likely that small objects will be detected.
5. Set **Min. Object Size**. The greater the value, the more small objects will be ignored during detection.
6. Set update interval for reporting statistics to the platform.

Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in **Events**

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures.

Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




#### **NOTE!**

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

**Temperature Measurement**

Enable Temperature Measurement

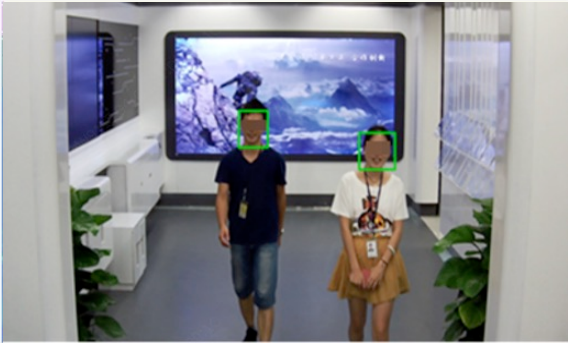

Temperature Unit:

Rule Type:

Measurement Mode:

**Alarm Rule**

Alarm Threshold:

**Temperature Correction**

Black Body Temperature:  [Set Black Body Position](#)


Correction Temperature:

Environment Temperature:

[Save](#)

**1. Preparation**

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

**2. Configuration**

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



**NOTE!**

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

**3. Common Alarm.**

**4. Click Save.**


## Defocus Detection




### NOTE!

- Only some camera models support this function.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.

Use defocus detection to detect defocus of the camera and to report an alarm when such an event is detected.

1. Click **Setup > Intelligent > Smart**. Choose **Defocus** and then click .

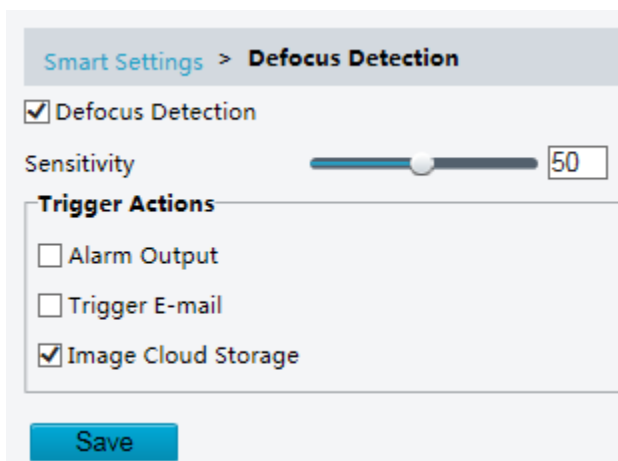

Smart Settings > Defocus Detection

Defocus Detection

Sensitivity  50

**Trigger Actions**

Alarm Output

Trigger E-mail

Image Cloud Storage

Save

2. Select **Defocus Detection**.

Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in [Events](#)

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures.

Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

**Temperature Measurement**

Enable Temperature Measurement

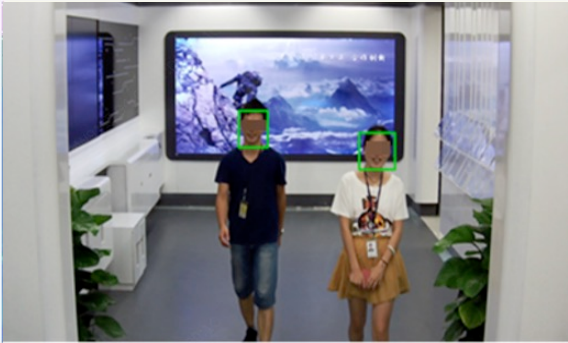

Temperature Unit:

Rule Type:

Measurement Mode:

**Alarm Rule**

Alarm Threshold:

**Temperature Correction**

Black Body Temperature:  [Set Black Body Position](#)


Correction Temperature:

Environment Temperature:

[Save](#)

**1. Preparation**

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

**2. Configuration**

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



**NOTE!**

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

**3. Common Alarm.**

**4. Click Save.**


## Scene Change Detection




### NOTE!

- Only some camera models support this function.
- The supported alarm triggering and arming schedule may vary with camera model. Please see the actual Web interface for details.

Use scene change detection to detect the change of surveillance environment caused by external factors such as intentional rotation of the camera, and to report an alarm when such an event is detected.

1. Click **Setup > Intelligent > Smart**. Choose **Scene Change** and then click .

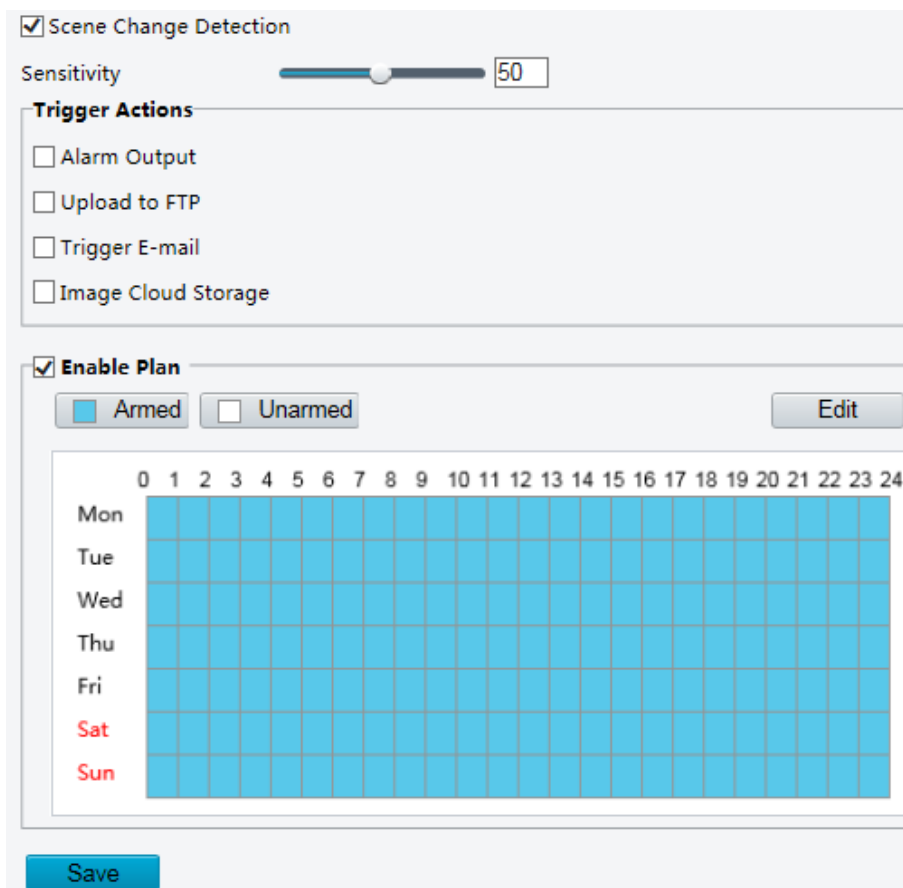

Scene Change Detection

Sensitivity  50

**Trigger Actions**

Alarm Output

Upload to FTP

Trigger E-mail

Image Cloud Storage

**Enable Plan**

Armed  Unarmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Mon	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active
Tue	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active
Wed	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active
Thu	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active
Fri	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active
Sat	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active
Sun	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active	Active

2. Select **Scene Change Detection**.
3. Set detection sensitivity.

Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in **Events**

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select **Setup > Events > Thermal Alarm**. Go to the **Temperature Measurement** tab.




## NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

### Temperature Measurement

Enable Temperature Measurement



Temperature Unit:

Rule Type:

Measurement Mode:

**Alarm Rule**

Alarm Threshold:

**Temperature Correction**


Black Body Temperature:  [Set Black Body Position](#)

Correction Temperature:

Environment Temperature:

### 1. Preparation

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

### 2. Configuration

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



## NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

3. Common Alarm.
4. Click **Save**.

### Master-Slave Linkage



#### NOTE!

- Only some camera models support this function.
- The supported linkage parameters, linkage mode and alarming schedule may vary with camera model. Please see the actual Web interface for details.

1. Click **Setup > Intelligent > Smart**. Choose **Master-Slave Linkage**, click  and then select **Linkage Parameter** tab.

**Linkage Parameter** | **Mark Linkage**

Smart Settings > **Box-Dome Linkage**

Enable Box-Dome Linkage

**Slave**

Slave IP Address: 0.0.0.0

HTTP Port: 80

Zoom Coefficient: 5

**Save**

For some camera models, the page is displayed as follows.

**Linkage Parameter**

Smart Settings > **Box-Dome Linkage**


Enable Box-Dome Linkage

Master IP Address: 203.12.1.238

**Save**

2. Select **Enable Box-Dome Linkage**.
3. Set master or slave IP address, HTTPport, and zoom coefficient.
4. Click **Save**.
5. Select **Mark Linkage** tab.



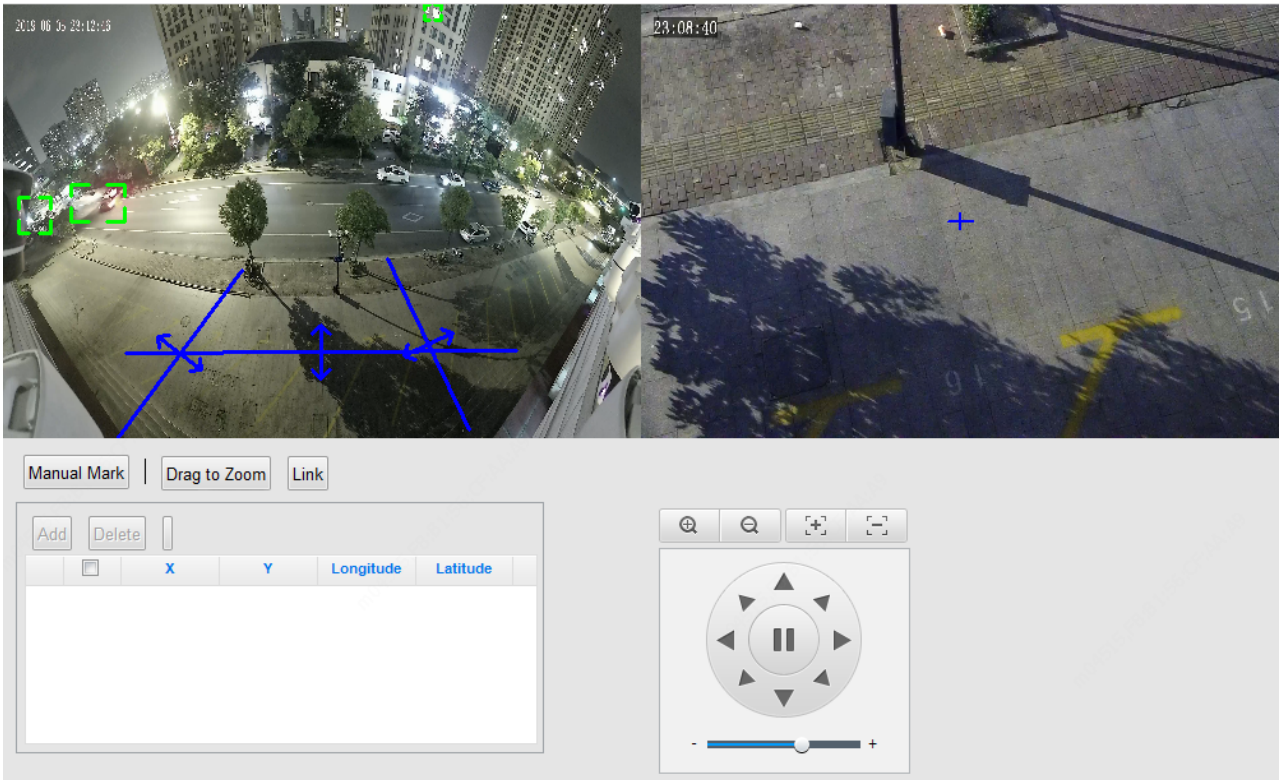

6. Click **Manual Mark**, the following page will be displayed. The meaning of buttons:



**Previous/Next:** Change marking scene when you finish marking operation in the current scene.

**End Marking:** End marking operation without saving.

**Add/Delete:** Add or delete marking point.

**Clear All:** Clear all the marking points on this page.

7. Marking steps on a single marking page are as follows: Click **Add**, and then click on the left master camera image. A small white frame appears at your clicking, and the area automatically zooms in (as shown below). Click **OK** to confirm current marking point, or right-click to return to original image.



8. Turn the slave camera to the position where the marking point is. Set the magnification of the slave camera to the maximum, and make the cross in the center of the slave camera image coincide with the marking point (the small white frame) in the master camera image. Click **OK** and **Orientto** link the marking points. Click **Cancel** to cancel the linked marking points.
9. Click a new position in the master camera image and repeat last step. You may need 5~12 marking points depending on your needs. Click **Finish** and **Next** to turn to the next scene.
10. Click **Apply** after you finish all the marking configurations. For multi-sensor cameras, click the button after the marking configuration of four scenes is completed.

Apply Previous Next End Marking The area automatically zooms in when you mark a point on the image (left); right-click to zoom out.

**Mark Parameters**


	<input type="checkbox"/>	X Coordinate	Y Coordinate	PTZ Longitude	PTZ Latitude
1	<input type="checkbox"/>	2879	3205	34023	-443
2	<input type="checkbox"/>	5839	8205	35780	384
3	<input type="checkbox"/>	5179	6528	5009	204
4	<input type="checkbox"/>	3679	8852	7141	1321
5	<input type="checkbox"/>	9539	3911	8604	998


**Master-Slave Linkage** Use master-slave linkage to link a master device and a slave device. The master device detects the target and the linked slave device tracks and captures the target.



### NOTE!


- Only some camera models support this function.
- The supported linkage parameters, linkage mode and alarming schedule may vary with camera model. Please see the actual Web interface for details.

1. Click **Setup > Intelligent > Smart**. Choose **Master-Slave Linkage**, click  and then select **Linkage Parameter**.

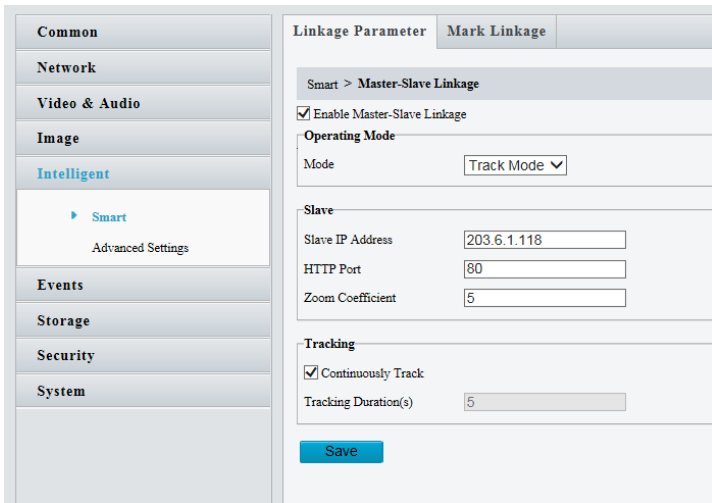



Common	Linkage Parameter	Mark Linkage
Network	Smart > Master-Slave Linkage	
Video & Audio	<input checked="" type="checkbox"/> Enable Master-Slave Linkage	
Image	Operating Mode	
Intelligent	Mode: Track Mode	
Smart Advanced Settings	Slave	
Events	Slave IP Address: 203.6.1.118	
Storage	HTTP Port: 80	
Security	Zoom Coefficient: 5	
System	Tracking	
	<input checked="" type="checkbox"/> Continuously Track	
	Tracking Duration(s): 5	
	<input type="button" value="Save"/>	

For some camera models, the page is displayed as follows.

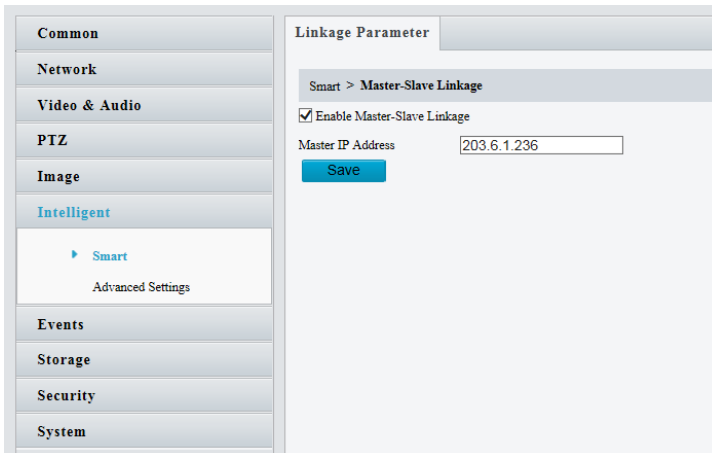


Common	Linkage Parameter
Network	Smart > Master-Slave Linkage
Video & Audio	<input checked="" type="checkbox"/> Enable Master-Slave Linkage
PTZ	Master IP Address: 203.6.1.236
Image	<input type="button" value="Save"/>
Intelligent	
Smart Advanced Settings	
Events	
Storage	
Security	
System	

2. Select **Enable Box-Dome Linkage**.
3. Track Mode: The linked slave camera tracks the target that triggers the set rules, until timeout is up or the target disappears.
4. Set master or slave IP address and HTTP port.
5. Zoom coefficient: the greater the coefficient, the greater the zoom of the slave device.
6. Select **Continuously Track**, and set tracking duration.
7. Click **Save**.
8. Click **Mark Linkage**.

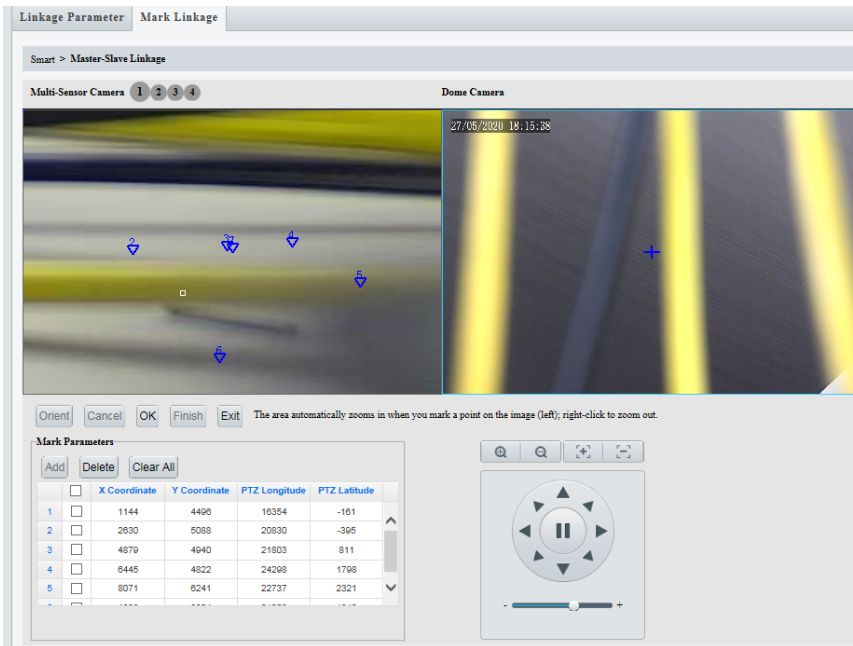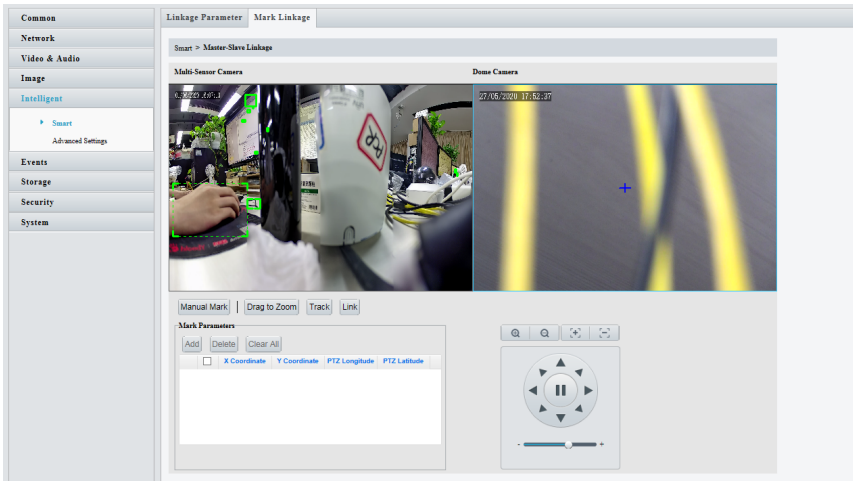

9. Click **Manual Mark**, the following page will be displayed. The meaning of the buttons:

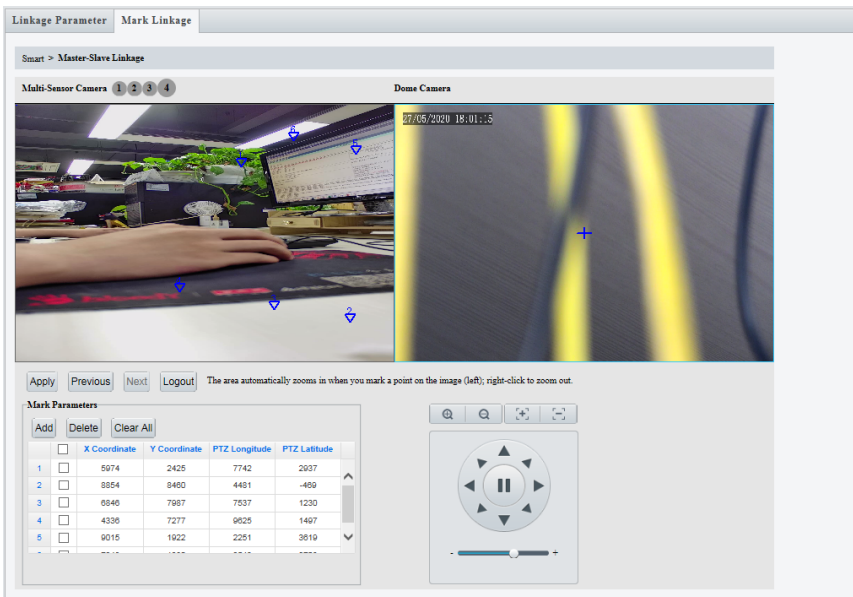

OK/Apply: After completing the marking of one scene, click **OK** or **Apply** to save and update the linkage between the master and slave camera.


Next: Change marking scene when you finish marking operation in the current scene.

Exit: Exit marking without saving.

Add: Add marking points.

Delete: Delete marking points.

Clear All: Clear all the marking points in current scene.

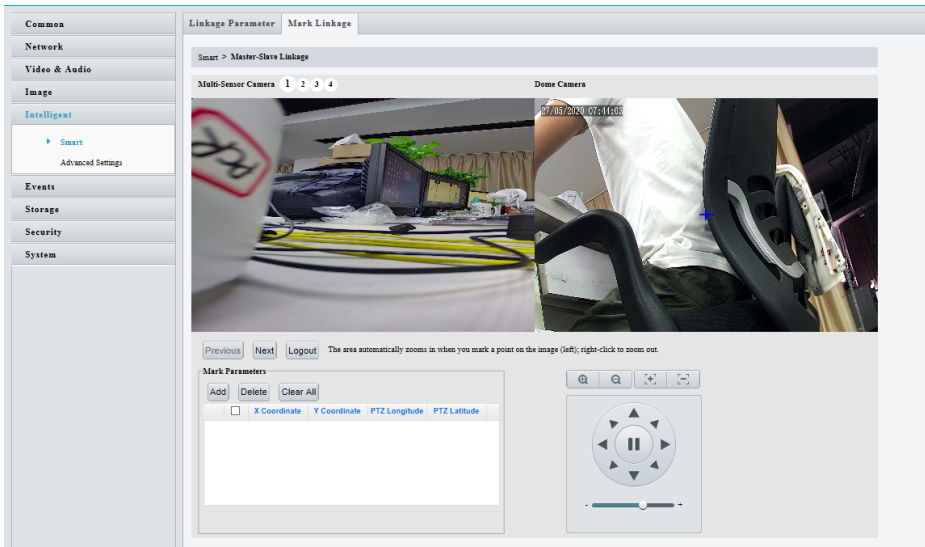

10. Marking steps on a single scene: Click **Add**, click on the left master camera image. A small white frame appears at your clicking, and the area automatically zooms in (as shown below). Adjust the position of the marking point on the enlarged area. Right click to return to original image and select again. Click **OK** to confirm current marking point.



11. Turn the slave camera to the position where the marking point is. Set the zoom of the slave camera to the maximum, and adjust the cross in the center of the slave camera image coincide with the marking point (the small white frame) in the master camera image. Then click **Orient**.



- Repeat the last two steps to add other marking points. You may need 5~12 marking points depending on your needs. Click **Finish** after marking is completed. For some camera models, you need to complete the marking of several scenes.

## Attribute Collection

### Attribute Collection



#### NOTE!

- Attribute collection functions with other smart features.
- To display attributes in live view page, you need to enable Display Attribute in Local Parameters first.
- The interface may vary with model and smart function. Please see the actual interface for details.

- Click Setup > Intelligent > Smart Settings, and choose Attribute Collection.
- Select the attributes to collect under each attribute category.

- Click Save.

Master-Slave Linkage Use master-slave linkage to link a master device and a slave device. The master device detects the target and the linked slave device tracks and captures the target.

### Monitor by Attribute

## Advanced Settings

Advanced settings include snapshot clarity and detection mode for intelligent functions.

## Photo parameters

Set clarity of snapshots.

1. Click **Setup >Intelligent>Advanced Settings**. Click **Photo parameter** tab.

2. Set the thumbnail image clarity.

3. Click **Save**.



### NOTE!

Please turn off the Face Detection before setting the photo parameter.

## Detection Parameters



### NOTE!

- Only some camera models support advanced settings. Please see the actual Web interface for details.
- The default detection mode is **Normal Mode**. Set as required.

1. Click **Setup >Intelligent>Advanced Settings**. Click **Detection Parameters** tab.

Detection Mode: Normal Mode

Sync Intelligent Mark with...: Enable

Static Object Detection:  On  Off

Save

2. Choose a detection mode. Choose **Filter Repeated Motion Mode** to prevent repeated alarm reporting caused by repeated motion detected in the surveillance environment.

3. Click **Save**.

## Events

### Thermal Alarm

#### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures.

Select **Setup>Events>Thermal Alarm**. Go to the Temperature Measurement tab.




### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

**Temperature Measurement**


Enable Temperature Measurement

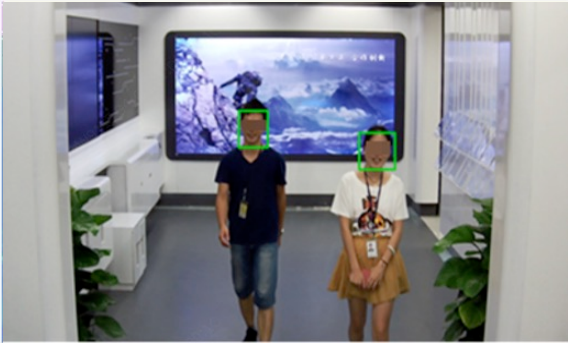

Temperature Unit	<input type="text" value="Celsius (°C)"/>
Rule Type	<input type="text" value="Measure Face"/>
Measurement Mode	<input type="text" value="Measure Body Surface T"/>
<b>Alarm Rule</b>	
Alarm Threshold	<input type="text" value="37.3"/>
<b>Temperature Correction</b>	
Black Body Temperature	<input type="text" value="36.0"/> <a href="#">Set Black Body Position</a>
Correction Temperature	<input type="text" value="0.0"/>
Environment Temperature	<input type="text" value="25.0"/>

## 1. Preparation

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

## 2. Configuration

- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.



### NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

## Common Alarm

You can schedule alarm reporting and set actions that can be triggered by other devices so that alarms and the triggered actions can be handled in time.



Alarm reporting can be scheduled for motion detection alarm, alarm input, alarm output, tampering detection alarm, and audio detection alarm. The supported alarms may vary with device model. For the alarm types that your camera supports, see the Web interface.

The following table describes the major alarm-triggered actions and how to set a plan.

Item	Description
Alarm Output 1	<p>Select the check box. This setting is the alarm output interface linked to motion detection alarm.</p> <p><b>Note:</b> When an alarm is reported, the camera triggers alarm output so as to trigger actions by a third-party device.</p>
Goto Preset	<p>Select the check box and set the preset linked to motion detection alarm.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>● Make sure you have set presets. Otherwise, you cannot set this parameter. For details about how to set a preset, see <a href="#">Setting Presets</a>.</li> <li>● When an alarm is reported, the PTZ camera automatically goes to the preset to capture video in the correct scene.</li> </ul>
Upload to FTP	<p>With <b>Upload to FTP</b> selected, the camera will automatically upload snapshots to the specified FTP server when an alarm is triggered.</p> <p><b>Note:</b> Make sure you have completed <a href="#">FTP</a> and <a href="#">Snapshot</a> before using this function.</p>
Recording	<p>With <b>Recording</b> selected, the camera will automatically record video when an alarm is triggered.</p> <p><b>Note:</b> Please set <b>Post-Record(s)</b> on the <b>Storage</b> page first. <b>Post-Record(s)</b> specifies how long recording continues after the end of an alarm.</p>
Alarm the Center	<p>With <b>Alarm the Center</b> selected, the camera will sends alarm information to the central server when an alarm is triggered.</p> <p><b>Note:</b> Please complete settings on the <b>Server</b> page first.</p>
Upload Image(Original)	<p>With Upload Image(Original) selected, The camera uploads the snapshot original image to the server or platform .</p> <p><b>Note:</b> Make sure you have completed FTP and Snapshot before using this function.</p>
Upload Image(Object)	<p>With Upload Image(Object) selected, The camera uploads the snapshot object image to the server or platform.</p> <p><b>Note:</b> Make sure you have completed FTP and Snapshot before using this function.</p>
Attribute Collection	<p>With Error! Reference source not found. selected, The camera uploads the attribute information to the server or platform .</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>● Only some camera models support this function.</li> <li>● Please set <b>Error! Reference source not found.</b> on the <b>Error! Reference source not found.</b> page first.</li> </ul>
Trigger Tracking	<p>With <b>Trigger Tracking</b> selected, the camera starts auto tracking when an alarm is triggered.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>● Only some camera models support this function.</li> <li>● Please set auto tracking on the Smart Settings page first.</li> </ul>

Trigger E-mail	<p>With <b>Trigger E-mail</b> selected, the camera will automatically send snapshots to the specified E-mail address when an alarm is triggered.</p> <p><b>Note:</b> Make sure you have completed <a href="#">E-Mail</a> before using this function.</p>
Enable Plan	<p>Select the check box and set the start and end times during which motion detection alarm is effective. You can directly drag the mouse to draw a plan and click <b>Edit</b> to edit time periods in the table. The time periods cannot overlap. The camera reports alarms during the specified period(s) only.</p> <p>You can select from Monday to Sunday and set four periods for each day.</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="406 521 954 813"> </div> <div data-bbox="978 521 1481 875"> </div> </div> <p style="text-align: center; margin-top: 10px;"> <span style="margin-right: 150px;">Drag the mouse to draw a plan</span> <span>Edit time periods in the table</span> </p> <p><b>Note:</b> Plan drawing using a mouse is only supported by IE versions later than 8.0. After setting the plan for one day, you can apply the same settings to other days by clicking <b>Copy</b> and <b>Paste</b>.</p>

Click **Save**.

### Configuring Motion Detection Alarm

Motion detection detects the object motion in a specified rectangular area during a period. You need to set a detection area, sensitivity of detection, object size, and history for the camera to decide whether to report a motion detection alarm when it detects motion.




#### NOTE!


- This function is not supported by some models. Please see the actual model for details.
- The alarm triggered actions may vary with models. Please see the actual Web interface for details.

#### Area Detection

1. Click **Setup > Events > Common Alarm > Motion Detection**. Set **Detection Mode** to **Area**.

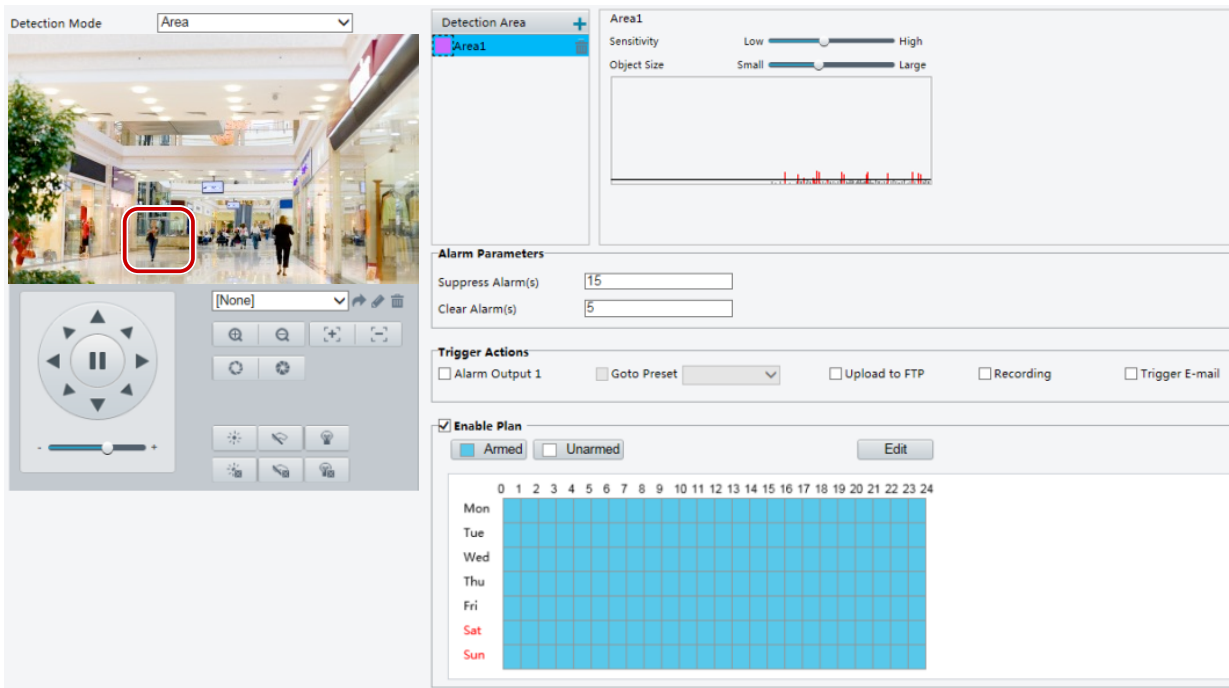


2. In the **Detection Area** area, click to add a new detection area. To delete a detection area, click .
3. Click and drag the mouse to set a detection area.
4. Set the detection sensitivity, object size, and history for the camera to decide whether to report a motion detection alarm.
  - Moving the slider to the right increases detection sensitivity. When the extent of motion within the detection area exceeds the set object size, the camera reports an alarm.
  - Object size specifies the minimum ratio of the object's size to the size of the total detection area before an alarm will be reported. That is to say, to detect motion of tiny objects, you need to draw a small box (detection area) in the actual motion area accordingly.
  - Motion detection results are shown in real time. The red lines represent the raised motion detection alarms. The longer a line, the greater the extent of motion. The denser the lines, the greater the frequency of motion.

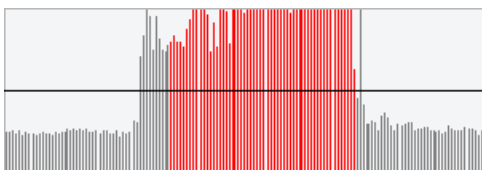

5. Set the alarm parameters.
  - Suppress Alarm(s): After an alarm is triggered, the same alarm will not be reported within the set time.
  - Clear Alarm(s): After an alarm is triggered,
    - a. If the same alarm is not triggered within the set time, the alarm will be cleared and the same alarm can be reported again.
    - b. If the same alarm is triggered within the set time, the alarm will not be cleared until the suppress alarm time expires. Then the same alarm can be reported again.
6. Set actions to be triggered by motion detection alarm and the plan.

7. Click **Setup > Events > Motion Detection**. Set **Detection Mode** to **Grid**.

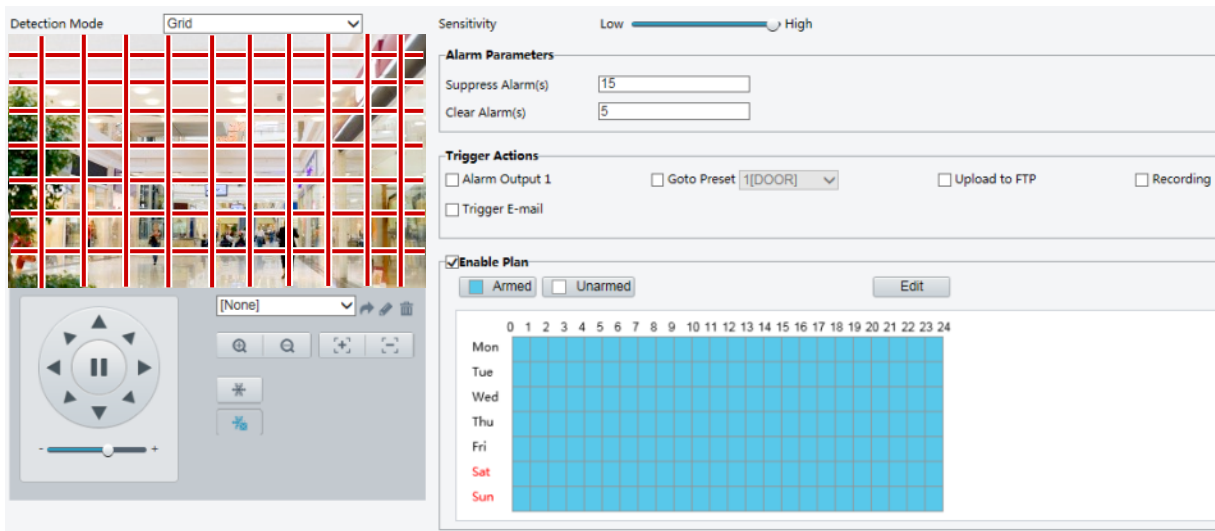

8. Detection area(s) can be irregular on the grid.
9. Set detection sensitivity for the camera to decide whether to report a motion detection alarm (alarm visible on compatible NVR).
10. Set alarm parameters.
  - Suppress Alarm(s): After an alarm is triggered, the same alarm will not be reported within the set time.
  - Clear Alarm(s): After an alarm is triggered,
    - a. If the same alarm is not triggered within the set time, the alarm will be cleared and the same alarm can be reported again.
    - b. If the same alarm is triggered within the set time, the alarm will not be cleared until the suppress alarm time expires. Then the same alarm can be reported again.
11. Set actions to be triggered by motion detection alarm and the plan. For the detailed steps, see the descriptions of alarm-triggered actions in [Area Detection in Configuring Motion Detection Alarm](#).
12. Click **Save**.

### Configuring Tampering Alarm

Configure tampering alarm so that the camera reports a tampering alarm when the lens is blocked for a certain length of time.



#### NOTE!

- This function is not supported by some models. Please see the actual model for details.
- The alarm triggered actions may vary with models. Please see the actual Web interface for details.

1. Click **Setup>Events>Common Alarm >Tampering Alarm**.

Tampering Alarm  On  Off

Sensitivity  50

Duration(s)

**Trigger Actions**

Alarm Output 1     Goto Preset 1[DOOR]     Upload to FTP     Recording     Trigger E-mail

---

**Enable Plan**

Armed     Unarmed   

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Mon																									
Tue																									
Wed																									
Thu																									
Fri																									
Sat																									
Sun																									

2. Select **On** for **Tampering Alarm**.
3. Set detection sensitivity and duration for the camera to decide whether to report a tampering alarm. Sensitivity is divided into three levels: high-level, mid-level and low-level. Compared with mid-level sensitivity, the camera can detect blocking from a farther location when sensitivity is set to high. The camera reports an alarm when the lens is blocked for a specified length of time. Tampering alarm is effective to the whole screen. To disable tampering alarm, clear the **Tampering Alarm** check box.
4. Set actions to be triggered by tampering alarms and the plan. For the detailed steps, see the descriptions of alarm-triggered actions in [Configuring Motion Detection Alarm](#).
5. Click **Save**.

### Configuring Audio Detection Alarm


The camera can detect input audio signals for exceptions. When the rise or fall of volume exceeds the set limit, or when the input volume reaches the threshold, the camera reports an alarm and triggers the set actions. Make sure that an audio input device is correctly connected to the camera and audio input is turned on in [Configuring Alarm Input](#).



#### NOTE!

- This function is not supported by some models. Please see the actual web interface for details.
- The alarm triggered actions may vary with models. Please see the actual Web interface for details.


1. Click **Setup>Events>Common Alarm >Audio Detection**.

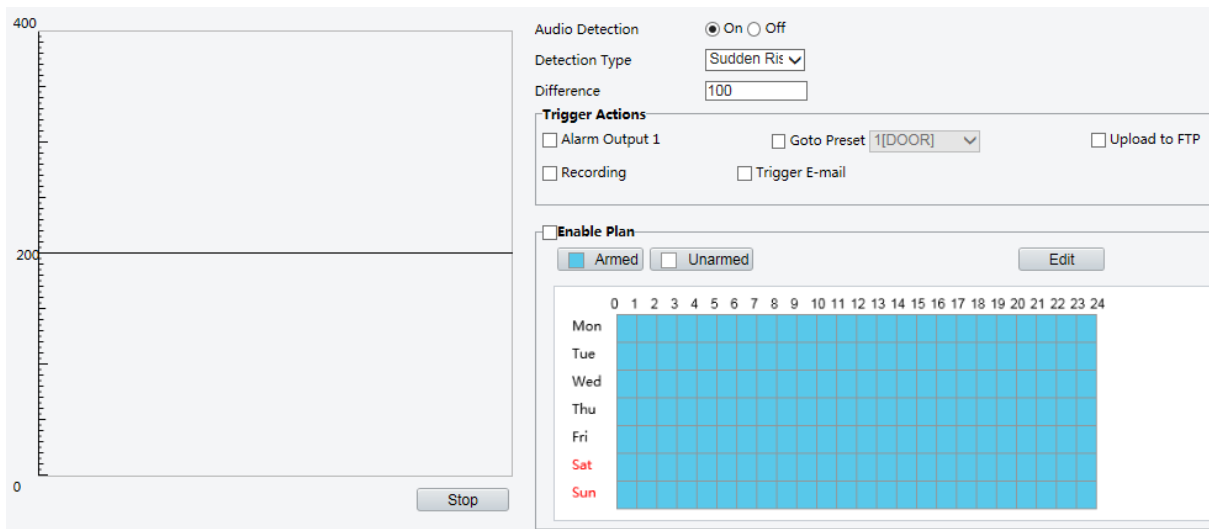

2. Select **Enable** for **Audio Detection**, select a detection type and set the difference or threshold. To disable audio detection, clear the **Enable** check box.

The following table describes some major parameters.

Parameter	Description
Detection Type	<ul style="list-style-type: none"> <li>• Sudden Rise: An alarm is reported when the rise of volume exceeds the difference.</li> <li>• Sudden Falls: An alarm is reported when the fall of volume exceeds the difference.</li> <li>• Sudden Change: An alarm is reported when the rise or fall of volume exceeds the difference.</li> <li>• Threshold: An alarm is reported when the volume exceeds a threshold.</li> </ul>
Difference	<ul style="list-style-type: none"> <li>• Threshold: After a volume is set as the threshold, an alarm is reported when the threshold is exceeded.</li> <li>• Difference: the difference between two volumes. When the rise or fall of volume exceeds the difference, an alarm is reported.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The scale in the audio detection area is used to measure sound volume.</li> <li>• Audio detection results are shown in real time. The red part indicates the reported audio detection alarms.</li> </ul>

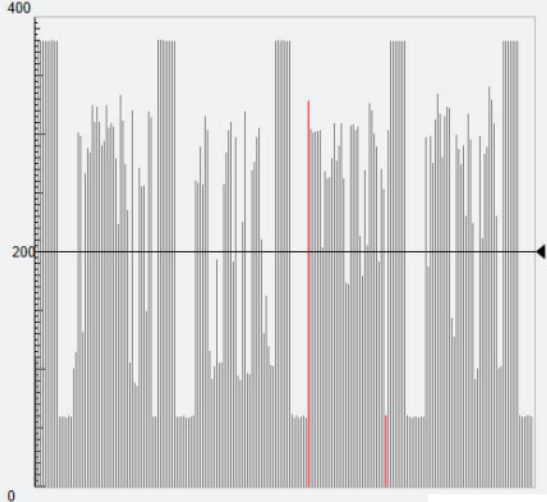Parameter	Description
	

3. Set the alarm-triggered actions and arming schedule as required. For the detailed steps, see the descriptions of alarm-triggered actions in [Configuring Motion Detection Alarm](#).
4. Click **Save**.

### Configuring Alarm Input

The camera can receive alarm information from a third-party device. To use this function, you need to configure the following information for alarm input first: port, alarm name, alarm type (normally open or normally closed) and alarm reporting time.



#### NOTE!

- This function is not supported by some models. Please see the actual model for details.
- The alarm triggered actions may vary with models. Please see the actual Web interface for details.

1. Click **Setup>Events>Common Alarm >Alarm Input**.

Select Alarm:

Alarm Name:

Alarm ID:

Alarm Type:

Alarm Input:  On  Off

**Trigger Actions**

Alarm Output 1     Goto Preset      Upload to FTP     Recording     Trigger E-mail

---

**Enable Plan**

Armed     Unarmed   

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Mon																									
Tue																									
Wed																									
Thu																									
Fri																									
Sat																									
Sun																									

2. Select alarm and set the alarm name.

3. Select **N.O.** or **N.C.** according to the type of the third-party alarm input device. For example, if the third-party alarm input device is normally open, you need to select **N.O.** here, so that the camera can receive alarm information from the third-party alarm input device.
4. Set actions to be triggered by an input alarm and the plan. For the detailed steps, see the descriptions of alarm-triggered actions in [Configuring Motion Detection Alarm](#).
5. Click **Save**.

### Configuring Alarm Output

After alarm output is triggered by a motion detection alarm, Boolean alarm, the camera can output alarm information to the third-party device if alarm output is set correctly to Normally Open or Normally Closed. The alarm output duration is configurable.



#### NOTE!

This function is not supported by some models. Please see the actual model for details.

1. Click **Setup>Events>Common Alarm >Alarm Output**.

2. Select the alarm and set the alarm name.
3. Set the status to **N.O.** (default setting) and set the alarm duration.
4. Set relay mode to better adapt to third-party alarm devices like alarm lights. Please select the trigger mode according to your third-party alarm device.

Item	Description
Monostable	The alarm output triggers the third-party alarm device by pulse.
Bistable	The alarm output triggers the third-party alarm device by high or low level.



- Set actions to be triggered by an input alarm and the plan. For the detailed steps, see the descriptions of alarm-triggered actions in [Configuring Motion Detection Alarm](#).
- Click **Save**.



### CAUTION!

Strictly follow the sequence when powering on the devices to avoid damaging camera components:

- Check that the alarm type is set to **Normally Open** (default setting), and that the camera and the alarm output device are powered off.
- After completing the connection, power on the camera first and then power on the alarm output device.

## Memory Card Storage



### NOTE!

- This function is not supported by some models, and may vary with models. Please see the actual model for details.
- Edge storage is recommended when the camera operates in stand-alone mode. When the camera is managed by the central management server, you need to stop edge storage to avoid affecting the cache post recording service.
- Post-Record is displayed if the camera is capable of this feature; This parameter is not displayed if not supported by the camera

## Setting Edge Storage

Edge storage is used to save video data and snapshots to the memory card directly. Edge storage is recommended when the camera is running in stand-alone mode.

### Manual storage

The camera records live video repeatedly if manual storage is enabled.

- Click **Setup>Storage>Storage**.

Storage Medium	<input type="text" value="Memory Card"/>	<input type="button" value="Format"/>	<input checked="" type="checkbox"/> Enable
Total Capacity 7594 MB, Free Space 382 MB.			
<b>Allocate Capacity</b>			
Video(MB)	<input type="text" value="7594"/>	(The remaining capacity is used for image storage.)	
Common Snapshot(MB)	<input type="text" value="0"/>	(The remaining capacity is used for smart snapshot storage.)	
Smart Snapshot(MB)	<input type="text" value="0"/>		
<b>Video Storage Info</b>			
Storage Policy	<input checked="" type="radio"/> Manual Storage <input type="radio"/> Planned Storage <input type="radio"/> Off		
Stream	<input type="text" value="Main Stream"/>		
When Storage Full	<input checked="" type="radio"/> Overwrite <input type="radio"/> Stop		
Post-Record(s)	<input type="text" value="60"/>		

- Start edge storage and modify the settings as required. The following table describes some major parameters.

Parameter	Description
Storage Medium	Storage resource type. <b>Note:</b> <ul style="list-style-type: none"> <li>To format the memory card, disable the storage function for the card first. Then Click <b>Format</b> and then click <b>OK</b> to confirm the operation. The system will restart when the format is completed.</li> <li>Information about the total and free space is displayed.</li> </ul>
Data Overwrite Policy	<ul style="list-style-type: none"> <li>Overwrite: If there is no free space in the memory card, new data will overwrite the existing data repeatedly.</li> <li>Stop: If there is no free space in the memory card, new data will not be saved to the memory card.</li> </ul>
Post-Record(s)	For alarm-triggered recording, length of time that recording continues after the end of the alarm.

3. Click **Save**.

### Planned storage

If planned storage is enabled, the camera records video to the memory card during the specified periods.

1. Click **Setup>Storage>Storage**.

Storage Medium Memory Card   Enable

Total Capacity 7594 MB, Free Space 382 MB.

---

**Allocate Capacity**

Video(MB)  (The remaining capacity is used for image storage.)

Common Snapshot(MB)  (The remaining capacity is used for smart snapshot storage.)

Smart Snapshot(MB)

---

**Video Storage Info**

Storage Policy  Manual Storage  Planned Storage  Off

Stream Main Stream

When Storage Full  Overwrite  Stop

Post-Record(s)

---

**Plan**

Armed  Unarmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Mon																									
Tue																									
Wed																									
Thu																									
Fri																									
Sat																									
Sun																									

For some camera models, the page is displayed as follows.

Storage Medium    Enable

Total Capacity 7514 MB, Free Space 7514 MB.

**Allocate Capacity**

Video(MB)  (The remaining capacity is used for image storage.)

Common Snapshot(MB)

**Video Storage Info**

Storage Policy  Manual Storage  Planned Storage  Off

Stream

When Storage Full  Overwrite  Stop

Post-Record(s)

**Plan**

Armed  Unarmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Mon																									
Tue																									
Wed																									
Thu																									
Fri																									
Sat																									
Sun																									

2. Select **Planned Storage**, and then set the periods during which the camera records video to the memory card.
3. Click **Save**.



**NOTE!**

- Planned storage is not effective when manual storage and planned storage are both enabled.
- To query recordings in the memory card, see [Video Playback and Download with Edge Storage](#).

## Setting Cache Post Recording

A camera under centralized management can use the memory card as a backup storage resource of the central management server. If storage from the camera to the central storage device is interrupted due to unstable network connection, the camera automatically will start cache post recording and store videos to the memory card.

With recording backup enabled, the camera can automatically transfer the video stored in the memory card to a storage resource of the backup server in form of file when the communication between the camera and the backup server is restored.



**NOTE!**

Before you set cache post recording for a camera, check that:

- The memory card is correctly installed on the camera.
- Backup resource has been added on the central server.
- Backup resource has been allocated for the camera.
- Post-Record is displayed if the camera is capable of this feature; This parameter is not displayed if not supported by the camera

## Disable edge storage

1. Click **Setup>Storage>Storage**.

Storage Medium: Memory Card   Enable

Total Capacity 7594 MB, Free Space 382 MB.

**Allocate Capacity**

Video(MB)  (The remaining capacity is used for image storage.)

Common Snapshot(MB)  (The remaining capacity is used for smart snapshot storage.)

Smart Snapshot(MB)

**Video Storage Info**

Storage Policy  Manual Storage  Planned Storage  Off

Post-Record(s)

2. Set **Storage Policy** to **Off**. Post-Record is displayed if the camera is capable of this feature and then set **Post-Record(s)**.
3. Click **Save**.

## Security

### User

There are two types of users in the system:

- Administrator: referred to as “admin” in this manual. The default name of the administrator is admin, which cannot be modified. Admin has full permission and can manage all users and devices. Only one admin user is allowed in the system.
- Common user: referred to as “user” in this manual. User only has permission to play live and recorded video. Up to 32 common users are allowed in the system.
- You can add a user on the user management interface (under **Setup>Security> User**).
- After the user is added successfully, you can change the password by entering the new password or delete the user by clearing the username.
- On the first login, you need to enter an email address, which will be used to reset the login password in case you forget it. You may deselect the check box and choose not to enter any email address.
- To reset the password, click **Forgot Password** on the login page and follow instructions to get a security code. Use the security code to reset the password.



- Select **Setup>Security>User**, edit admin information including the email address.



## NOTE!

- Only admin can change passwords. Changing the username or password for a user when the user is still logged in will force the user to log out. The user must use the new username or password to log in.
- Only admin can add and delete users. Deleting a user when the user is still logged in will force the user to log out. A deleted user cannot log in.

## Network Security

### HTTPS

Set a secure channel for data transmission to ensure security.



## NOTE!

This function is not supported by some models. Please see the actual model for details.

1. Click **Setup>Network>Port**.

HTTP Port	<input type="text" value="80"/>
HTTPS Port	<input type="text" value="443"/>
RTSP Port	<input type="text" value="554"/>

2. Enter the port number in the **HTTPS Port** text box.
3. Click **Save**.
4. Click **Setup>Security> Network Security> HTTPS**.

HTTPS	<input checked="" type="radio"/> On <input type="radio"/> Off
SSL Certificate	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/>

5. Select **On** for **HTTPS**. You may import a custom SSL certificate as needed.
6. Click **Save**.

Next time you log in, enter the address in *https://IP:HTTPS port number* format, for example, *https://192.168.1.13:443* to enter secure channel mode. If you use the default HTTPS port, enter *https://IP*.

### Authentication

RTSP (Real Time Streaming Protocol) is an application layer protocol. To transmit and control the audio and video, set RTSP authentication on the Web interface.

1. Click **Setup>Security> Network Security>Authentication**.

RTSP Authentication	<input type="text" value="Digest MD5"/>
HTTP Authentication	<input type="text" value="Digest MD5"/>
<input type="button" value="Save"/>	

2. Select an authentication mode and then click **Save**.

### Hide Vendor Information

You can set to hide the vendor information of the network camera on the Web interface.

1. Click **Setup>Security> Registration Info**.

Hide Vendor Info  On  Off

Save

2. Under **RegistrationInfo**, select **On**.
3. Click **Save**.

### APR Protection

This function protects a camera from ARP attacks. The gateway and the MAC address must be set properly before a PC can access the camera from another network; if an incorrect MAC is set, only PCs on the same LAN can access.

1. Click **Setup>Security> Network Security> ARP Protection**.

ARP Protection  On  Off

Gateway

Gateway MAC Address

Save

2. Select the check box to enable the ARP binding function and set the gateway MAC address.
3. Click **Save**.

### IP Address Filtering

Use IP address filtering to allow or forbid access from specified IP address(es).



#### NOTE!

This function is not supported by some models. Please see the actual model for details.

1. Click **Setup>Security> Network Security>IP Address Filtering**.

IP Address Filtering  On  Off

Filtering Mode

No.	IP Address	+
1	<input type="text" value="1.1.1.1"/>	🗑️

Save

2. Select **On** to enable IP address filtering.
3. Select a filtering mode, and then add IP address(es).
4. Click **Save**.



## NOTE!

- If **Filtering Mode** is set to **Whitelist**, then only the added IP address(es) are allowed to access the camera. If **Filtering Mode** is set to **Deny Access**, then only the added IP address(es) are not allowed to access the camera.
- Up to 32 IP addresses are allowed. Each IP address can be added once only.
- The first byte of each IP address must be 1-223, and the fourth cannot be 0. For example, the following IP addresses are illegal and cannot be added: 0.0.0.0, 127.0.0.1, 255.255.255.255, 224.0.0.1.

## Access Policy

1. Click **Setup>Security > Network Security>Access Policy**.

2. Select **On** to enable Illegal Login Lock and MAC Authentication.
3. Click **Save**.

## Watermark

Use watermark to encrypt custom information with video to prevent unauthorized delete or alteration.



## NOTE!

Only some camera models support this function.

1. Click **Setup>Security>Watermark**.

2. Select **On** to enable watermark, and then input watermark content.
3. Click **Save**.

# System Maintenance

## Time

You can use the following methods to adjust the system time of your device.

### Manually Setting or Synchronizing the System Time


1. Click **Setup>Common>Time**, and then click the **Time** tab.

2. Select a synchronization mode.
3. Set the correct time zone and system time. You may also click **Sync with Computer Time** to synchronize the time settings of your camera with that of your PC.

4. Click **Save**.

### Synchronizing with the NTP Server

1. Click **Setup>Common>Time**, and then click the **Time** tab.

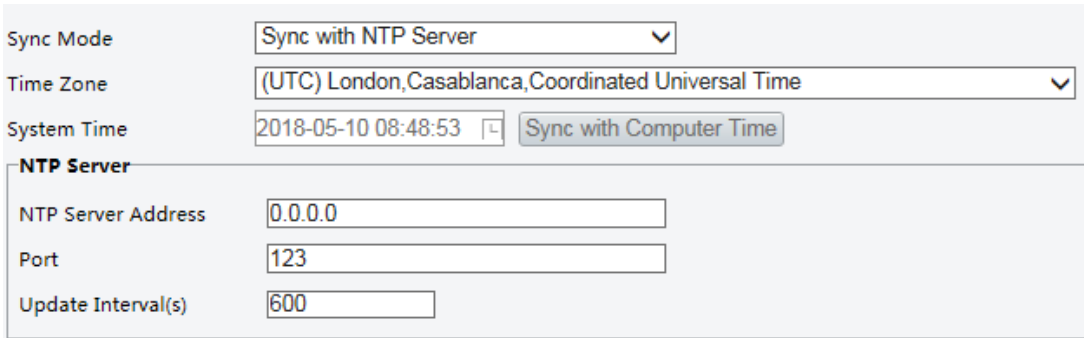


Sync Mode	Sync with NTP Server
Time Zone	(UTC) London, Casablanca, Coordinated Universal Time
System Time	2018-05-10 08:48:53 <input type="button" value="Sync with Computer Time"/>
<b>NTP Server</b>	
NTP Server Address	0.0.0.0
Port	123
Update Interval(s)	600

2. Set **Sync Mode** to **Sync with NTP Server**, and then set the IP address and port of the NTP server and update interval.

3. Click **Save**. The camera will periodically synchronize time with the NTP server.

### Setting the DST

1. Click **Setup>Common>Time**, and then click the **DST** tab.

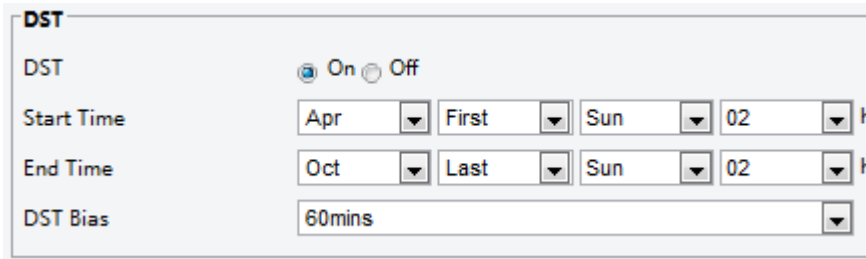

<b>DST</b>	<input checked="" type="radio"/> On <input type="radio"/> Off
Start Time	Apr First Sun 02 h
End Time	Oct Last Sun 02 h
DST Bias	60mins

2. Select **On** for **DST**, set the start time, end time, and DST bias.

3. Click **Save**.

## Server

### Intelligent Server

You need to configure the intelligent server if an ultra sensitive camera is managed by a central server.



#### NOTE!

- Only some camera models support intelligent server.
- The settings may vary with device model.
- To use face snapshot, you need to configure the TMS server to which snapshots are uploaded.

1. Click **Setup>Common>Server**, and then click the **Intelligent Server** tab.



**Intelligent Server**

**Intelligent Server 1**

Server IP

Server Port

Platform Communication Type

Camera No.

Device No.

**Enable Intelligent Server 2**

Server IP

Server Port

Platform Communication Type

Device No.

**UDP Server**

UDP Server IP

UDP Server Port

Report Interval

Note: To transfer images by FTP, you need to add server information on the FTP setting page.

2. Set intelligent server parameters. Main parameters are as follows.
  - Server IP, Server Port: use the default value.
  - Platform Communication Type:
    - a. Choose GA/T1400, then enter device ID, username and password.
    - b. Choose FTP, then click the **FTP** button to go to the FTP settings page and complete the settings.
    - c. Choose LAPI to connect to VMSeS.
3. Video&Image Database Settings: choose **Pixel Mode** or **Percentage Mode** to display the coordinate information of detection objects.



**NOTE!**

- Video&Image Database Settings is available to certain models only.
- Pixel mode coordinate  $X/Y = (\text{Percentage mode coordinates} * \text{image width/height}) / 10000$ .

4. Select **Enable Intelligent Server 2**, and complete the settings, then the snapshot stream and video stream will be uploaded to Intelligent Server 1 and Intelligent Server 2 at the same time.



**NOTE!**

- Intelligent Server 2 is available for certain models only.
- If the communication type of Intelligent Server 1 is set to FTP, then FTP cannot be set as the communication type of Intelligent Server 2.
- Only certain camera models support LAPI protocol, and only Intelligent Server 2 supports LAPI. When LAPI is chosen, the settings cannot be configured.

5. Click **Save**.

## Serial Port Mode Configuration

The RS485 serial port is used for data exchange with the third-party device. Serial port settings on the camera should be consistent with that of the connected third-party device.



### NOTE!

This function is not supported by some models. Please see the actual model for details.

### PTZ control

To control a PTZ camera through a third-party device, you need to set **Port Mode** to **PTZ Control**.

By sending PELCO-D compliant PTZ control commands through the RS485 port, you can control the PTZ camera without using the PTZ control panel.

1. Click **Setup>System>Ports & Devices**, and then click the **Serial Port** tab.

2. Select **PTZ Control** from the **Port Mode** drop-down list. The following table describes some major parameters.

Parameter	Description
PTZ Protocol	<p>Set the PTZ protocol that the channel supports.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"><li>• You can set this parameter only when <b>Port Mode</b> is set to <b>PTZ Control</b>.</li><li>• When <b>PTZ Protocol</b> is set to <b>INTERNAL-PTZ</b>, the camera can connect to the external PTZ without using the serial port (serial port parameters are grayed out). In this case, you only need to connect the zoom and focus interfaces of the camera to the lens, and then you can operate the PTZ like an internal PTZ.</li></ul>
PTZ Mode	<ul style="list-style-type: none"><li>• <b>Built-in PTZ Priority:</b> When this option is selected, the camera first tries to control the PTZ (for example, to zoom or focus) by itself instead of through the external PTZ. For operations that the camera cannot accomplish by itself, the camera uses the external PTZ.</li><li>• <b>External PTZ Priority:</b> The camera first tries to control the PTZ through the PTZ connected through the serial port.</li></ul> <p><b>Note:</b></p> <ul style="list-style-type: none"><li>• You can set this parameter only when <b>Port Mode</b> is set to <b>PTZ Control</b>.</li></ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>When <b>INTERNAL-PTZ</b> is selected, this parameter is always set to <b>Built-in PTZ Priority</b>, and it is unnecessary to connect the camera to an external PTZ through the serial port. Control through the external PTZ is not effective even when the camera has been connected to an external PTZ.</li> <li>Set this parameter as required. Make sure PTZ control related interfaces are correctly connected.</li> </ul>
Address Code	Set the address code for the PTZ. <b>Note:</b> You can set this parameter only when <b>Port Mode</b> is set to <b>PTZ Control</b> and <b>PTZ Protocol</b> is not set to <b>INTERNAL-PTZ</b> .

3. Click **Save**.

### Transparent channel

Use the RS485 serial port to achieve transparent data transmission with the third-party device. Transparent channel is mainly used to achieve transparent data transmission between two devices.



#### NOTE!

- This function is not supported by some models. Please see the actual model for details.
- Make sure that you have set **Port Mode** to **Trans-Channel** for your camera.

1. Click **Setup>System>Ports & Devices**, and then click the **Serial Port** tab.

The screenshot shows two configuration panels for serial ports. The left panel is for RS485\_1 and the right panel is for RS232\_1. Both panels have the following settings:

- Port Mode: Trans-Channel (left) / PTZ Control (right)
- Baud Rate: 9600
- Data Bits: 8
- Stop Bits: 1
- Parity: None
- Flow Control: None
- Enable Trans-Channel:  (left) /  (right)

The RS232\_1 panel also includes:

- PTZ Protocol: PELCO-D
- PTZ Mode: Built-in PTZ Priority
- Address Code: 0

- Select **Trans-Channel** from the **Port Mode** drop-down list.
- Select **Enable** for **Trans-Channel**.
- Enter the destination IP address and port number (IP address and port number that the transparent channel connects to).
- Click **Save**.

### OSD

To display information from the third-party device on the OSD, you need to select OSD as the port mode. The camera receives information from the third-party device through the RS485 serial port, translates the received information, and then displays it on the OSD.



#### NOTE!

To enable the camera to correctly translate information received from the third-party device, make sure that the information sent by the third-party device through the serial port complies with the data format specified by our company. For more details, contact your dealer.

1. Click **Setup>System>Ports & Devices**, and then click the **Serial Port** tab.

The screenshot shows the configuration window for RS485\_1. The settings are as follows:

Port Mode	OSD
Baud Rate	9600
Data Bits	8
Stop Bits	1
Parity	None
Flow Control	None
Enable Trans-Channel	<input type="checkbox"/>

2. Select **OSD** from the **Port Mode** drop-down list. Select **Enable OSD Report** (so OSD data will be uploaded to the platform).
3. Click **Save**.

### ONVIF Transparent Channel

Transmit data through the transparent channel (ONVIF) between the camera's RS485 port and a third-party device.

1. Click **Setup>System>Ports & Devices**, and then click the **Serial Port** tab.

The screenshot shows the configuration window for RS485\_1. The settings are as follows:

Port Mode	Trans-Channel via ONVIF
Baud Rate	9600
Data Bits	8
Stop Bits	1
Parity	None
Flow Control	None
Enable Trans-Channel	<input type="checkbox"/>

2. Set **Port Mode** to **Select Trans-Channel via ONVIF**.
3. Click **Save**.

### Wiper Control

Set wiper parameters before you can control the wiper.



#### NOTE!

This function is not supported by some models. Please see the actual model for details.

1. Click **Setup>System>Ports & Devices**, and then click the **External Device** tab.

The screenshot shows the configuration window for Wiper. The settings are as follows:

Control Mode	Alarm Input/Output
Enable Wiper	Normally Open

2. Set control mode for the wiper. The following table describes some major parameters.

Parameter	Description
Serial Port	The wiper is controlled by PELCO-D instructions;therefore,the PTZ protocol should be set to PELCO-D. See PTZ control for details.
Alarm Input/Output	Use alarm input and output to open or close the circuit and control the wiper.

## Viewing Device Status

You can view the current status of your camera.

1. Click **Setup>Common>Basic Info**.

Basic Info	
Model	IPC
Firmware Version	IPC
Hardware Version	A
Boot Version	V1.0
Serial No.	2102335CC3531740100232
Network	192.168.1.13/255.255.255.0/192.168.1.1
MAC Address	48:ea:63:4d:56:88
Status	
System Time	2018/1/25 19:16:27
Operation Time	0 Day(s) 0 Hour(s) 0 Minute(s)
Intelligent Server	Offline

2. Click **Refresh** for the latest status information.

3. View the device information.



### NOTE!

You may view device model, firmware version, intelligent server status, etc, on the basic info page.

## Photo Storage Status


View the current photo storage status. See Memory Card Storage for the full storage policy.



### NOTE!

Only models with storage function support this function. Please see the actual model for details.

1. Click **Photo**.

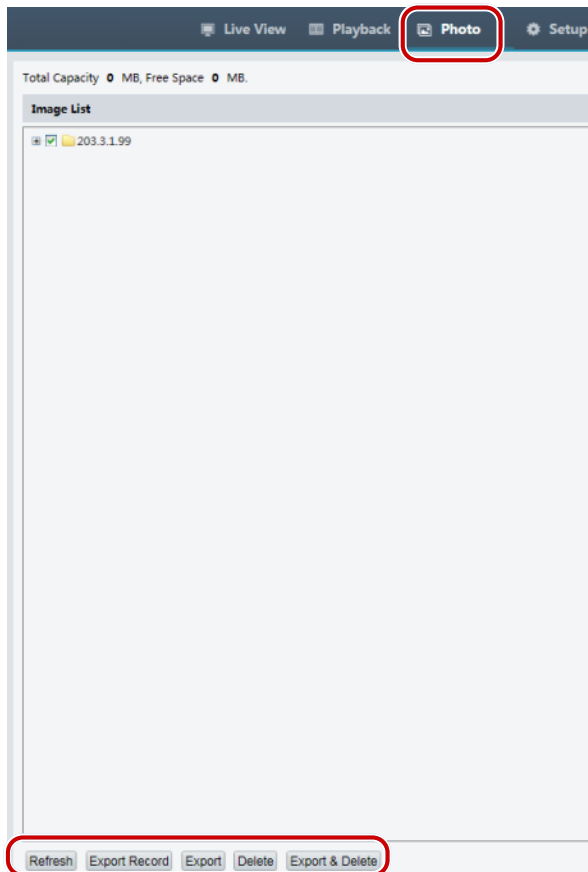


2. Click **Refresh** to update the storage status.
3. You can export or delete photos in the **Image List** area.

## Upgrading the Device

If the device is managed by the central management server and you want to upgrade the devices in batch mode, it is recommended to perform the upgrade operation on the central server. For detailed steps, see the user manual for the central management server.

1. Click **Setup>System>Maintenance**.

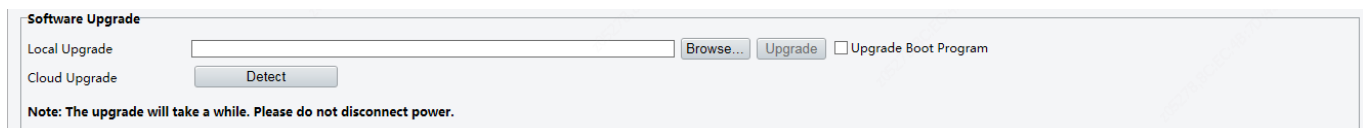

2. Under **Software Upgrade**, click **Browse** and select the correct upgrade file.
3. Click **Upgrade** and then confirm to start. The camera will restart automatically after the upgrade is completed. Some devices support boot program upgrade. To upgrade, select **Upgrade Boot Program**.
4. You may click **Detect** to check for new versions available to cloud upgrade.




## NOTE!

- You must use the correct upgrade file for your camera. Otherwise, unexpected results may occur.
- The upgrade file is a ZIP file and must include all the necessary files.
- The boot program loads the operating system and then the system starts running. The upgrade boot program function is disabled by default, and only the camera will be upgraded to the latest version. If enabled, both the camera and the boot program are upgraded, and the operating system of the following new versions can be booted properly and the camera can be upgraded conveniently.
- Ensure that the power supply is normal during upgrade. The device will restart after the upgrade is completed.

## Restarting the System

1. Click **Setup>System>Maintenance**.



2. Under **Device Restart**, click **Restart**. The device will restart after you confirm the operation.



## CAUTION!

Perform this operation with caution because restarting the system interrupts the ongoing service.

## Importing and Exporting System Configuration File


Export the current configurations of the camera and save them to the PC or an external storage medium. You can also quickly restore configurations by importing backup configurations stored on the PC or an external storage medium back to the camera.



## CAUTION!

- After you perform the Default operation, all settings are restored to factory defaults, except the following: login password of the system administrator, network settings, and system time.
- Make sure you import the correct configuration file for your camera. Otherwise, unexpected results may occur.
- The camera will restart when the configuration file is imported successfully.

1. Click **Setup>System>Maintenance**.

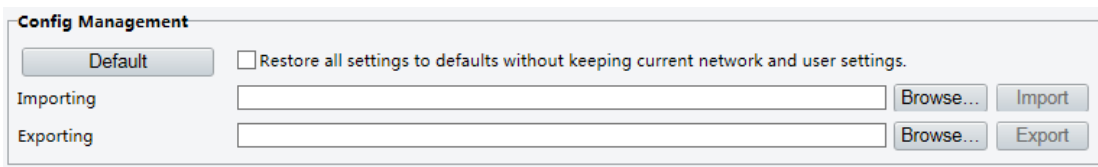

2. To import configurations that you have backed up, click **Browse** next to the **Import** button and select the configurations you want to import, and then click **Import**. The result will be displayed.
3. To export current system configurations, click **Browse** (next to the **Exporting** field), set the destination and then click **Export**.

4. To restore default configurations, click **Default** and then confirm the operation. The device will restart and restore the default configurations. Clicking **Default** with the check box selected will completely restore the device to factory default settings.

## Collecting Diagnosis Information

Diagnosis information includes logs and system configurations. You can export diagnosis information to your PC.

1. Click **Setup>System>Maintenance**.



2. In the **Diagnosis Info** area, click **Browse** to set the destination and then click **Export**.



### NOTE!

- Diagnosis information is exported to the local folder in form of a compressed file. You need to decompress the file using a tool such as WinRAR and then open the file using a text editor.
- By selecting **Collect Image Debugging Info**, you can display video with debugging information at the same time, which makes troubleshooting easier.

## Focus Configuration


The device can adjust the speed of auto-focus according to the minimum focus distance. In order to shoot clear objects, it is recommended that the minimum focus distance is set shorter than the distance between the objects and lens, for example, if the minimum focus distance is 3m, then the objects within 3m from lens will be out of focus.



### NOTE!

This function is only supported by the devices with auto-focus. Please see the actual model for details.

1. Click **Setup>System>Maintenance**.

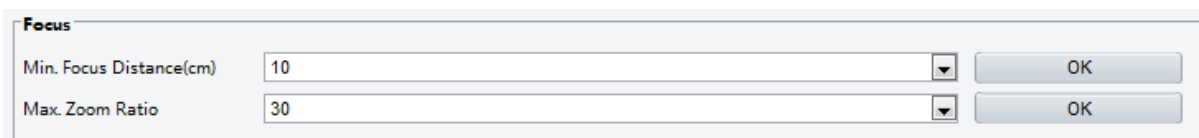

2. Under **Focus**, configure **Min. FocusDistance**(unit: cm) and **Max. Zoom Ratio**.
3. Click **OK**.

## Device Mounting Height


Enter the actual height from the installed infrared dome to the ground, so that the dome will be able to automatically adjust its infrared lamp.



### NOTE!

This function is only supported by some infrared cameras. Please see the actual model for details.

1. Click **Setup>System>Maintenance**.






2. Enter the actual height from the installed Infrared Dome to the ground.
3. Click **OK**.

## Log

日志查询可以搜索查询设备的操作信息，可以下载导出至本地。  
选择[配置>系统>日志]，进入日志界面。

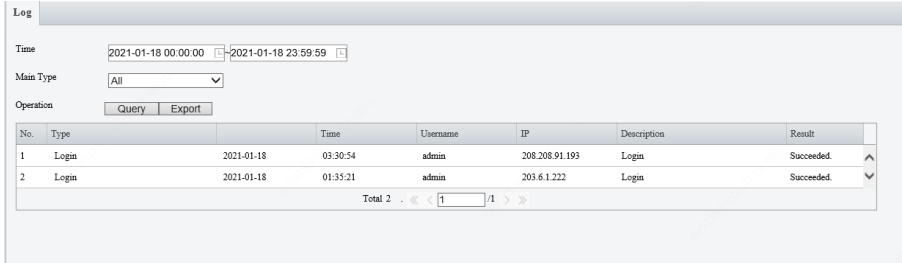

No.	Type	Time	Username	IP	Description	Result
1	Login	2021-01-18 09:30:54	admin	208.208.91.193	Login	Succeeded.
2	Login	2021-01-18 01:35:21	admin	203.6.1.222	Login	Succeeded.

Total 2 << [ 1 ] / 1 >>

- 设置需要查询日志的起始、结束时间。
- 选择日志类型，点击查询。
- 选择需要导出的日志类型，导出到本地。



### 说明：

最多支持搜索 100 条信息，日志信息会按时间降序显示。

## Fisheye Camera Parameter


To display video properly, you need to set fisheye parameters properly according to the actual mounting mode.



### NOTE!

This function is only supported by fisheye cameras. Please see the actual model for details.

1. Click **Live View>Mount**. Select the mounting mode. The selected mounting mode must be consistent with the actual mounting mode.

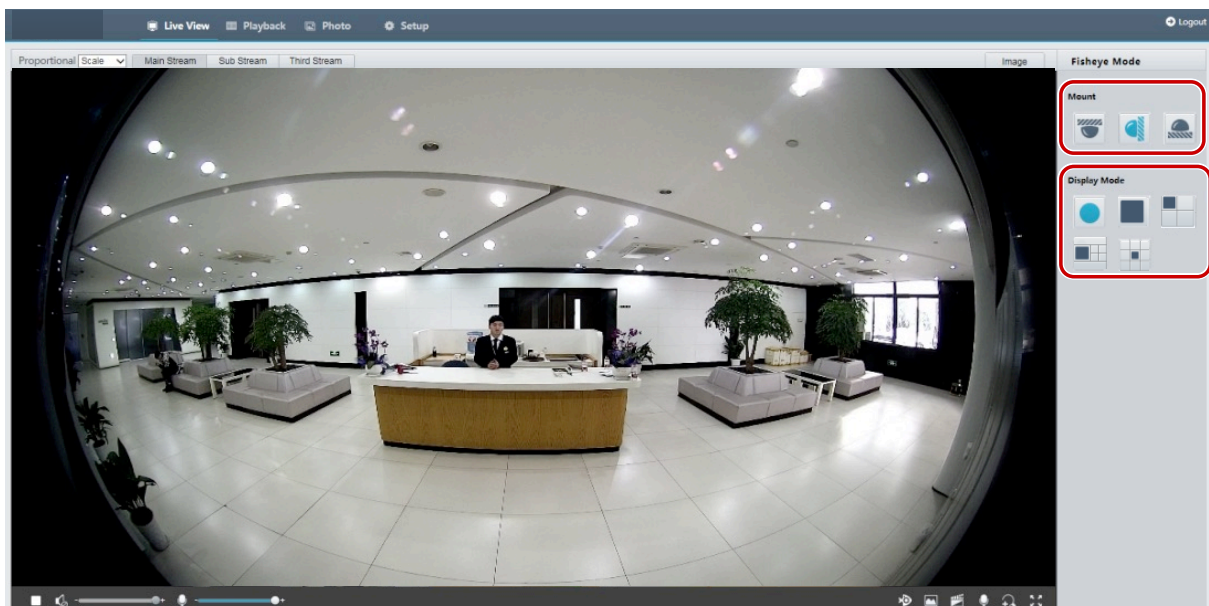





For some camera models, the page is displayed as follows.



2. Set the parameters. The following table describes some major parameters.


Parameter	Description
	<p>Eleven display modes:</p> <ul style="list-style-type: none"> <li>• Original Image</li> <li>• Panoramic</li> <li>• Panoramic+3PTZ</li> <li>• Panoramic+4PTZ</li> <li>• Panoramic+8PTZ</li> <li>• 360°Panoramic+1PTZ</li> <li>• 180°Panoramic</li> <li>• Fisheye+3PTZ</li> <li>• Fisheye+4PTZ</li> <li>• 360°Panoramic+6PTZ</li> <li>• Fisheye+8PTZ</li> </ul>
	<p>Three mounting modes:</p> <ul style="list-style-type: none"> <li>• Ceiling</li> <li>• Wall</li> <li>• Desktop</li> </ul>

Parameter	Description
	<p><b>Note:</b> The selected mounting mode must be consistent with the actual mounting mode.</p>
 	<p>Split Mode:</p> <ul style="list-style-type: none"> <li>• Horizontal</li> <li>• Vertical</li> </ul> <p><b>Note:</b> Split mode shows only when Display Mode is Panoramic and Mount mode is not wall mount.</p>
	<p>Dewarping Angle[0°~90°]:</p> <ul style="list-style-type: none"> <li>• 0°: for areas near lens center where fisheye distortion is slightest.</li> <li>• 90°: for image edges where fisheye distortion is strongest.</li> </ul> <p><b>Note:</b> Dewarping angle shows only when Display Mode is Panoramic and Mount mode is not wall mount.</p>

## 4 Live View

Live view means playing live video (real-time audio and video) received from a camera in a window through the Web interface.

If you log in with the **Live View** check box selected, live video appears by default when you are logged in. You may double-click the window to enter or exit full screen mode.

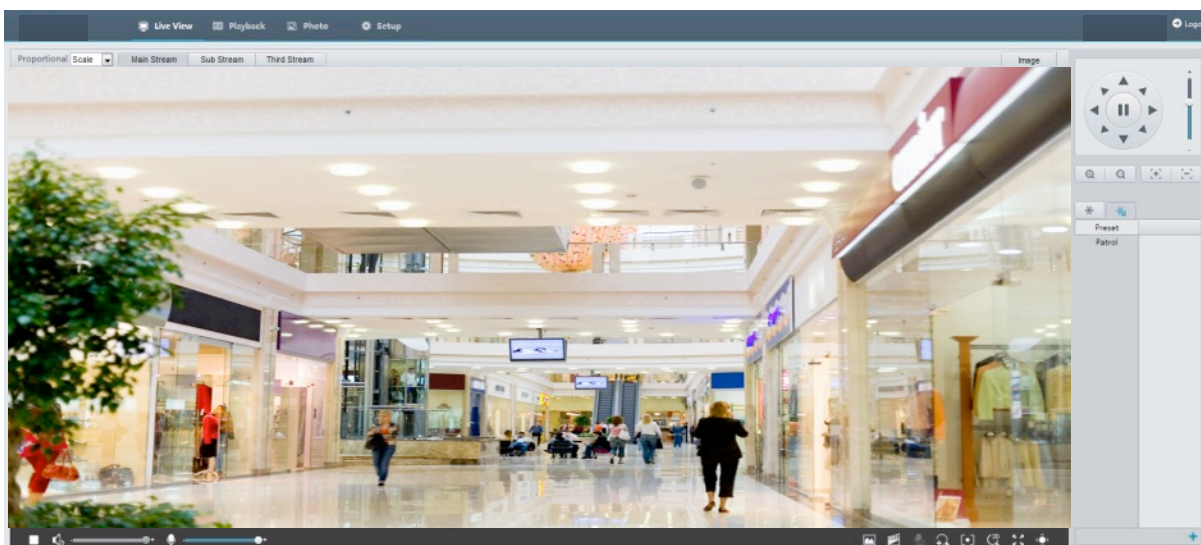


## Live View Toolbar



### NOTE!

The supported live view operations may vary with camera model. For the operations that your camera supports, see the Web interface.

Button	Description
	Play/stop live video.
	Adjust the output volume for the media player on the PC.
	Adjust the microphone volume on the PC during audio communication between the PC and the camera.
	Take a snapshot of the current image displayed on the PC. <b>Note:</b> The path for saving snapshots are set in <b>System Configuration</b> .
	Start/stop local recording. <b>Note:</b> The path for saving local recordings is set in <b>System Configuration</b> .
	Start/stop audio communication between the PC and the camera.
	Start/stop digital zoom. For more details, see <a href="#">Using Digital Zoom</a> .
	Start/stop area focus. For more details, see <a href="#">Using Area Focus</a> .
	Start/stop 3D positioning. For more details, see <a href="#">Using 3D Positioning</a> .
	Show/hide the PTZ control panel.
	Set image display ratio in the window. For example, to display high-definition images at original 16:9, select <b>Scale</b> ; to display according to window size, select <b>Stretch</b> ; to display with the original image size, select <b>Original</b> .
	Reset the packet loss rate to zero. <b>Note:</b> After you move the mouse cursor on a live view window, this button appears on the floating toolbar.
	Display packet loss rate and bit rate information at the bottom of the window. <b>Note:</b> After you move the mouse cursor on a live view window, this button appears on the floating toolbar. Click this button to always display the information. With another click, the information appears only when you move the mouse cursor over the window or place it at the bottom. If the mouse cursor rests on the window for around 3 seconds or leaves the window, the information disappears.
	Click this button to open the image setting page.

Button	Description
	Display in full screen mode.
<div data-bbox="233 282 384 327" style="border: 1px solid gray; padding: 2px; margin-bottom: 2px;">Main</div> <div data-bbox="233 338 384 383" style="border: 1px solid gray; padding: 2px; margin-bottom: 2px;">Sub</div> <div data-bbox="233 394 384 439" style="border: 1px solid gray; padding: 2px;">Third</div>	Select a live video stream that the camera supports: main stream, sub stream or third stream.

## Viewing Certain Area of Images


Digital zoom, area focus and 3D positioning allow you to get more details of certain part of images. Digital zoom enlarges an image with loss in image quality, while 3D positioning enlarges an image without.


### Using Digital Zoom




#### NOTE!

The supported live view operations may vary with camera model. For the operations that your camera supports, see the Web interface.

1. On the **Live View** page, click  on the toolbar.

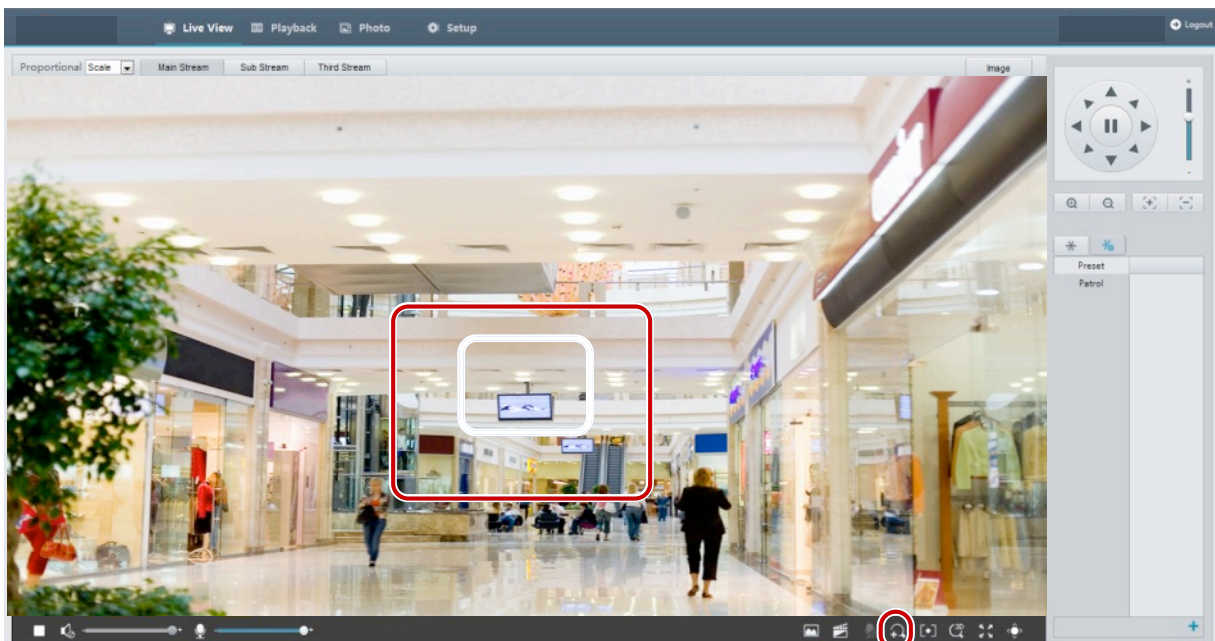


2. Click and hold the mouse button, and then drag from top down (draw a rectangle) to specify an area. To restore the original image size and zoom in on other areas of the image, right-click the mouse.
3. To exit, click .


## Using Area Focus




### NOTE!

The supported live view operations may vary with camera model. For the operations that your camera supports, see the Web interface.

1. On the **Live View** page, click  on the toolbar.

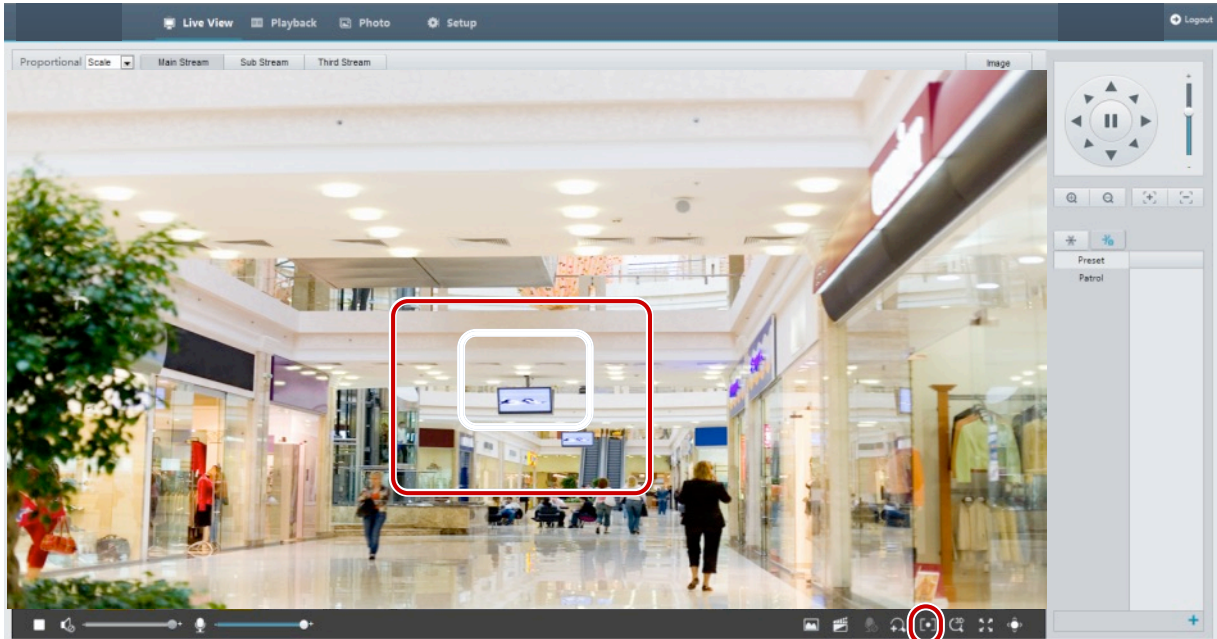


2. Click and hold the mouse button, and then drag from top down (draw a rectangle) to specify an area.
3. To exit, click .


## Using 3D Positioning




### NOTE!


This function is available only for network PTZ cameras and network box cameras equipped with motorized zoom lens and PTZ. Please see actual models for details.


1. On the **Live View** page, click  on the toolbar.

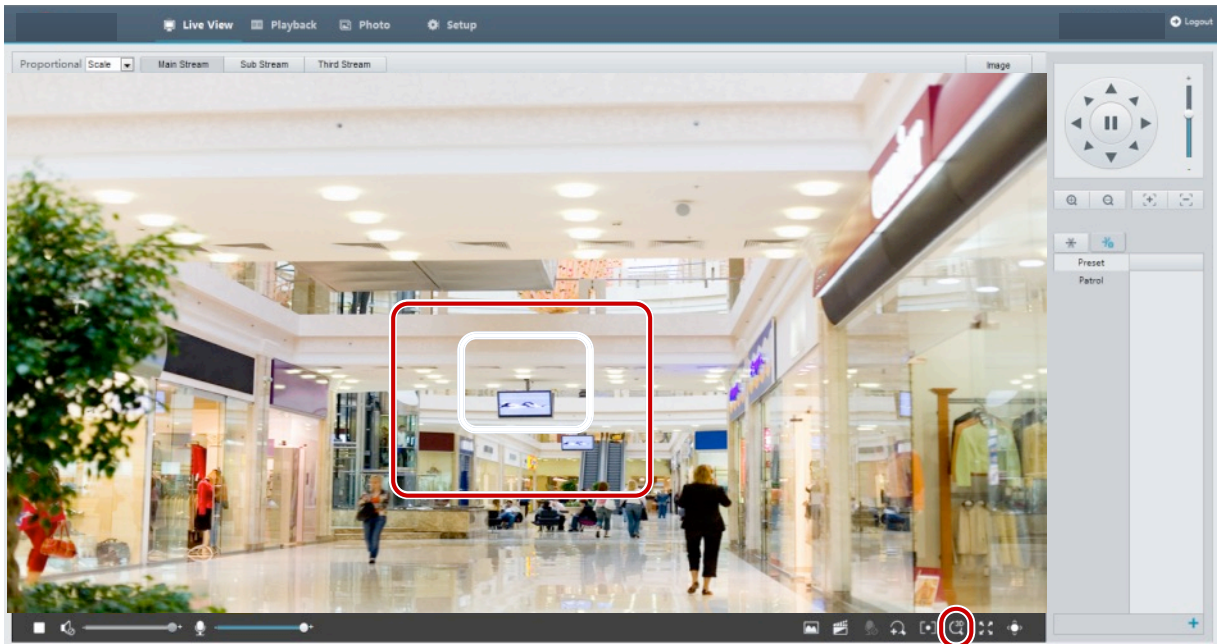

2. Click and hold the mouse button, and then drag from top down (draw a rectangle) to specify an area. Dragging reversely (from down top) will zoom out.
3. To exit, click .

## Face Snapshot

1. In live view page, click  in the tool bar.

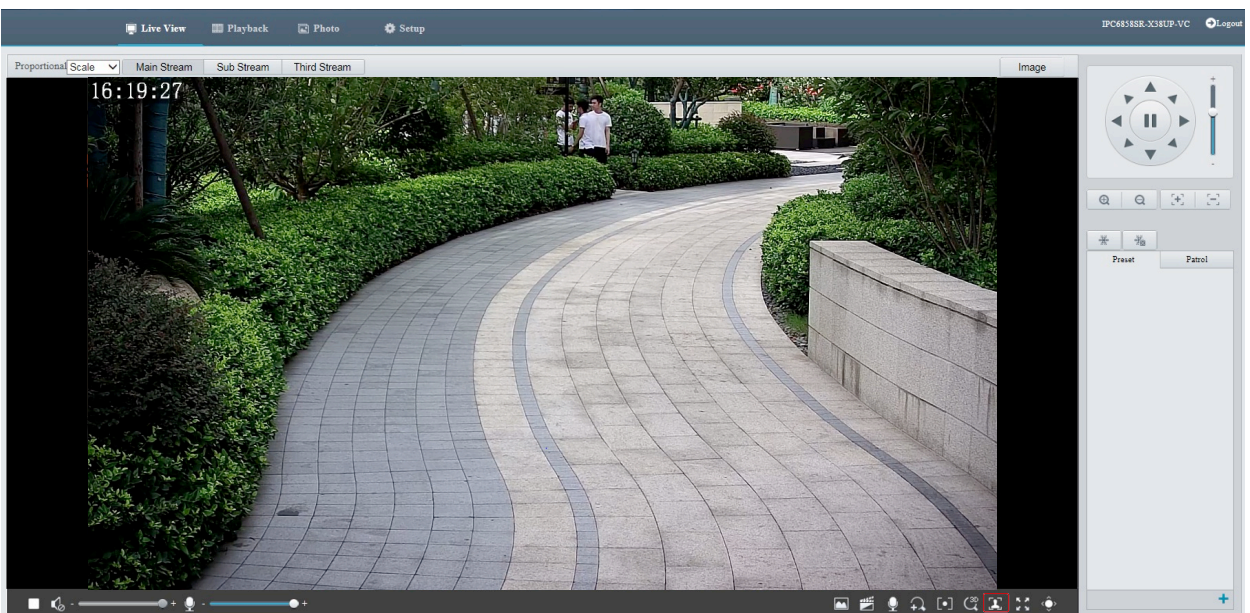

2. Snapshot list will be displayed on the right of live view, with the latest on top. Up to 200 snapshots will be displayed. The following figure shows an example.



Some models support structured data which indicates the attributes of detection objects. To display the attributes in live view page, you need to select Attribute Collection in Events

## Thermal Alarm

### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




#### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

**Temperature Measurement**


Enable Temperature Measurement



Temperature Unit	<input type="text" value="Celsius (°C)"/>
Rule Type	<input type="text" value="Measure Face"/>
Measurement Mode	<input type="text" value="Measure Body Surface T"/>
<b>Alarm Rule</b>	
Alarm Threshold	<input type="text" value="37.3"/>
<b>Temperature Correction</b>	
Black Body Temperature	<input type="text" value="36.0"/> <a href="#" style="font-size: small;">Set Black Body Position</a>
Correction Temperature	<input type="text" value="0.0"/>
Environment Temperature	<input type="text" value="25.0"/>

### 1. Preparation



- a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.
  - b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.
2. Configuration
- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
    - a. Measure body surface temperature: This mode is suitable for precise measurement.
    - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
  - Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
  - Set temperature correction parameters.
    - c. The black body temperature is 36°C by default and cannot be changed.
    - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
    - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.




## NOTE!


- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

## 3. Common Alarm.



4. Some models support human body snapshot association. To display the human body picture in live view page, you need to select human body snapshot in Face .

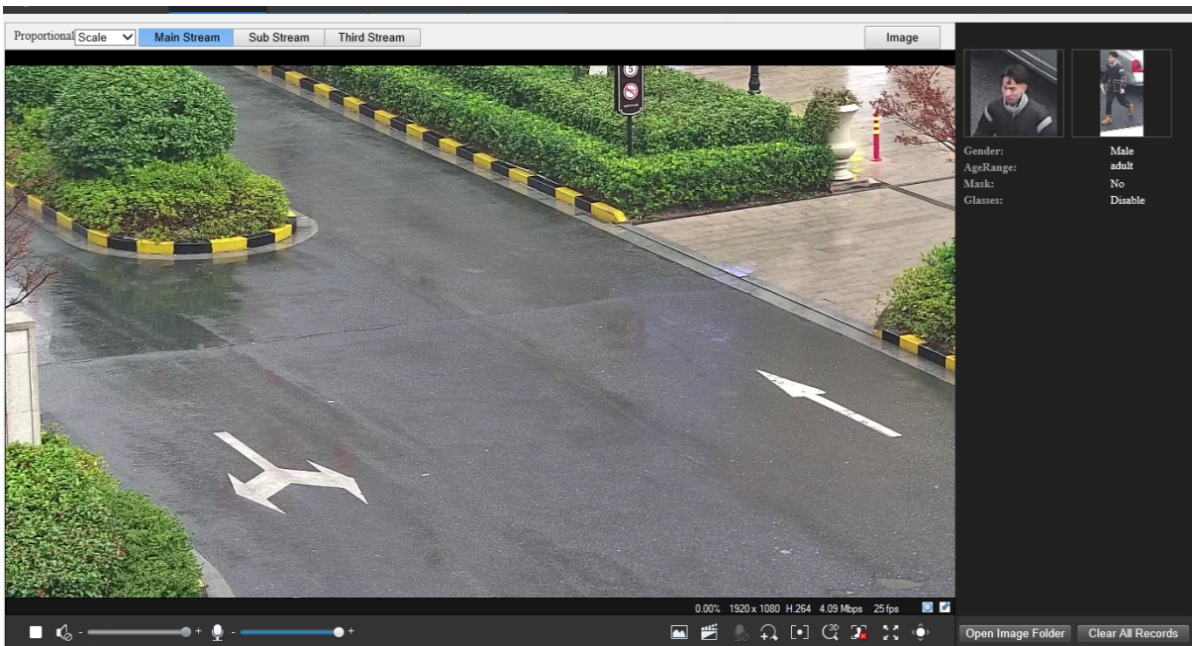


5. Click  to stop face snapshot display.
6. Click Open Image Folder to view the snapshots saved in your PC. The snapshots are saved in JPEG format. You may also change the image path in Setup > Common > Local Parameters. When the disk space is smaller than 100MB, you will be prompted to clear auto snapshot folder, and new snapshots will not be displayed in live view page until disk space is freed.
7. Click Clear All Records to clear the snapshots.

## Deep Perimeter Snapshot



### NOTE!

Only some camera models support this function, and the actual interface may vary.

1. In live view page, click  in the tool bar.



To display structured data of detection objects in live view page, you need to select Attribute Collection in Events

## Thermal Alarm


### Temperature Measurement


The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.



### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

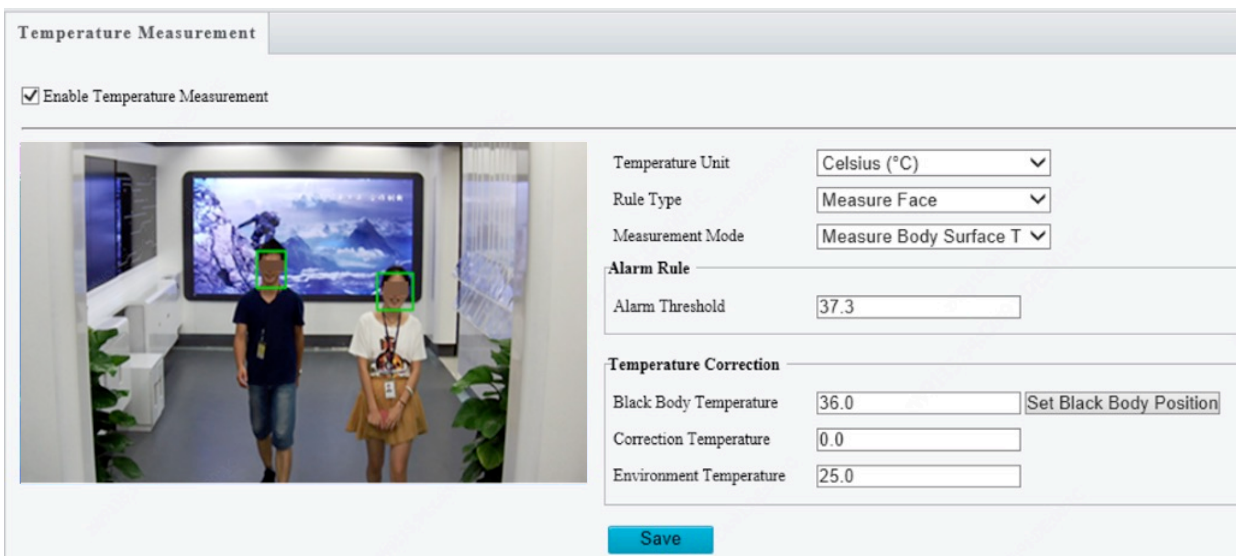

1. Preparation
  - a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.
  - b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

## 2. Configuration


- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - a. The black body temperature is 36°C by default and cannot be changed.
  - b. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - c. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.




### NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

## 3. Common Alarm. The following figure shows an example.

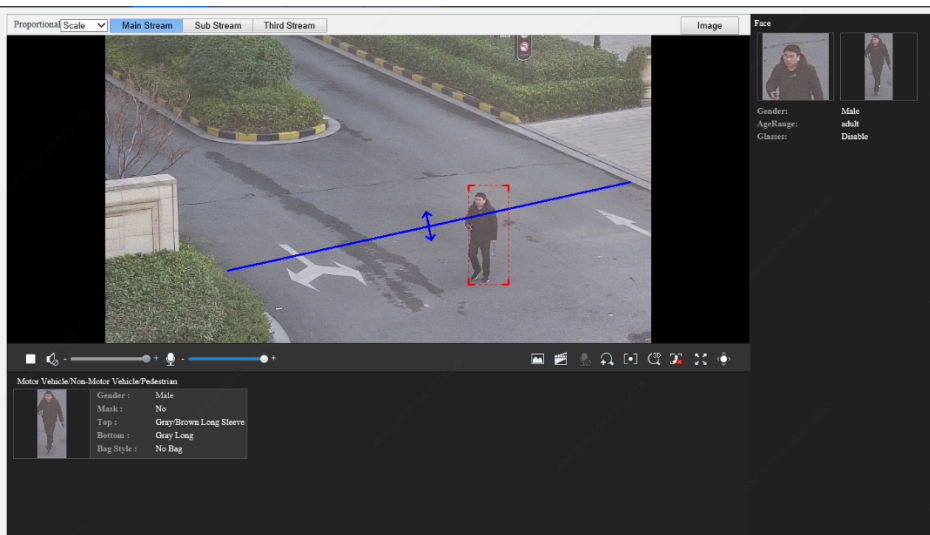


4. Click  to stop deep perimeter snapshot display.
5. Click Open Image Folder to view the snapshots saved in your PC. The snapshots are saved in JPEG format. You may also change the image path in Setup > Common > Local Parameters. When the disk space is smaller than 100MB, you will be prompted to clear auto snapshot folder, and new snapshots will not be displayed in live view page until disk space is freed.


## Click Clear All Records to clear the snapshots.Mixed-Traffic Detection Snapshot



### NOTE!

Only some camera models support this function, and the actual interface may vary.

1. In live view page, click  in the tool bar.

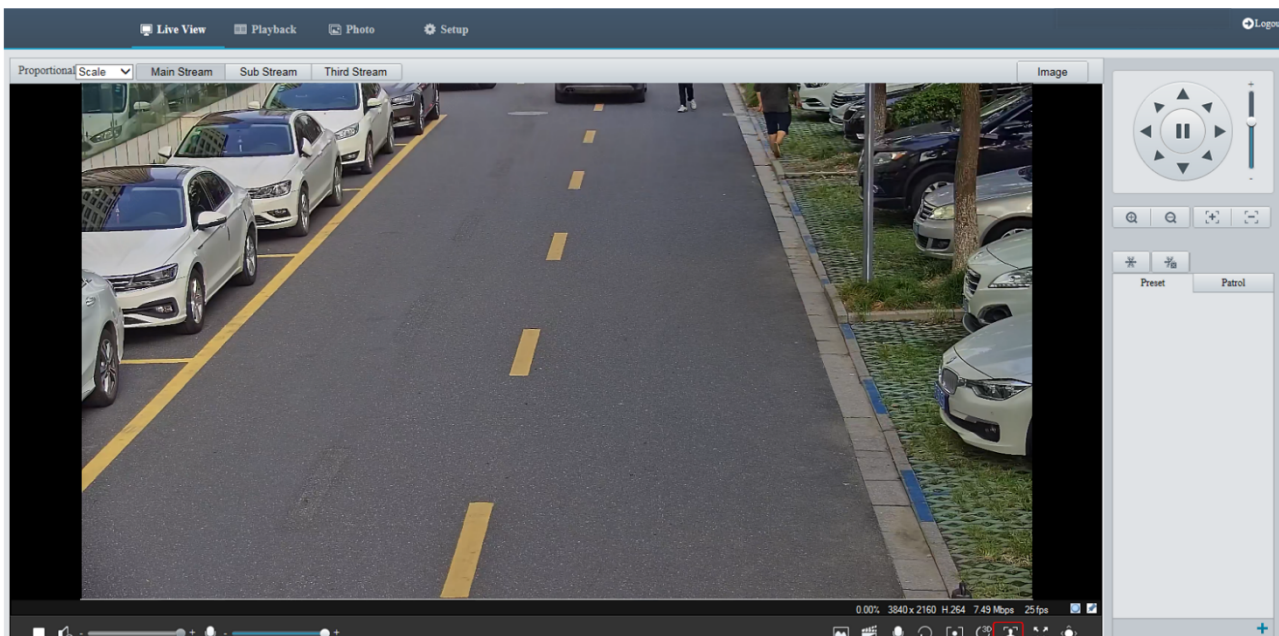

## To display structured data of detection objects in live view page, you need to select Attribute Collection in Events

### Thermal Alarm

#### Temperature Measurement

The temperature measurement function can detect people with abnormal body temperatures. Select Setup>Events>Thermal Alarm. Go to the Temperature Measurement tab.




### NOTE!

- This function is only available on devices that support temperature measurement.
- This function may vary with models. Please see the actual Web interface for details.

**Temperature Measurement**

Enable Temperature Measurement

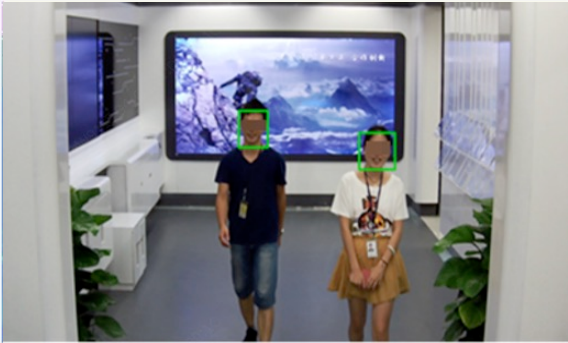

Temperature Unit:

Rule Type:

Measurement Mode:

**Alarm Rule**

Alarm Threshold:

**Temperature Correction**


Black Body Temperature:  [Set Black Body Position](#)

Correction Temperature:

Environment Temperature:

### 1. Preparation

a. Click Setup>Common>Local Settings, enable Untriggered Target and Display Attributes.

b. Click **Setup>Intelligent>Smart**. Select the **Face** check box and then click  on the right, set **Snapshot Area**, enable **Face Overlay** and set the alarm-triggered actions as required.

### 2. Configuration


- Select **Enable Temperature Measurement** and set the temperature unit, rule type and measurement mode.
  - a. Measure body surface temperature: This mode is suitable for precise measurement.
  - b. Measure internal temperature: This mode is the default measurement mode, suitable for body temperature screening.
- Set alarm rule. Modify the alarm threshold temperature as needed, 37.3°C is recommended.
- Set temperature correction parameters.
  - c. The black body temperature is 36°C by default and cannot be changed.
  - d. The value of correction temperature is 0. You don't need to change this value in scenes that meet the temperature measurement requirements.
  - e. Set environment temperature. Modify the environment temperature according to the actual environment temperature on site.




### NOTE!

- The black body temperature is 36°C by default. After power on, when the green value (set temperature) and the red value (actual temperature) on the back panel of the black body are both displayed steadily as 36.00, it means that the black body is operating normally.
- The black body should be kept facing the camera.
- The correction temperature function can compensate for the body surface temperature to avoid inaccurate temperature measurement data caused by excessive temperature difference in the practical application environment.

### 3. Common Alarm. The following figure shows an example.

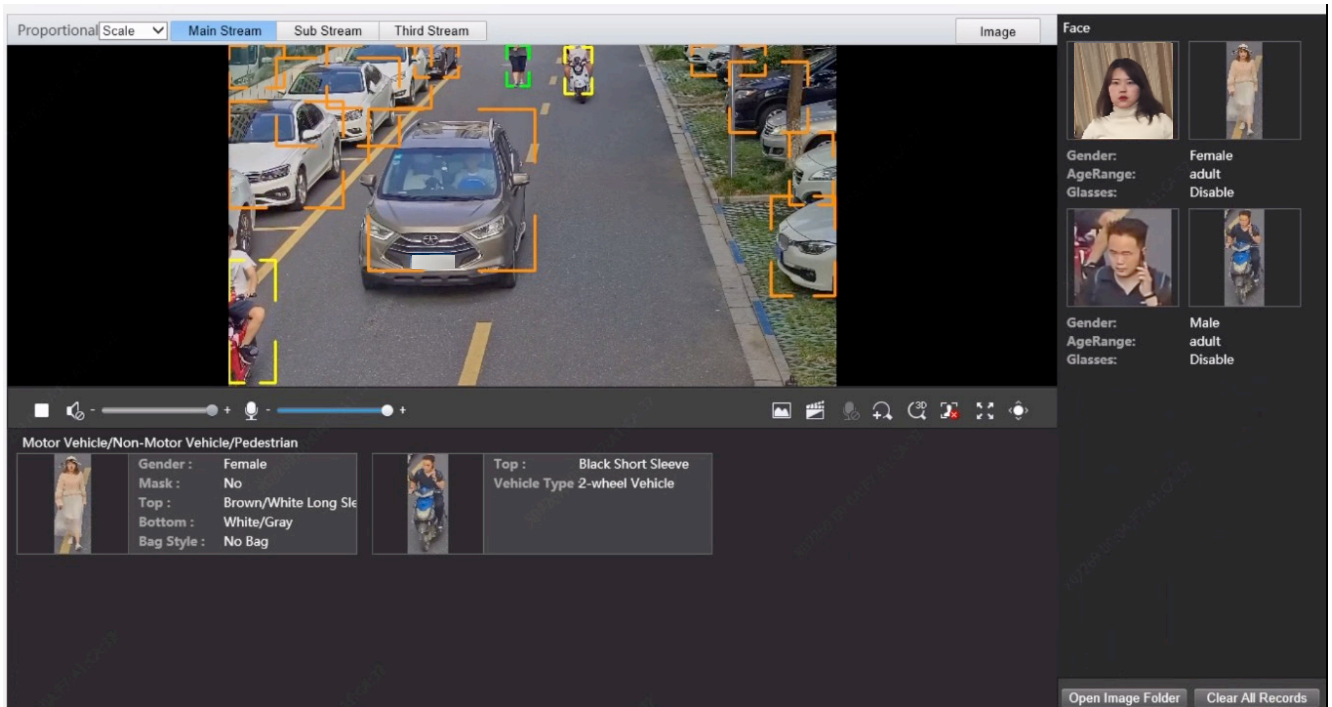

4. Click  to stop displaying snapshots.
5. Click Open Image Folder to view the snapshots saved in your PC. The snapshots are saved in JPEG format. You may also change the image path in Setup > Common > Local Parameters. When the disk space is smaller than 100MB, you will be prompted to clear auto snapshot folder, and new snapshots will not be displayed in live view page until disk space is freed.
6. Click Clear All Records to clear the snapshots.

## Live View of Fisheye Cameras




### NOTE!


- This function is only supported by the network fisheye cameras. Please see actual models for details.
- The preview image on the Web may vary with the fisheye settings for the camera. Please set the fisheye parameters ([see Fisheye Cameras Parameter](#)) and the fisheye mode of the camera before you start live view.

Display modes include three major types: Original Image, Fisheye and PTZ, Panoramic and PTZ. In different mounting modes, images are displayed differently. The following takes wall mount as an example.

When Original Image is selected, fisheye images are displayed as follows.

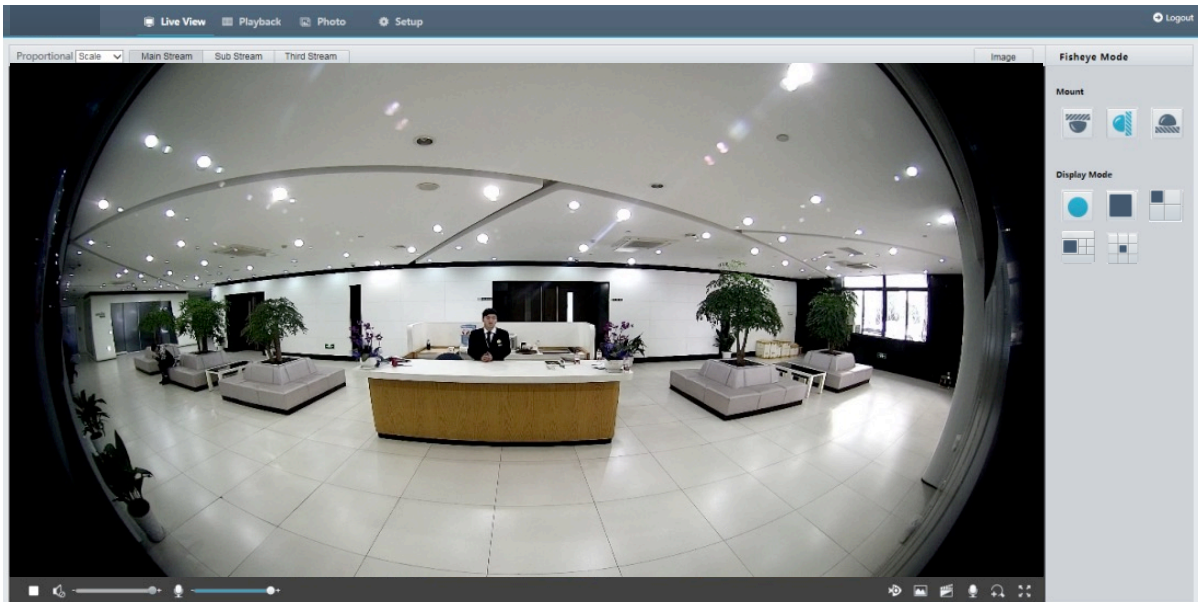

When Panoramic is selected, dewarped panoramic images are displayed as follows.

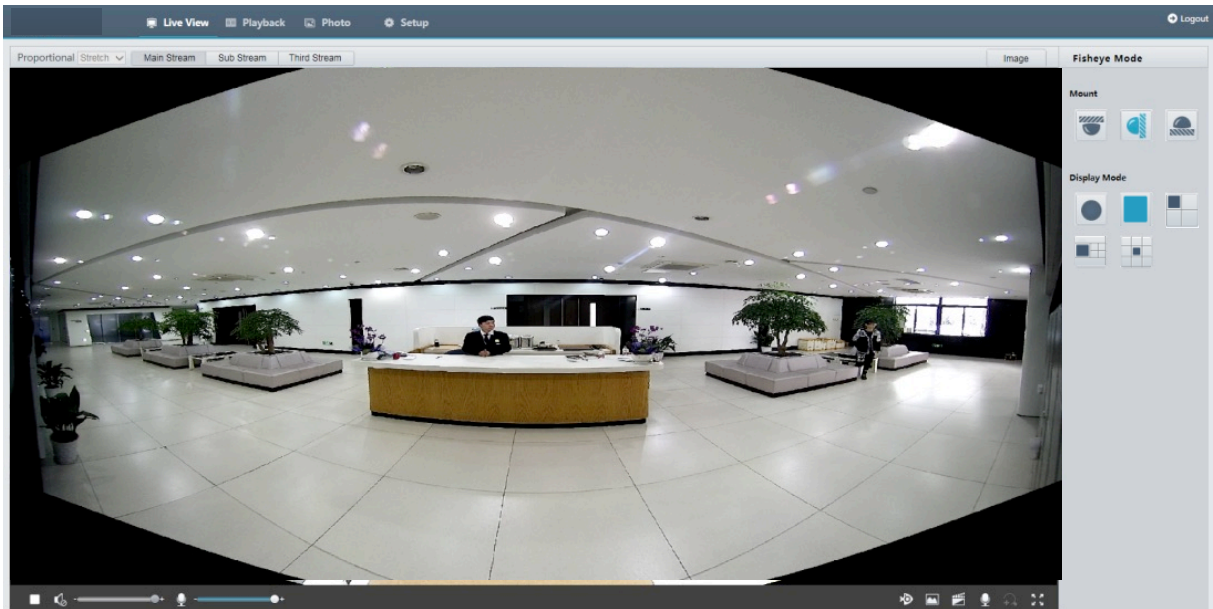







### NOTE!

If the ceiling mount or desktop mount is adopted, the panorama image (two 180° images) is a dewarped image of the fisheye preview image (360° image). Please mount the camera with an appropriate angle of view according to the actual surveillance requirements.

For example, if the camera is installed on the ceiling, the surveillance target is displayed on the upper part of the panorama image when the intersection angle between the device cable outlet (logo) and the surveillance target in clockwise direction is 135°.

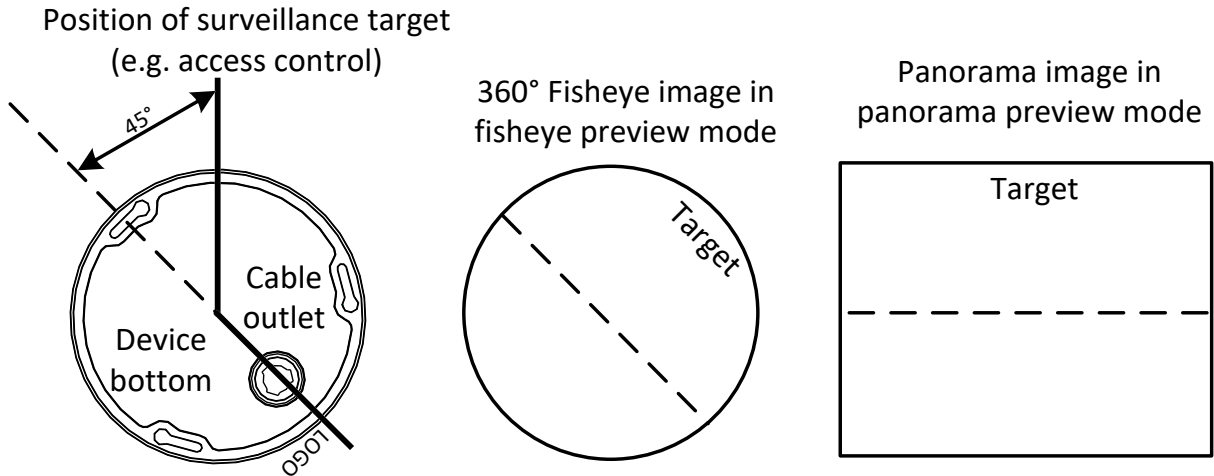

When Panoramic+4PTZ preview mode is selected from the list on the right, 4 local images are displayed, from left to right, from top to down, by default. You may perform PTZ control and zoom operations on each local image, as shown in the figure below.

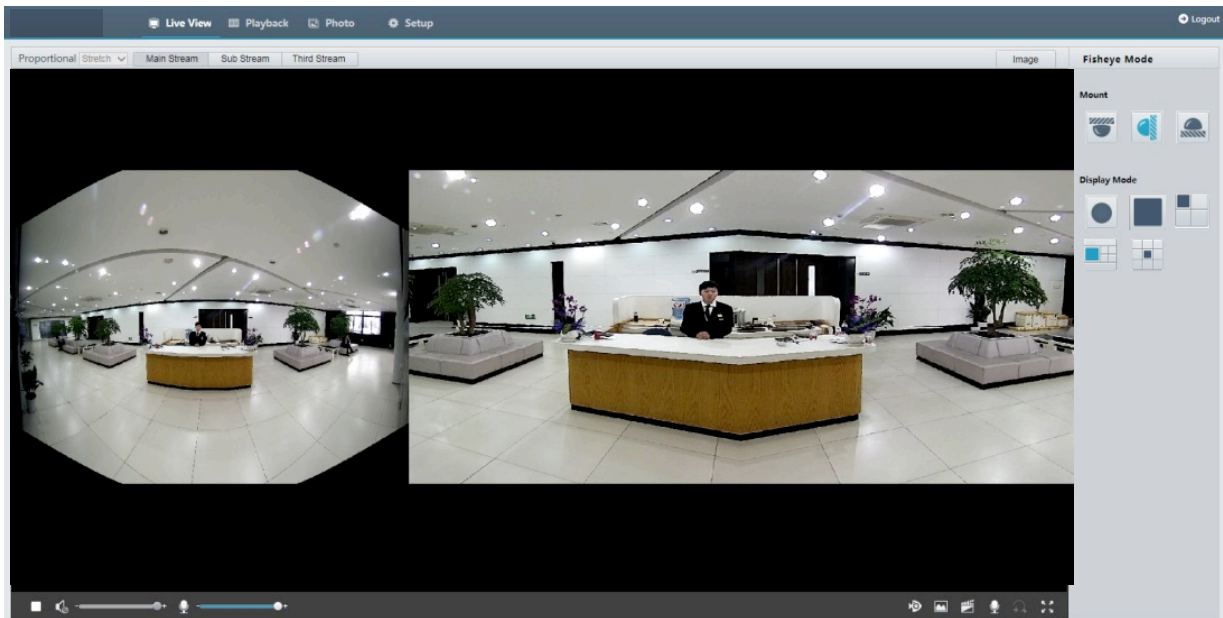

## 5ePTZ of Panoramic Cameras




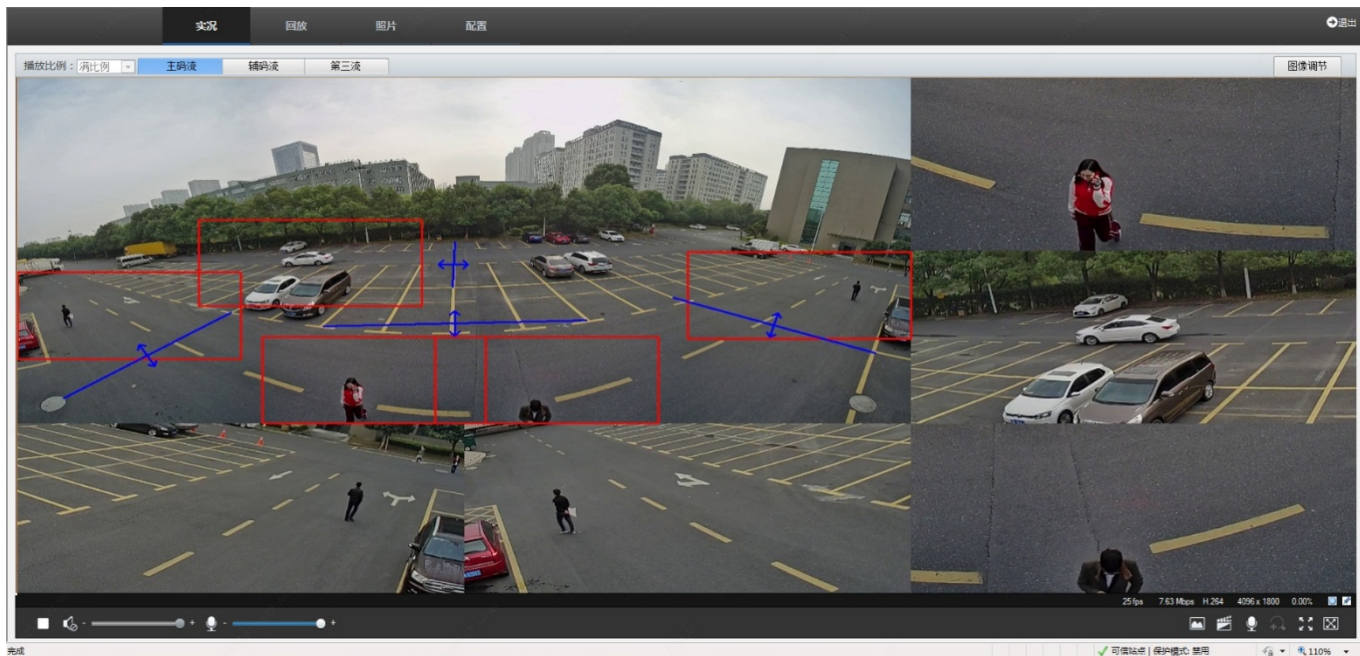
### NOTE!


This function is available only for some certain camera models, please see actual models for details. Auto-tracking can be only supported in the main stream.

1. On the **Live View** page, select  on the toolbar as shown below.



2. When you click  in panoramic mode, the live view would change to the 5ePTZ tracking mode. Then camera would detect moving objects in the live view when perimeter protection function is enabled, besides, it can track and enlarge 5 targets that trigger the alarm rule which you set up in perimeter protection function at most simultaneously. This function performs like a PTZ camera's tracking and zooming feature.



3. Click  in 5ePTZ tracking mode to switch to the panoramic mode.

# 5 Video Playback and Download with Edge Storage



## NOTE!

- Edge storage refers to recording video to the memory card of a frontend device (mostly a camera). Local recording refers to recording video to a local PC client.
- Before you play back video with edge storage, check that the camera has been installed with a memory card and storage has been configured.
- This function is not supported by some models. Please see actual models for details.

## Video Playback


1. Click **Playback** on the home page.



2. Select the date from the calendar.
3. Click **Query**.
4. Under **Results**, double-click the time period to start playing the recording.

## Download

1. Click **Playback** on the home page.

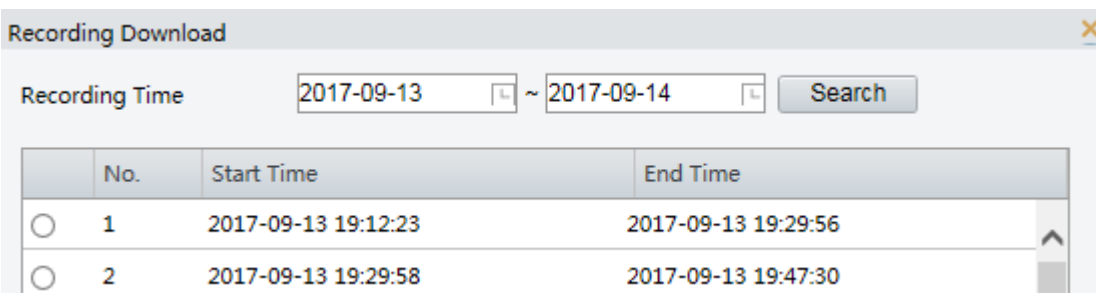

2. Search for video within a specified period. The results will be shown in a list.
3. Select your video and click **Download**. The video will be downloaded to your local path from the memory card (local path can be changed in **LocalSettings**).
4. Click **Open** to show the folder where the downloaded video is saved.

## 6 PTZ Control

This function is available only for the PTZ dome cameras or a box camera installed on a Pan/Tilt motor.








### NOTE!

- Some of the lens control functions are applicable to cameras equipped with motorized lens.
- The PTZ control buttons may vary with camera model. For the PTZ control buttons that your camera supports, see the Web interface.

### PTZ Control Toolbar

Item	Description
Preset	Select a preset and then click  . The PTZ camera goes to the selected preset. To add a preset, click  . To delete a preset, click  .
Patrol	Select a patrol route and then click  to start patrol. <ul style="list-style-type: none"> <li>• To edit a patrol route, click  .</li> <li>• To add a patrol route, click  .</li> <li>• To delete a patrol route, click  .</li> </ul>
	Adjust the moving speed of the PTZ camera.
	Control the direction of the PTZ camera and release the control.
/ / / / /	Turn on or off IR. Turn on or off the wiper. Turn on or off the heater. Turn on or off the illuminator. Turn on or off snow control.

Item	Description
	Adjust camera focus.
	Adjust camera zoom.
	Increase or decrease iris diameter.
	Shortcut keys for PTZ control. After the mouse cursor changes to one of these shapes in live view, click and hold the left mouse button to operate the PTZ camera. <b>Note:</b> <ul style="list-style-type: none"> <li>• Only PTZ dome cameras and PTZ cameras support this function.</li> <li>• These buttons are unusable when you are using 3D positioning or digital zoom.</li> </ul>
	Shortcut keys for zooming in or out in live view. Scroll the wheel forward to zoom in or backward to zoom out. <b>Note:</b> Only cameras with motorized zoom lens support this function.


## Setting Patrol by Presets

### Setting Presets

On the **Preset** tab, you can manage presets or perform certain control operations to the PTZ camera. For more details, see [PTZ Control Toolbar](#).

#### Add a preset


1. On the **Live View** page, click **Preset** on the control panel.

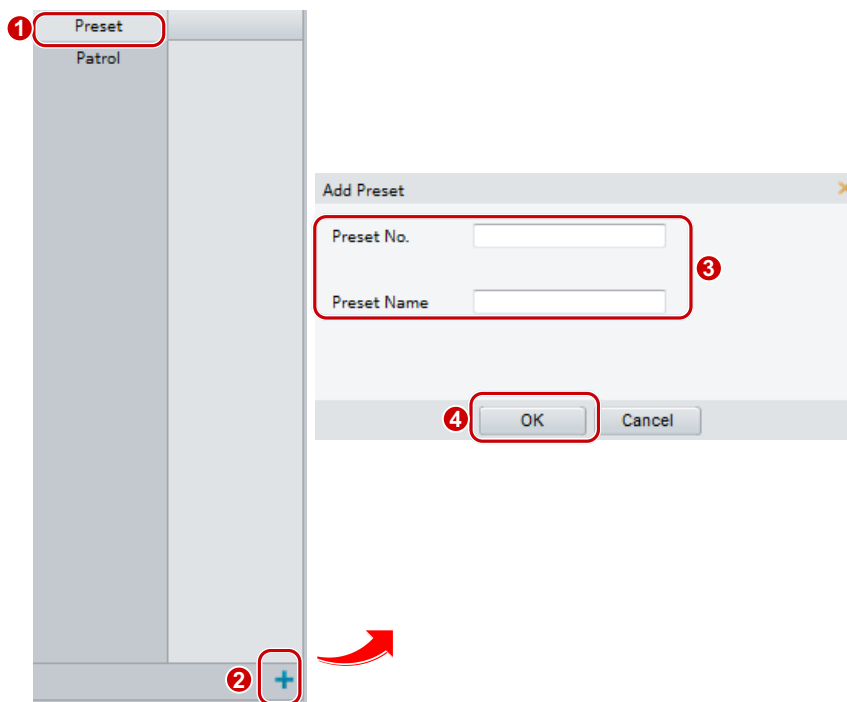


2. Adjust the camera till it points toward the desired direction.
3. Adjust zoom and focus as needed to obtain the optimal image.
4. Click **+** to add it as a preset. Enter a number and name for the preset and then click **OK**.

## Go to a preset


1. On the **Live View** page, click **Preset** on the control panel.

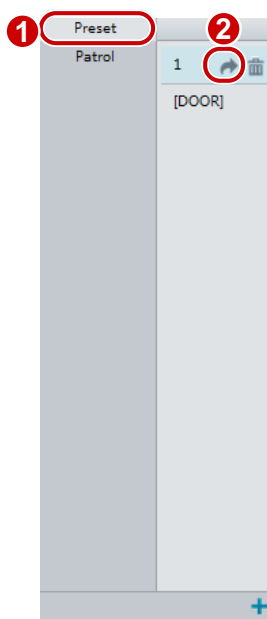


2. Click  for a preset. The PTZ camera goes to the selected preset.

## Delete a preset

1. On the **Live View** page, click **Preset** on the control panel.

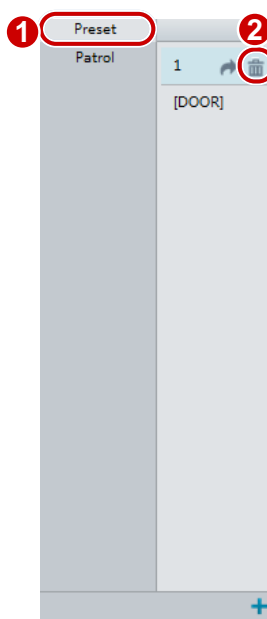

2. Click  for a preset and then confirm the delete.

## Setting Patrol


A patrol route is the track by which a PTZ camera follows when moving from a preset to the next. The length of time that a PTZ camera stays at each preset is configurable. Multiple patrol routes are allowed for a PTZ camera.


Patrol actions include going to a preset and staying at the preset for a certain amount of time before going to the next. You can set the rotation direction, zoom, rotation speed, patrol time, and stay time. The system

records the route and adds it to the action list. You may select **Keep Rotating** so the PTZ camera follows the same route and patrols repeatedly.

### Add a patrol route

1. On the **Live View** page, click **Patrol** on the control panel.

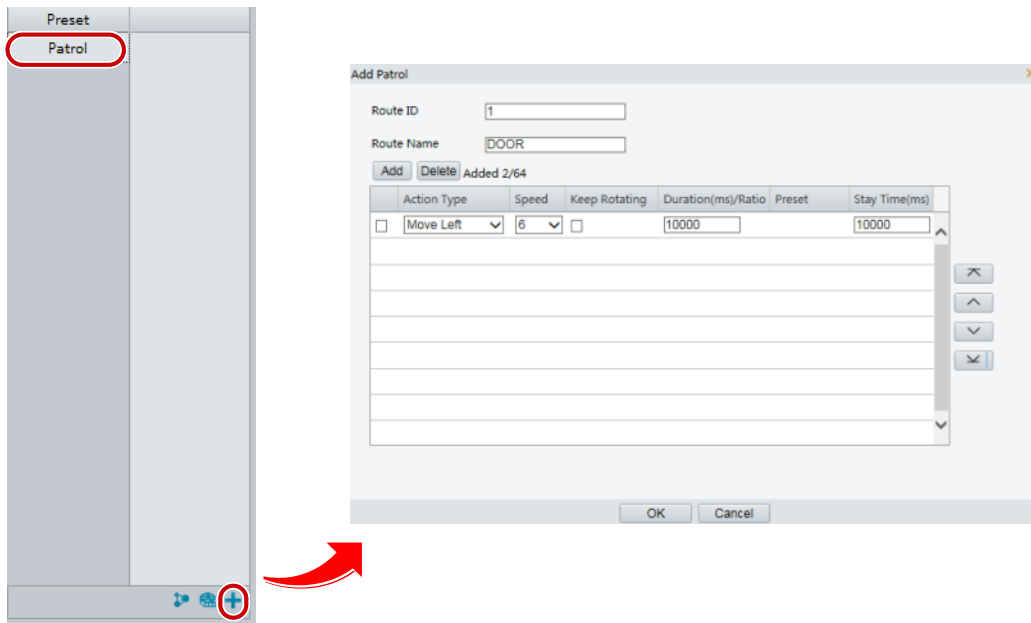

2. Click .
3. On the **Add Patrol** page, enter the route ID and name, and then click **Add** to add a patrol action. Up to 64 actions are allowed. Each line includes two actions when action type is set to **MoveDirection** and **Zoom**, so 32 actions are allowed. Use the buttons to adjust the sequence of the actions.

Patrol actions include:

- Go to a preset and stay for a certain amount of time before going to the next preset.
- Rotate at the set speed in the set direction for a certain amount of time, zoom, stay at a set position for a certain amount of time, or patrol repeatedly if **Keep Rotating** is selected.





It is recommended that the first action type is **Go to Preset**.


4. Click **OK**.

### Record a patrol route

1. On the **Live View** page, click **Patrol** on the control panel.




2. Click  to start recording the patrol route. You can adjust the direction and zoom of the camera during the recording. The system records the motion and track of the camera and adds them to the action list.
3. Click  to finish recording. Then the patrol route is saved as a mode route automatically. You can click  to start patrol or  to delete the mode route.

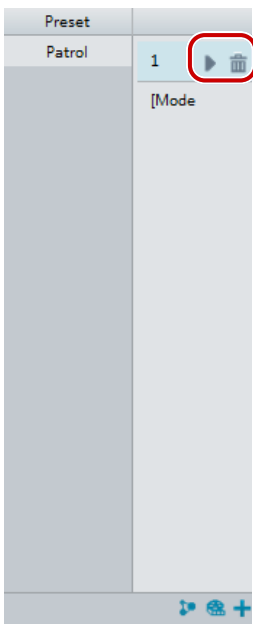


### Make a patrol plan

1. On the **Live View** page, click **Patrol** on the control panel.



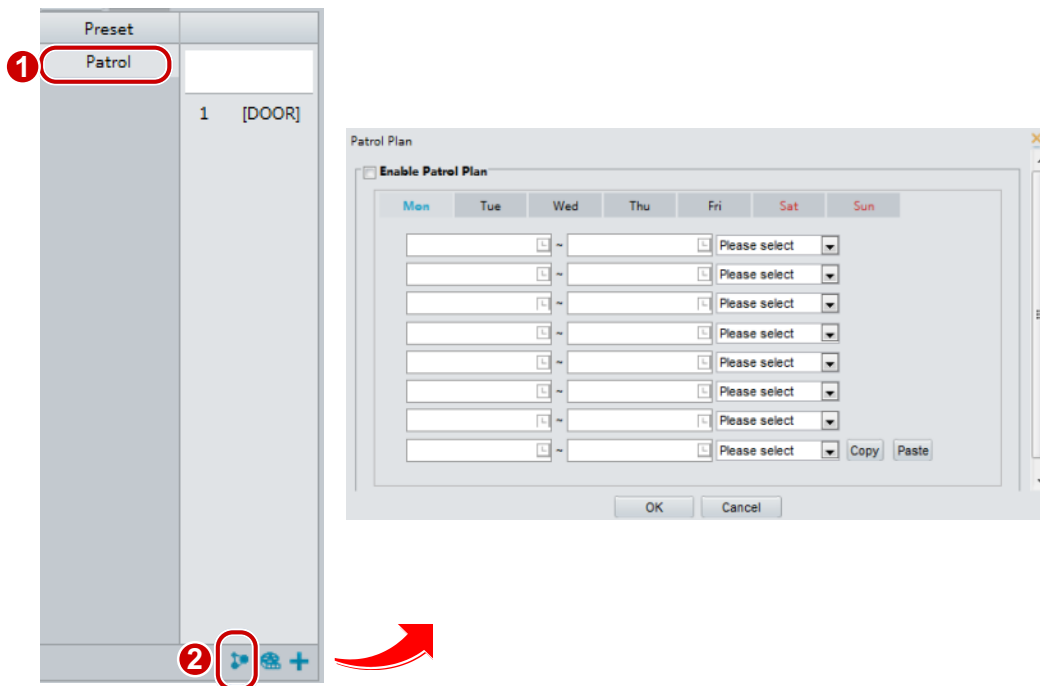


2. Click . The page for setting patrol plans is displayed.
3. Set the correct patrol time and route.
4. Select **Enable Patrol Plan**.
5. Click **OK**.

### Start a patrol route

After you have added a patrol route, select the patrol route to start patrol.


1. On the **Live View** page, click **Patrol** on the control panel.

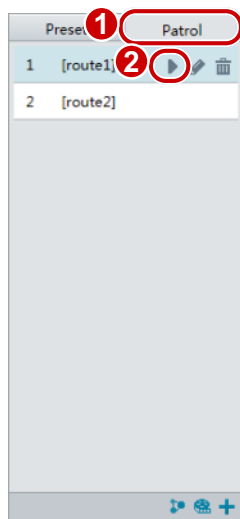


2. Click  for the patrol route you want to start.

### Edit a patrol route


1. On the **Live View** page, click **Patrol** on the control panel.

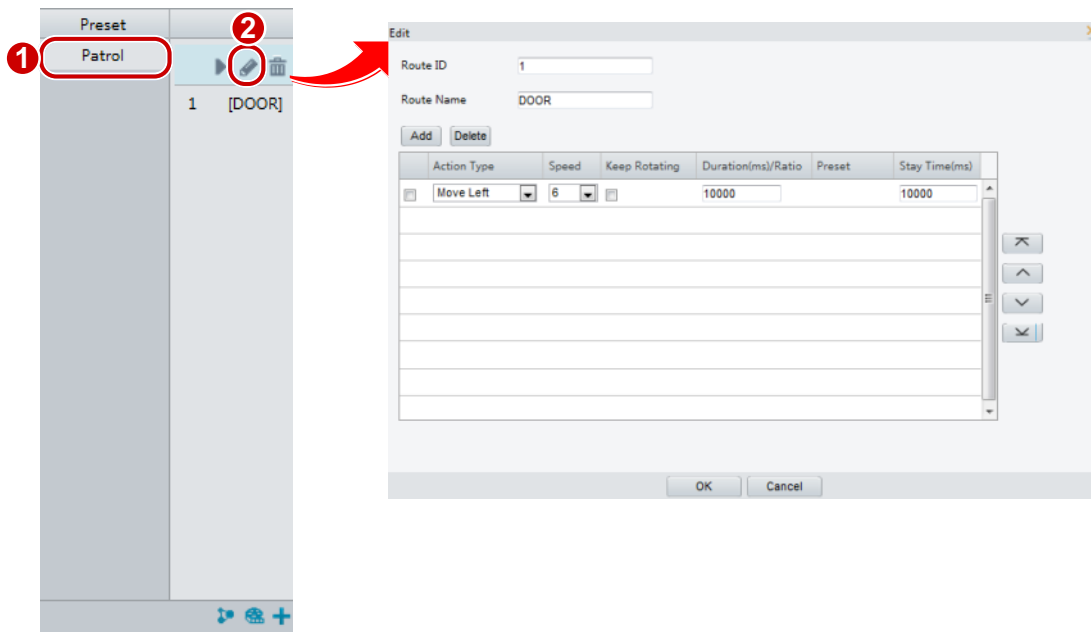


2. Click  for the patrol route you want to edit and modify the settings as required.

### Delete a patrol route

1. On the **Live View** page, click **Patrol** on the control panel.

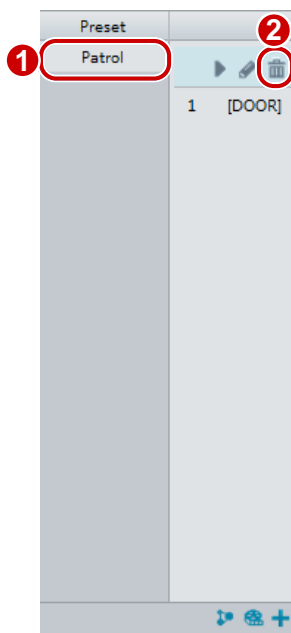

2. Click  for the patrol route you want to delete and then confirm the delete.

## Setting Home Position

PTZ camera will return to home position if no operation is made within a specified period.



### NOTE!

- This function is available for network PTZ cameras only.
- You need to add presets or a patrol route first. See [Add a preset](#) and [Add a patrol route](#) for details.

1. Click **Setup>PTZ>Home Position**.

Home Position  On  Off

Mode

ID

Idle State(s)

2. Select a mode and ID.
3. Click **Save**.

## Remote Control PTZ

When the third-party platform is used and the PTZ protocol does not match that, you can set the remote control function to control the PTZ.



### NOTE!

This function is only supported by PTZ cameras.

1. Click **Setup>PTZ>RemoteControl**.

Remote Control  On  Off

Listener Port

Address Code

2. Select **On** to enable **Remote Control**. Set the listener port and address code. The following table describes some major parameters.

Acronym	Description
ListenerPort	Camera's local port, which cannot be a port that is already in use. Change the default setting only when necessary.
Address Code	The camera can read the address code contained in instructions. The camera interprets the instruction only when the address code in the instruction is the address code configured here.

3. Click **Save**.

## PTZ Limit

Set rotation limits to prevent the PTZ camera from hitting obstacles such as a wall.







### NOTE!

This function is only supported by some PTZ cameras.

1. Click **Setup>PTZ>PTZ Limit**.



2. Use directional buttons to rotate the camera to an intended position.
3. Click  to set the current position as a limit. For example, click  on the top to set the upper limit. Clicking  will rotate the camera to the current position if the direction has been changed.
4. Repeat the above steps to set all limits as needed (up, down, left, right).
5. Click **Save**.
6. Click **Start PTZ Limit** to apply the setting.
7. Click  to delete settings and reset the limit.

## Resume Patrol

1. Click **Setup>PTZ>Patrol**.

Preset Snapshot	<input checked="" type="radio"/> On <input type="radio"/> Off
Resume Patrol(s)	<input type="text" value="60"/>

2. Set the time when patrol resumes.
3. Click **Save**.

## Basic Settings

### PTZ Rectification

Use this feature to perform PTZ rectification. The camera returns to the previous position when rectification is completed.

Select **Setup>PTZ>Basic Settings**.

<b>PTZ Rectification</b>	
<input type="button" value="Rectify"/>	
<input type="checkbox"/> Enable Auto Rectification	Execute Time <input type="text" value="02:30:00"/>

- **Rectify:** Click the button to perform a rectification immediately.

- Enable Auto Rectification: Select the check box to enable automatic rectification. Set an execution time. The camera automatically performs PTZ rectification at the set time.

# 7 LPR




## NOTE!

- This function is only available for certain models.

## LPR Live View


1. For cameras installed with Micro SD card, the snapshots will be saved to the SD card. If no SD card is installed, the snapshots will be saved to the PC. Click **Open Image Folder** to view snapshots. The close-up image of plate is displayed on the upper left pane.
2. Click **Clear All Records** to clear snapshot records.

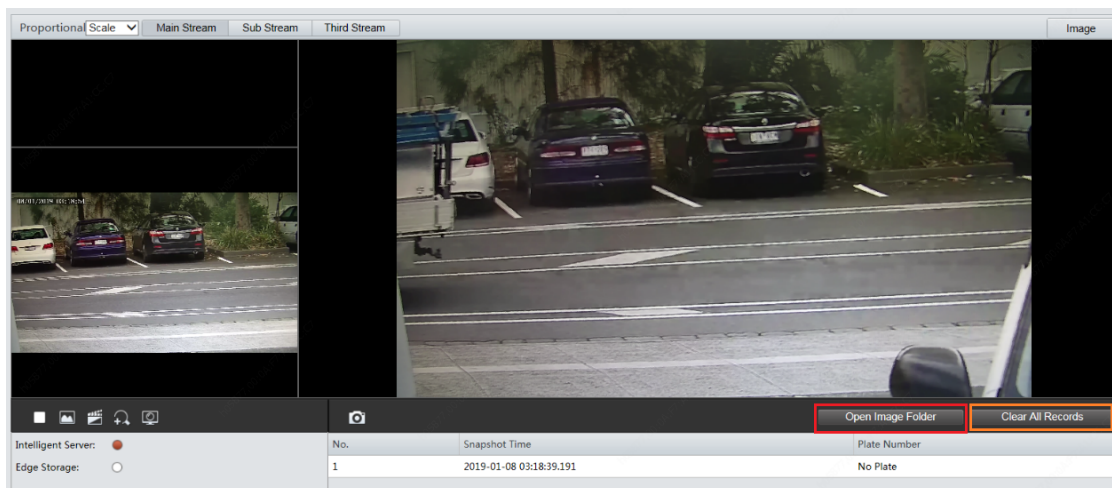


## LPR Configuration

### Draw Detection Area

1. Click **Setup > Intelligent > Traffic Monitoring**. Click **Draw Detection Rules**.

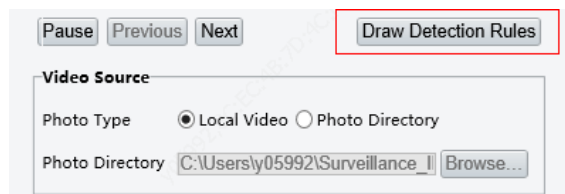

2. Click **Draw Detection Rules**, and then draw a detection area on the snapshot.

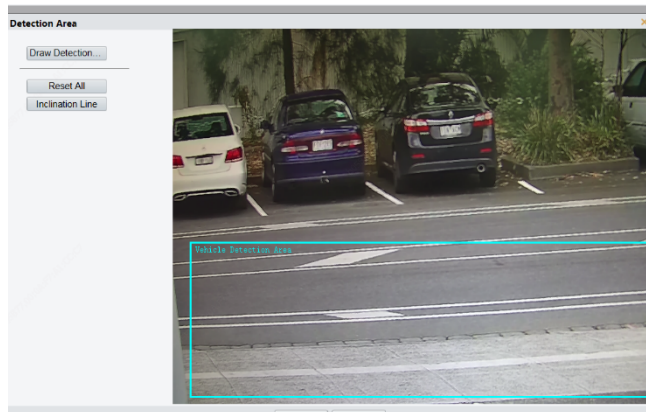


3. Click **Inclination Line**, and then draw an inclination line that shows the inclination of the road surface.



### Reset Flow Counting

Click **Setup>Intelligent>Traffic Monitoring>Smart>Reset Flow Counting**. Set the time to reset LPR snapshot.

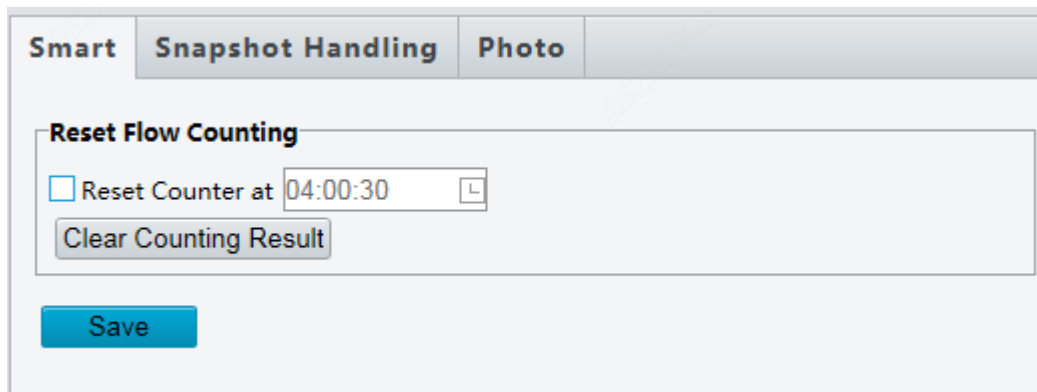

### Smart-Snapshot Handling

Click **Setup>Intelligent>Traffic Monitoring>Snapshot Handling**. Usually the default settings are recommended.




**Unidentified Vehicles:** Select whether to generate passing records for unidentified vehicles. This function is turned on by default.

**Generated Photos:** Select whether to display the close-up image of plate. By default the image is set to display.

### Photo

Click **Setup>Intelligent>Traffic Monitoring>Photo**. Configure snapshot OSD on this page.

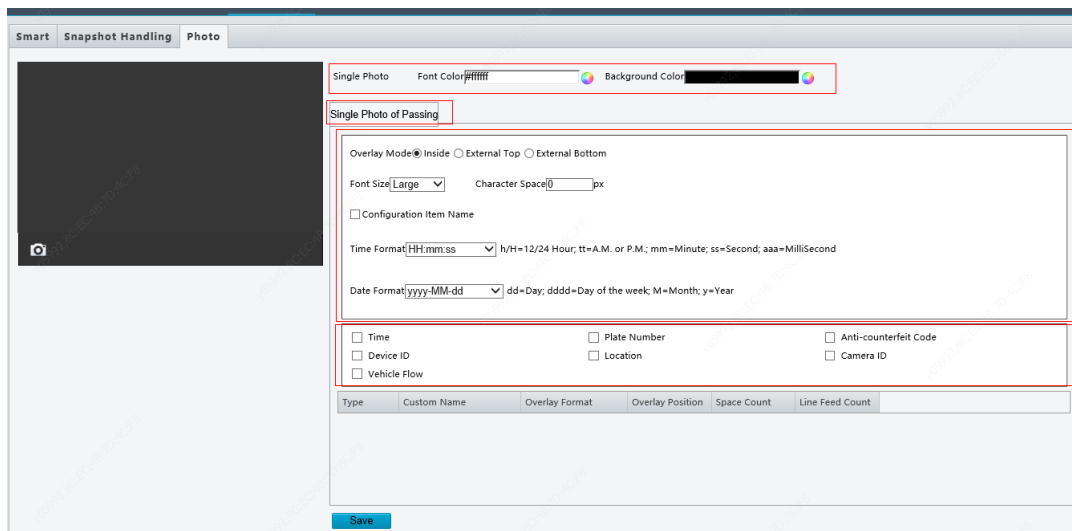

Item	Description
Single Photo	Font color: OSD text color. Background color: OSD background color.
Font Size	Set the font size.
Character Space	Set the space between OSD characters.
Time Format	Set time format.
Date Format	Set date format.
OSD Items	Select OSD items. After selecting items, you can complete detailed OSD configuration for each item by editing in the table below.

## Appendix A Glossary

---

Acronym	Description
ARP	Address Resolution Protocol
CBR	Constant Bit Rate
DNS	Domain Name Service
DDNS	Dynamic Domain Name Service
DHCP	Dynamic Host Configuration Protocol
DST	Daylight Saving Time
FTP	File Transfer Protocol
GOP	Group Of Pictures
GUI	Graphical User Interface
HTTPS	Hyper Text Transfer Protocol over SSL
IE	Internet Explorer
IMOS	IP Multimedia Operation System
IP	Internet Protocol
IPC	IP Camera
MTU	Maximum Transmission Unit
NTP	Network Time Protocol
OSD	On Screen Display
PoE	Power over Ethernet
PPPoE	Point-to-Point Protocol over Ethernet
PTZ	Pan, Tilt, Zoom
ROI	Region of Interest
SMTP	Simple Mail Transfer Protocol
SSL	Secure Socket Layer
UNP	Universal Network Passport
USB	Universal Serial Bus
VBR	Variable Bit Rate
WDR	Wide Dynamic Range



# Appendix B FAQ

---

## What to do if no message prompts me to install ActiveX when I log in on a Windows 7 PC the first time

Answer: Follow these steps to turn off UAC and then log in again:

1. Click the **Start** button, and then click **Control Panel**.
2. In the search box, type uac, and then click **Change User Account Control Settings**.
3. Move the slider to the **Never Notify** position, and then click **OK**.
4. After UAC is turned off, log in again.

## What to do if the installation of ActiveX failed

Answer: If the installation failed, add the IP address of the camera as a trusted site: open **Internet Option** in IE, click the **Security** tab, click **Trusted sites**, and then click **Sites** to add the website.

If you use Windows 7, you need to save the **setup.exe** to your PC first, right-click the file, select **Run as administrator**, and then install it according to instructions.

## What to do if live video fails when I log in for the first time

Answer: Close the firewall on your PC and then log in to the Web interface again.