



Video Intercom Bracket (PAR-P2INTJB) Quick Start Guide


***NOT IP RATED**

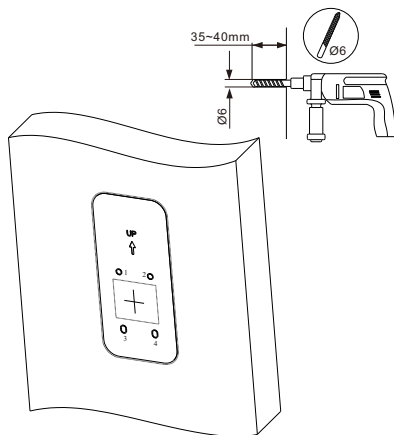


1. Put the drill template on the wall and then drill four screw holes according to the drill template.

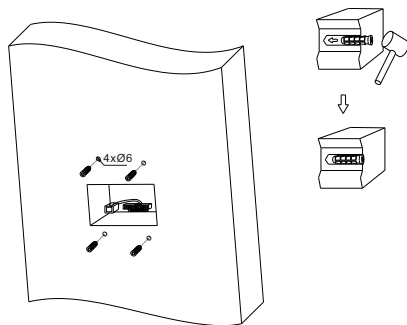


2. Insert screw anchors into the holes as shown above.

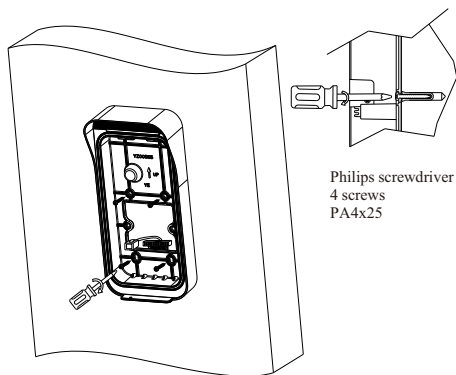


3. Pull the cable out from the wall and install the bracket onto the wall with the screws provided.

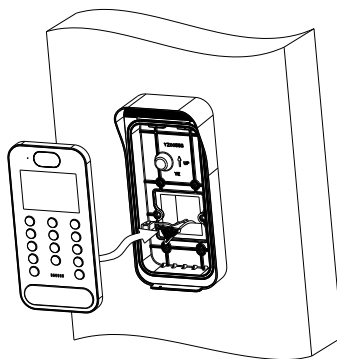

4. Connect the cables (network cable, power cable, etc.).

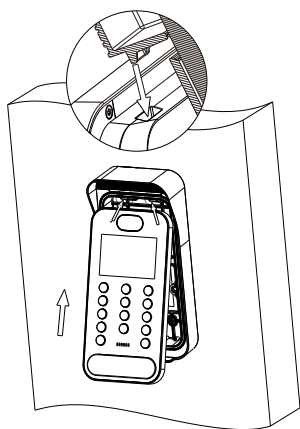

5. Install the device to the bracket until the device is locked as shown above.

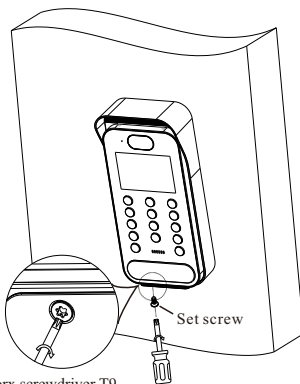

Torx screwdriver T9
KM2.5x6 1pcs

6. Secure the bracket by tightening the set screw.

Dimensions

