

# IPM-TABLETPED3SINGLE

## Stand Bracket FOR PAR-P2TEMPTABLET & SEC-TEMPTERMINALT

### Tablet Stand Assembly

#### Step 1

Secure the upright (B) to the base assembly (A) using the 1/4-20 locknuts (D) (Qty 4).

#### Step 2

Slide the insert (C) into the upright (B) assembly. Install the adjustment knob (E) when the assembly is at the desired height.

#### Step 3

The PAR tablet wall mount (H) (located inside the tablet box) is to be mounted to the pedestal plate (G) using the M3 screws (Qty 4).

SEC tablet wall mount (I) (connected to tablet base by screw) is to be mounted to the pedestal plate (G) using the 10-32 x 1/4 screw and 10-32 nut (Qty 4 each).

The top stamp and four tabs should be facing towards you if securing the PAR or SEC wall mount to the pedestal plate. The tablet **CANNOT** be directly secured to the pedestal plate.


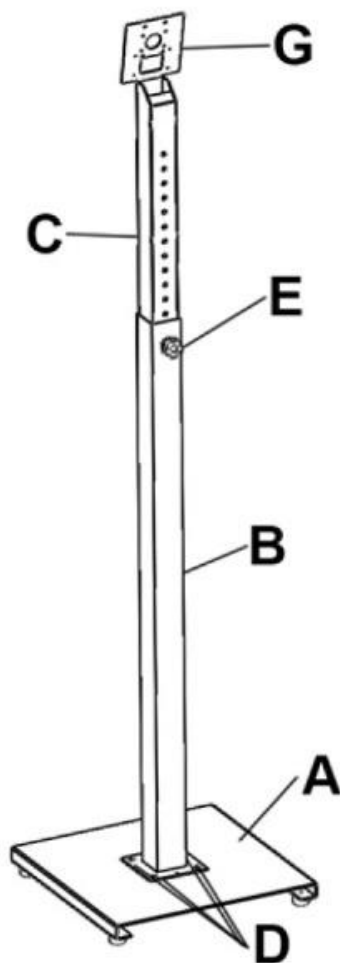


ILLUSTRATION ITEM	ITEM NAME	QTY
A	BASE ASSEMBLY	1
B	UPRIGHT	1
C	INSERT	1
D	1/4-2- LOCKNUT	4
E	ADJUSTMENT KNOB	1
F	M3 SCREW	4
G	PEDESTAL PLATE	1
H	PAR TABLET WALL MOUNT	1
I	SEC TABLET WALL MOUNT	1
J	10-32 x 1/4 SCREW	4
K	10-32 NUT	4

ITEM H  
PAR WALL MOUNT



ITEM I  
SEC WALL MOUNT

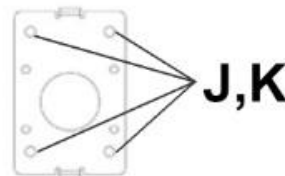

PPD8522 REV 3

#### Ordering Information

**IPM-TABLETPED3SINGLE:** Stand Bracket FOR PAR-P2TEMPTABLET & SEC-TEMPTERMINALT

Due to limited quantities & availability on this item, InVid Tech reserves the right to change the specifications & style of this product. Any changes will not affect the compatibility of the tripod with the camera and calibrator.

InVid Tech, reserves the right to make changes to improve our products at any time without notice; we are not responsible for misprints.