



Explosion-Proof Network Cameras Quick Guide

Contents

Waterproof Requirements	1
1 Packing List	3
2 Safety Instructions.....	3
2.1 Installation	3
2.2 Maintenance.....	4
2.3 Laser Safety (if applicable)	5
3 Introduction	6
4 Appearance.....	6
4.1 Dimensions	7
4.2 Cable Connection.....	7
5 Mount Your Camera	8
5.1 Check Before Installation	9
5.2 Mount the Explosion-proof Network PTZ Camera.....	9
5.2.1 Pole Mount	9
5.2.2 Wall Mount.....	11
5.3 Mount the Explosion-proof Network Bullet Camera	12
5.3.1 Model 1 (Wall Mount)	12
5.3.2 Model 2 (Pole Mount).....	14
5.3.3 Model 2 (Wall Mount)	15
5.3.4 Model 2 (Pendant Mount)	16
6 Startup	16
7 Web Login.....	16
8 FAQ.....	17
Disclaimer and Safety Warnings.....	18

Waterproof Requirements


Please waterproof cables in accordance with the following instructions. User shall assume all responsibility for device damage caused by water due to improper waterproof measures.



NOTE!

- Before you start, connect all the needed cables and cut off the copper wires for the cables that you don't use.
- Please use self-adhesive waterproof tape (supplied with some products) to protect the cables.
- Use waterproof components to protect the network cable. Waterproof the power cable separately if you don't use it. The video cable does not need waterproof treatment.


1. Use insulation tape (not included in the package) to insulate the connection part of each cable.

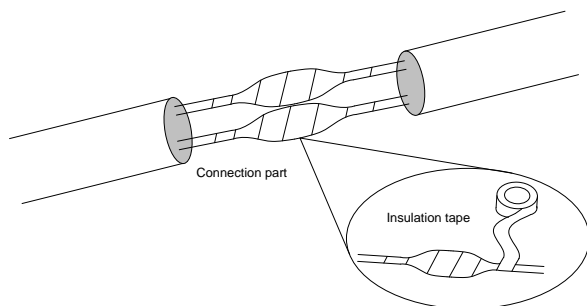

2. Waterproof the cables with self-adhesive waterproof tape.
 - (1) Fully stretch the waterproof tape at both ends.
 - (2) Wrap the connection part and the cable ends tightly with waterproof tape. Make sure the tape is fully stretched during the process.
 - (3) Tighten the tape at both ends to prevent water leakage.




Wrap the used cables separately

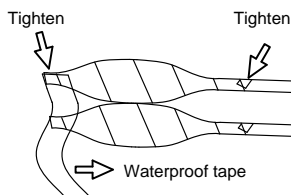

Wrap the unused cables together into a bundle


3. Install the supplied waterproof components to the network cable in sequence.

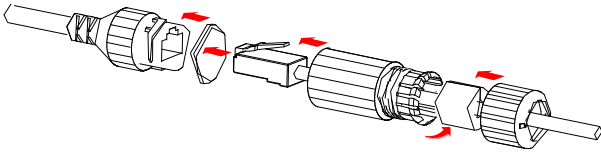

CAUTION!

You need to mount the rubber ring onto the network cable interface first.

4. If your camera has a DC cable and you will not use it, insert the plug into the interface.

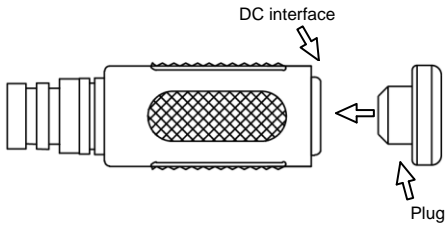

5. (Optional) After the waterproof treatment is completed, put the cables into a waterproof junction box (purchased separately).
-



CAUTION!

- The cable connector must not be exposed and must be kept away from water.
 - Restore and fasten the device after dismounting.
 - Place the power adapter in a power distribution box.
-

1 Packing List

Contact your local dealer if the package is damaged or incomplete. The package contents may vary with device model.

No.	Name	Qty	Unit
1	Camera	1	PCS
2	User manual	1	Set
3	Accessory pack	1	Set

2 Safety Instructions

Installation and removal of the unit and its accessories must be carried out by qualified personnel. Read all of the safety instructions before installation and operation.

2.1 Installation

- Please operate the device in the specified environment. Do not place the device in damp, dusty, extremely hot and cold locations, and do not expose it to high electromagnetic radiation.
- Keep the device from squeezing, vibration and moisture during transportation, storage and installation, and try to keep away from the vibration source during installation.
- All operations of the device should strictly follow the instructions.
- Make sure the length of the power cable between the power adapter and the camera is not too long, otherwise the voltage of the camera is lowered, causing the camera to work abnormally. If it is required to lengthen the power cable, lengthen the cable between the power adapter and the mains.
- Do not hold the tail cable by hand for weight bearing. Otherwise, the cable connector of the camera could be loosened.
- This device is generally installed outdoors, so it should be well protected against water, moisture, dust, thunder and lightning.
- It is recommended to use a device that can cut off the power in time at moments of crisis while connecting the power cord.
- Do not cut off the tail cable. It can cause short circuit and damage the device.
- When connecting to an external interface, use an existing connection terminal, and ensure that the cable terminal (latch or clamp) is in good condition and properly

fastened. Ensure that the cable is not tense during mounting, with a proper margin reserved to avoid poor port contact or loosening caused by shock or shake.

- If the device is installed on a wall or ceiling, make sure the device is securely installed; use the safety wire during installation to prevent the device from falling.
- During transportation, special attention is required to protect the transparent dome cover from friction, scratch and stain, etc. Do not remove the protective film from the cover until mounting is finished. Remove the protective film before powering on the device.
- Static electricity on the dome cover is common in the industry. To prevent it from attracting dust, it is recommended to wipe the dome cover surface using anti-static gloves after removing the transparent protective film.
- Keep the laser properly and place it in a secure place accessible only by authorized personnel.
- Before running the device, please check if the power supply is used properly.
- When the device is working normally, the maximum surface temperature of the enclosure does not exceed 80°C.
- Make sure that the power has been disconnected before you maintain or move the device.
- If the device does not work properly, contact your dealer for help. Do not attempt to disassemble the device yourself.
- When maintaining the device, pay attention to protecting the flameproof surface, preventing metal chips or other substances from entering the device.
- If dangers are found for safety facilities, take immediate actions to solve them and stop operations if necessary.
- When severe weather occurs, check if the safety facilities are still in good condition. Ice, frost, rain, and snow around the device should be removed.
- Take effective measures to protect the power cord from being tramped or pressed.
- Do not aim the device at the sun or any strong light source; it may cause blooming or smearing on the image and damage the sensor.
- The product may contain parts that pollute the environment, such as circuit boards, electronic components, plastic products, lubricants, etc and therefore must be disposed of properly during maintenance or at the end of its life cycle to avoid environmental pollution.
- The enclosure protection level reaches IP68.

2.2 Maintenance

- If there is dust on the front glass surface, remove the dust gently using an oil-free brush or a rubber dust blowing ball.
- If there is grease or a dust stain on the front glass surface, clean the glass surface gently from the center outward using a clean lens cleaning cloth. If the grease or

stain still exists, use lens cleaning cloth dipped with detergent and clean the glass surface gently.

- Do not use organic solvents (benzene, alcohol, etc) to clean the camera.
- Please check if the fasteners and cables are still in good condition after six months. If the device is installed in a harsh environment, please contact your local dealer to replace the rubber sealing parts after five years.
- If there is dust on the body, remove the dust using a soft dry cloth. If the dirt still exists, use a clean soft cloth dipped with neutral detergent to clean the body gently. Do not use corrosive solvents or abrasive detergent to clean the body, otherwise the surface will be damaged.
- The device can be stored for one year in an environment where there is no corrosive gas or liquid and strong vibration, the temperature is 0 to 40°C, and the relative humidity is not greater than 90%.

2.3 Laser Safety (if applicable)

- Installation and maintenance must be carried out by trained and qualified personnel.
- The camera must be mounted at least 6 meters above the ground.
- To avoid the risk of fire, the laser illuminator must be clear of obstacles within a minimum range of 30 centimeters.
- Make sure laser is disconnected from power before examination.
- Never stare into beam or view through any optical instruments. Avoid exposure to direct or scattered radiation. Be especially cautious during installation and maintenance.
- Never view lasers without protective eyewear. Some lasers emit infrared or ultraviolet, which are invisible to human eyes.
- Keep flammable or explosive objects away from laser beam. Some lasers may ignite combustible materials and thus cause fire.
- Never direct laser at a person. Do not direct laser at glass. The reflection may still cause harm to human eyes.
- Make sure the lens cleaning cloth is clean itself.



- Never look at the transmit laser while the power is on. Never look directly at the fiber ports and the fiber cable ends when they are powered on.
- Use of controls or adjustments to the performance or procedures other than those specified herein may result in hazardous laser emissions.

3 Introduction

The explosion-proof dome is equipped with explosion-proof enclosure made of stainless steel. It uses 100M full-duplex Ethernet and supports multiple communication protocols and communication rates.

It is suitable for:

- Hazardous areas with II A, II B and II C flammable gases or combustible dust mixtures.
- Zone 1, 2, 21, and 22 of ignition temperature classes T1 to T6.
- Hazardous areas with explosive mixture of flammable gas/vapor and air.



CAUTION!


- The insulation resistance value between the power inlet terminal and the device enclosure must not be less than 50 MΩ.
 - The enclosure of the power inlet terminal shall be able to withstand 50Hz, 1500V power frequency test for one minute. The enclosure of the signal cable terminal should be able to withstand 50Hz, 500V power frequency test for one minute.
 - The working voltage, working current and power consumption may vary with device models. Please refer to the labels on the power cable and power adapter.
-

4 Appearance


Device appearance may vary with models, please refer to the actual device. The figure below is only for illustrative purpose. (Unit: mm)

4.1 Dimensions

1 Explosion-proof Network PTZ Camera

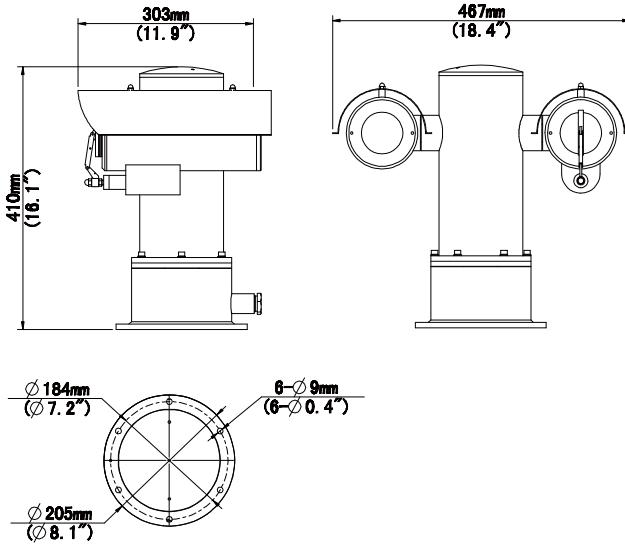


2 Explosion-proof Network Bullet Camera

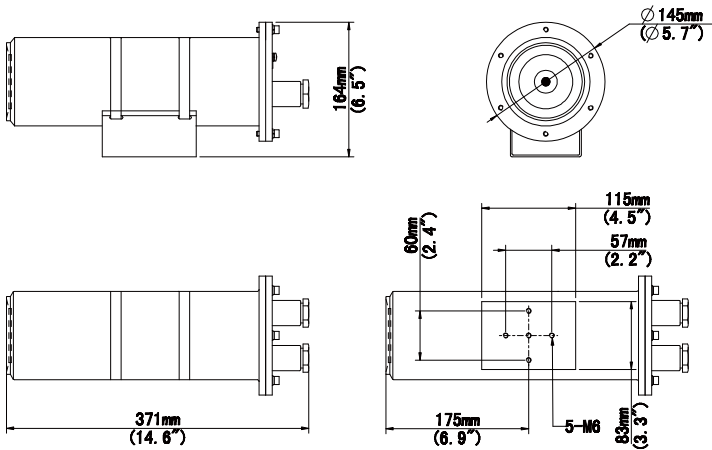

4.2 Cable Connection

Tail cables may vary with device model. The following is an example.

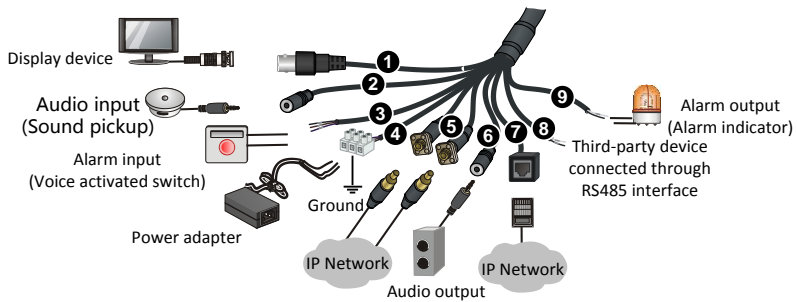

No.	Interface	Description
1	VIDEO OUT	Video output interface, outputs analog video signals.
2	AUDIO IN	Audio input interface, inputs audio signals or used for two-way audio. NOTE! Audio input and two-way audio share this interface and cannot use it simultaneously.
3	ALARM IN	Alarm input interface, inputs alarm signals.
4	Power interface	Connects the power adapter.
5	Optical interface	Adaptive SFP interface, connects optical network.
6	AUDIO OUT	Audio output interface, outputs audio signals.
7	Ethernet interface	Adaptive Ethernet interface (RJ45).
8	RS485	Serial interface, connects third-party devices.
9	ALARM OUT	Alarm output interface, outputs alarm signals.



NOTE!

Please refer to the labels on the tail cable for detailed information.

5 Mount Your Camera


The installation process of devices is similar. The following installation steps are only for illustration, please refer to the actual device.

5.1 Check Before Installation


- Make sure that the device operates in the specified environment.
- Make sure that there is enough space to install the device and its accessories.
- Make sure that the mounting position is strong enough to withstand at least four times the weight of the device and accessories.
- Make sure that there are no obstacles in the installation area that affect the camera's rotation.
- Do not disassemble or modify the explosion-proof components.
- Please use the specified power supply.
- Please familiarize yourself with the performance of this device before installation.
- Make sure no extra things are mounted on the camera.
- Both the internal and external earthing shall be connected reliably. The resistance of the grounding wire and the grounding electrode cannot be greater than 1Ω .

5.2 Mount the Explosion-proof Network PTZ Camera

5.2.1 Pole Mount

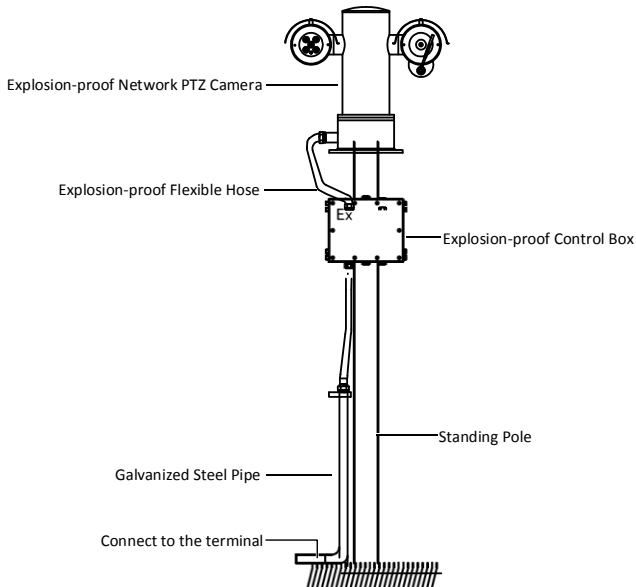

1. Fix the camera on the base with M8x30 hex socket screws.

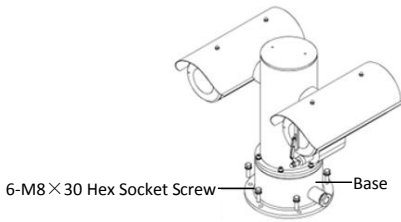

2. Choose an appropriate mounting position to fix the explosion-proof control box onto the pole.



NOTE!

It is recommended to mount the explosion-proof control box in a location that is easy to maintain the camera.


3. Mount the explosion-proof flexible hose.




NOTE!

The cable connected to the control box must be protected by an explosion-proof flexible hose. The cable connecting the junction box and the control room must be protected by a metal pipe, or you can use an armored cable.

- (1) Lead the tail cable through as shown in the figure below (the connector has been soldered to the device) and fasten each part. Repeat this operation to connect the terminal cable.




1. Connector	2. Rubber Sealing Ring
3. Metal Washer	4. Flexible Hose Connector
5. Rubber Washer	6. Flexible Hose Nut

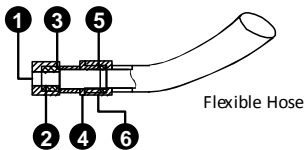


1. Connector	2. Sealing Ring
3. Metal Washer	4. Flexible Hose Connector
5. Rubber Washer	6. Flexible Hose Nut

- (2) Align the flexible hose on the device side with the threaded hole on the bracket and control box, and rotate until firmly fixed.
 - (3) Align the flexible hose on the terminal side with the threaded hole on the control box, and rotate until firmly fixed.
 - (4) Connect the cables to the control box.
 4. Mount the galvanized steel pipe.
- Align the flexible hose on the terminal side with the threaded hole on the galvanized steel pipe, and rotate until firmly fixed.
5. Connect the terminal cable to the terminal.

5.2.2 Wall Mount

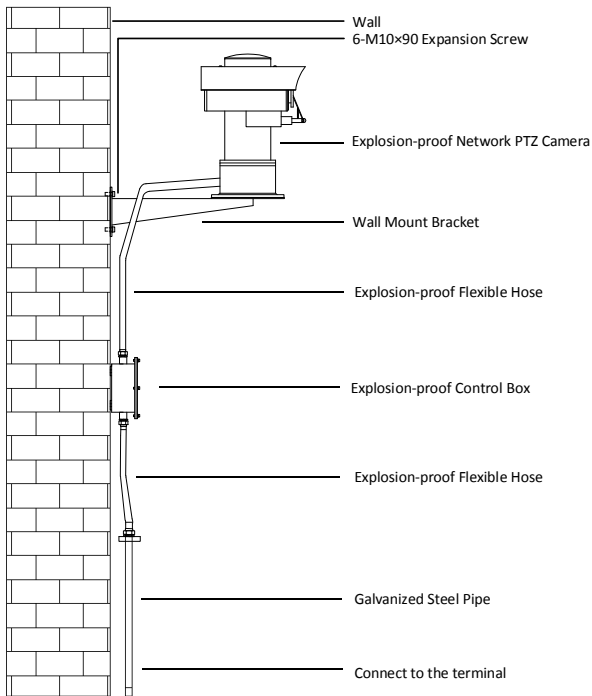


1. Fix the wall mount bracket onto the wall with M10x90 expansion screws.

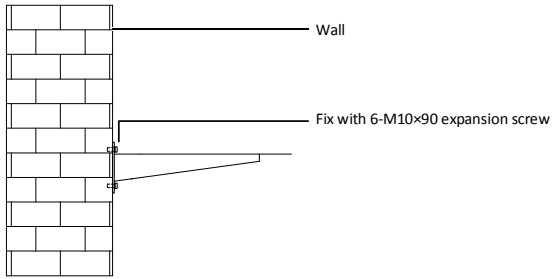


2. Fix the device on the bracket with M8x30 hex head screws.
3. Refer to steps 2 to 5 in Pole Mount to mount the explosion-proof control box, explosion-proof flexible hose and galvanized steel pipe, and connect the terminal cable to the terminal.

5.3 Mount the Explosion-proof Network Bullet Camera


5.3.1 Model 1 (Wall Mount)

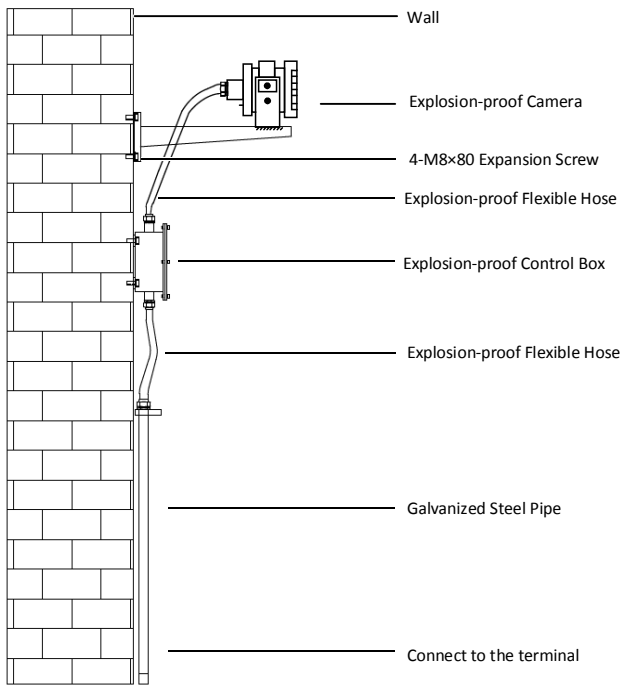


1. Fix the wall mount bracket onto the wall with M8x80 expansion screws.

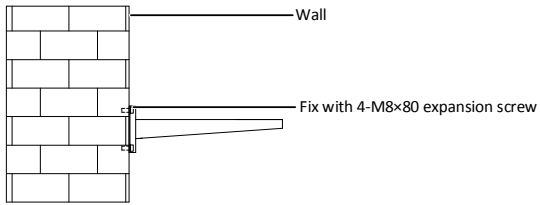

2. Fix the U-shaped bracket on the wall mount bracket with M6x16 hex socket screws.

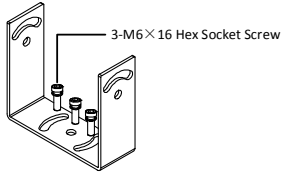


3. Fix the camera on the U-shaped bracket with M6x16 hex socket screws.

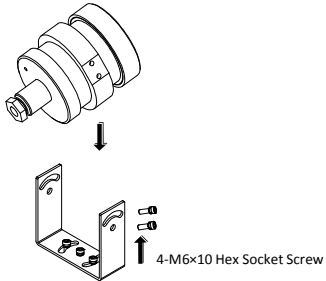


4. Refer to steps 2 to 5 in [Pole Mount](#) to mount the explosion-proof control box, explosion-proof flexible hose and galvanized steel pipe, and connect the terminal cable to the terminal.

5.3.2 Model 2 (Pole Mount)

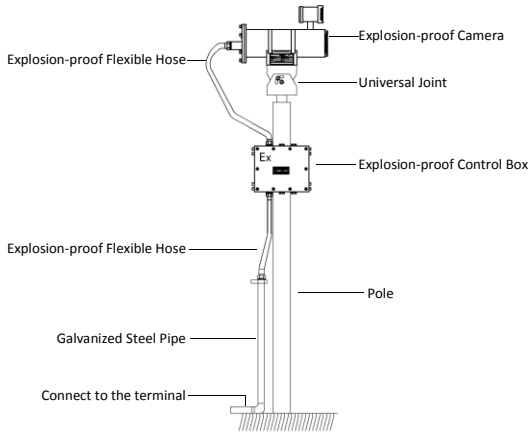


1. Fix the universal joint on the pole with M6x16 hex socket screws.
2. Fix the camera with U-shaped bracket on the universal joint with M6x16 hex socket screws.
3. Loosen the hex socket screw on the side of the universal joint to adjust the angle of the universal joint.
4. Refer to steps 2 to 5 in [Pole Mount](#) to mount the explosion-proof control box, explosion-proof flexible hose and galvanized steel pipe, and connect the terminal cable to the terminal.

5.3.3 Model 2 (Wall Mount)

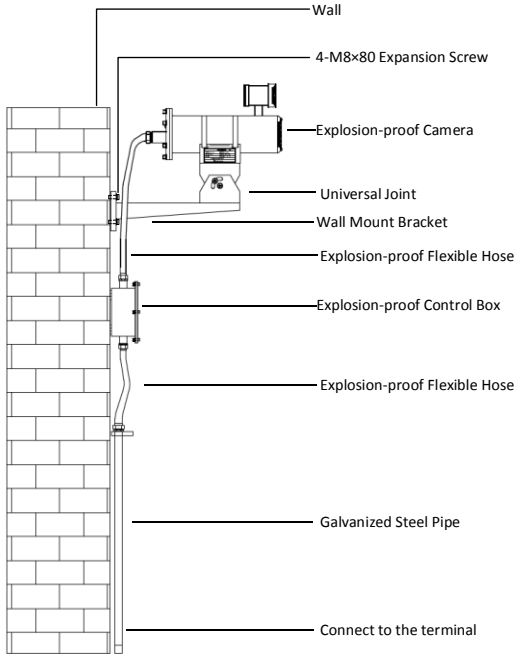

1. Fix the wall mount bracket onto the wall with M8x80 expansion screws.
2. Fix the universal joint on the wall mount bracket with M6x16 hex socket screws.
3. Fix the camera on the universal joint with M6x16 hex socket screws.
4. Loosen the hex socket screw on the side of the universal joint, adjust the angle of the universal joint.
5. Refer to steps 2 to 5 in [Pole Mount](#) to mount the explosion-proof control box, explosion-proof flexible hose and galvanized steel pipe, and connect the terminal cable to the terminal.

5.3.4 Model 2 (Pendant Mount)

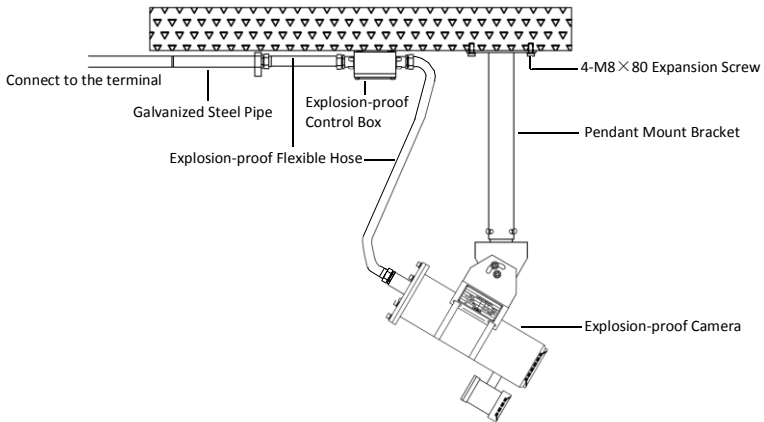

Pendant mount and wall mount are only different in installation direction. Please refer to [Model 2 \(Wall Mount\)](#) for installation steps.

6 Startup

Check that the device is installed properly, and then connect power to start up the device.

The device performs a self-test including pan, tilt and zoom when connected to power. Please wait till the test completes before you operate the device.

7 Web Login

Log in to the camera's Web interface to perform management or maintenance operations.

The default network settings are shown in the table below and may be modified as required.

1. Open your browser, input the camera's IP address in the address bar and then press **Enter** to open the login page.
2. Enter the username and password and then click Login.

Item	Defaults
Network address	IP address/subnet mask: 192.168.1.13/255.255.255.0 Gateway: 192.168.1.1 Note:

	DHCP is enabled by default. If a DHCP server is deployed in the network, an IP address may be assigned automatically, and you need to use the assigned IP address to log in.
Username	admin
Password	123456 Note: The default password is intended only for your first login. To ensure security, please change the password after your first login. You are strongly recommended to set a strong password of at least nine characters including all three elements: digits, letters and special characters.

8 FAQ

The following table lists some problems you may encounter during use. You can refer to the table to solve the problems yourself or contact your local dealer.

Problem	Possible Reason	Solution
No self-test after power on	Power cut	Check if the device is normally powered.
	Unqualified supply voltage	Check if the power supply voltage complies with the specifications on the label.
Cannot connect to camera after self-test	Network error	Check if the network connection is normal, or if the network device is powered on.
Image flickering	Poor connection of network cable	Check if the network cable is in good condition.
	Network cable is not plugged in properly	Check if the network cable is plugged in properly.
	Signal attenuation in case of long distance communication	Add a repeater.

Disclaimer and Safety Warnings

Copyright Statement

©2021 Zhejiang Uniview Technologies Co., Ltd. All rights reserved.

No part of this manual may be copied, reproduced, translated or distributed in any form by any means without prior content in writing from Zhejiang Uniview Technologies Co., Ltd (referred to as Uniview or us hereafter).

The product described in this manual may contain proprietary software owned by Uniview and its possible licensors. Unless permitted by Uniview and its licensors, no one is allowed to copy, distribute, modify, abstract, decompile, disassemble, decrypt, reverse engineer, rent, transfer, or sublicense the software in any form by any means.

Trademark Acknowledgements

 are trademarks or registered trademarks of Uniview.

All other trademarks, products, services and companies in this manual or the product described in this manual are the property of their respective owners.

Export Compliance Statement

Uniview complies with applicable export control laws and regulations worldwide, including that of the People's Republic of China and the United States, and abides by relevant regulations relating to the export, re-export and transfer of hardware, software and technology. Regarding the product described in this manual, Uniview asks you to fully understand and strictly abide by the applicable export laws and regulations worldwide.

EU Authorised Representative

UNV Technology EUROPE B.V. Room 2945,3rd Floor,Randstad 21-05 G,1314 BD,Almere,Netherlands.

Privacy Protection Reminder

Uniview complies with appropriate privacy protection laws and is committed to protecting user privacy. You may want to read our full privacy policy at our website and get to know the ways we process your personal information. Please be aware, using the product described in this manual may involve the collection of personal information such as face, fingerprint, license plate number, email, phone number, GPS. Please abide by your local laws and regulations while using the product.

About This Manual

- This manual is intended for multiple product models, and the photos, illustrations, descriptions, etc, in this manual may be different from the actual appearances, functions, features, etc, of the product.
- This manual is intended for multiple software versions, and the illustrations and descriptions in this manual may be different from the actual GUI and functions of the software.
- Despite our best efforts, technical or typographical errors may exist in this manual. Uniview cannot be held responsible for any such errors and reserves the right to change the manual without prior notice.
- Users are fully responsible for the damages and losses that arise due to improper operation.
- Uniview reserves the right to change any information in this manual without any prior notice or indication. Due to such reasons as product version upgrade or regulatory requirement of relevant regions, this manual will be periodically updated.

Disclaimer of Liability

- To the extent allowed by applicable law, in no event will Uniview be liable for any special, incidental, indirect, consequential damages, nor for any loss of profits, data, and documents.
- The product described in this manual is provided on an "as is" basis. Unless required by applicable law, this manual is only for informational purpose, and all statements, information, and recommendations in this manual are presented without warranty of any kind, expressed or implied, including, but not limited to, merchantability, satisfaction with quality, fitness for a particular purpose, and noninfringement.
- Users must assume total responsibility and all risks for connecting the product to the Internet, including, but not limited to, network attack, hacking, and virus. Uniview strongly recommends that users take all necessary measures to enhance the protection of network, device, data and personal information. Uniview disclaims any liability related thereto but will readily provide necessary security related support.
- To the extent not prohibited by applicable law, in no event will Uniview and its employees, licensors, subsidiary, affiliates be liable for results arising out of using or inability to use the product or service, including, not limited to, loss of profits and any other commercial damages or losses, loss of data, procurement of substitute goods or services; property damage, personal injury, business interruption, loss of business information, or any special, direct, indirect, incidental, consequential, pecuniary, coverage, exemplary, subsidiary losses, however caused and on any theory of liability, whether in contract, strict liability or tort (including negligence or otherwise) in any way out of the use of the product, even if Uniview has been advised of the possibility of such damages (other than as may be required by applicable law in cases involving personal injury, incidental or subsidiary damage).

- To the extent allowed by applicable law, in no event shall Uniview's total liability to you for all damages for the product described in this manual (other than as may be required by applicable law in cases involving personal injury) exceed the amount of money that you have paid for the product.

Network Security

Please take all necessary measures to enhance network security for your device.

The following are necessary measures for the network security of your device:

- **Change default password and set strong password:** You are strongly recommended to change the default password after your first login and set a strong password of at least nine characters including all three elements: digits, letters and special characters.
- **Keep firmware up to date:** It is recommended that your device is always upgraded to the latest version for the latest functions and better security. Visit Uniview's official website or contact your local dealer for the latest firmware.

The following are recommendations for enhancing network security of your device:

- **Change password regularly:** Change your device password on a regular basis and keep the password safe. Make sure only the authorized user can log in to the device.
- **Enable HTTPS/SSL:** Use SSL certificate to encrypt HTTP communications and ensure data security.
- **Enable IP address filtering:** Allow access only from the specified IP addresses.
- **Minimum port mapping:** Configure your router or firewall to open a minimum set of ports to the WAN and keep only the necessary port mappings. Never set the device as the DMZ host or configure a full cone NAT.
- **Disable the automatic login and save password features:** If multiple users have access to your computer, it is recommended that you disable these features to prevent unauthorized access.
- **Choose username and password discretely:** Avoid using the username and password of your social media, bank, email account, etc, as the username and password of your device, in case your social media, bank and email account information is leaked.
- **Restrict user permissions:** If more than one user needs access to your system, make sure each user is granted only the necessary permissions.
- **Disable UPnP:** When UPnP is enabled, the router will automatically map internal ports, and the system will automatically forward port data, which results in the risks of data leakage. Therefore, it is recommended to disable UPnP if HTTP and TCP port mapping have been enabled manually on your router.
- **SNMP:** Disable SNMP if you do not use it. If you do use it, then SNMPv3 is recommended.
- **Multicast:** Multicast is intended to transmit video to multiple devices. If you do not use this function, it is recommended you disable multicast on your network.
- **Check logs:** Check your device logs regularly to detect unauthorized access or abnormal operations.
- **Physical protection:** Keep the device in a locked room or cabinet to prevent unauthorized physical access.
- **Isolate video surveillance network:** Isolating your video surveillance network with other service networks helps prevent unauthorized access to devices in your security system from other service networks.

Learn More

You may also obtain security information under Security Response Center at Uniview's official website.

Safety Warnings

The device must be installed, serviced and maintained by a trained professional with necessary safety knowledge and skills. Before you start using the device, please read through this guide carefully and make sure all applicable requirements are met to avoid danger and loss of property.

Storage, Transportation, and Use

- Store or use the device in a proper environment that meets environmental requirements, including and not limited to, temperature, humidity, dust, corrosive gases, electromagnetic radiation, etc.
- Make sure the device is securely installed or placed on a flat surface to prevent falling.
- Unless otherwise specified, do not stack devices.
- Ensure good ventilation in the operating environment. Do not cover the vents on the device. Allow adequate space for ventilation.
- Protect the device from liquid of any kind.
- Make sure the power supply provides a stable voltage that meets the power requirements of the device. Make sure the power supply's output power exceeds the total maximum power of all the connected devices.
- Verify that the device is properly installed before connecting it to power.
- Do not remove the seal from the device body without consulting Uniview first. Do not attempt to service the product yourself. Contact a trained professional for maintenance.
- Always disconnect the device from power before attempting to move the device.
- Take proper waterproof measures in accordance with requirements before using the device outdoors.

Power Requirements

- Install and use the device in strict accordance with your local electrical safety regulations.
- Use a UL certified power supply that meets LPS requirements if an adapter is used.
- Use the recommended cordset (power cord) in accordance with the specified ratings.
- Only use the power adapter supplied with your device.
- Use a mains socket outlet with a protective earthing (grounding) connection.

- Ground your device properly if the device is intended to be grounded.

Battery Use Caution

- When battery is used, avoid:
 - Extremely high or low temperature and air pressure during use, storage and transportation.
 - Battery replacement.
- Use the battery properly. Improper use of the battery such as the following may cause risks of fire, explosion or leakage of flammable liquid or gas.
 - Replace battery with an incorrect type;
 - Dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery;
- Dispose of the used battery according to your local regulations or the battery manufacturer's instructions.

Avertissement de l'utilisation de la batterie

- Lorsque utiliser la batterie, évitez:
 - Température et pression d'air extrêmement élevées ou basses pendant l'utilisation, le stockage et le transport.
 - Remplacement de la batterie.
- Utilisez la batterie correctement. Mauvaise utilisation de la batterie comme celles mentionnées ici, peut entraîner des risques d'incendie, d'explosion ou de fuite liquide de gaz inflammables.
 - Remplacer la batterie par un type incorrect;
 - Disposer d'une batterie dans le feu ou un four chaud, écraser mécaniquement ou couper la batterie;
- Disposer la batterie utilisée conformément à vos règlements locaux ou aux instructions du fabricant de la batterie.

Regulatory Compliance

FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Visit http://en.uniview.com/Support/Download_Center/Product_Installation/Declaration/ for SDoC.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

LVD/EMC Directive



This product complies with the European Low Voltage Directive 2014/35/EU and EMC Directive 2014/30/EU.

WEEE Directive-2012/19/EU



The product this manual refers to is covered by the Waste Electrical & Electronic Equipment (WEEE) Directive and must be disposed of in a responsible manner.

Battery Directive-2013/56/EC



Battery in the product complies with the European Battery Directive 2013/56/EC. For proper recycling, return the battery to your supplier or to a designated collection point.

Better Security, Better World



www.uniview.com



globalsupport@uniview.com